



Level



Pressure



Flow



Temperature



Liquid
Analysis



Registration



Systems
Components



Services




Solutions

Operating Instructions

Levelflex M FMP40

Guided Level-Radar

HART/4...20 mA

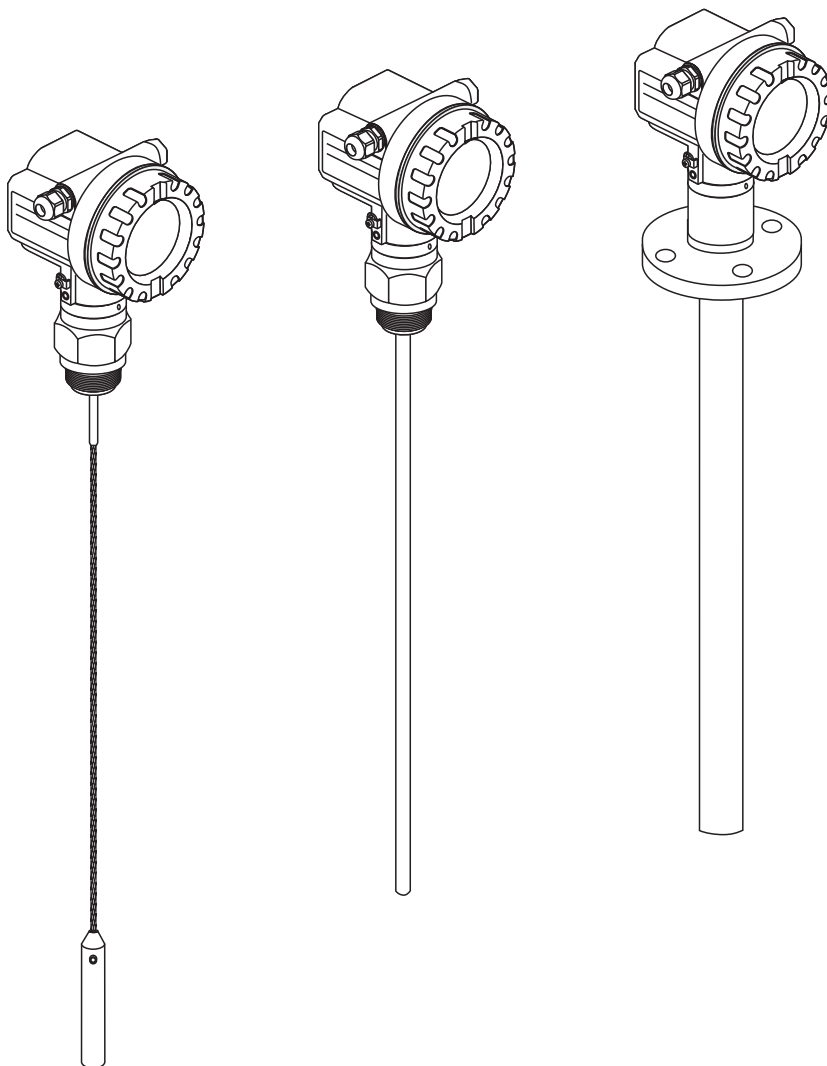

BA242F/00/en/11.06
No. 52011930

Valid as of software version
V 01.04.00 (amplifier)
V 01.04.00 (communication)

Endress+Hauser


People for Process Automation

Brief overview

For quick and simple commissioning:

Safety Instructions	→ 6
Explanation of the warning symbols You can find special instructions at the appropriate position in the chapter in question. The positions are indicated with the icons Warning ⚠, Caution ⚡ and Note 📌.	
▼	
Installation	→ 13
The steps for installing the device and installation conditions (e.g. dimensions) can be found here.	
▼	
Wiring	→ 36
The device is virtually completely wired on delivery.	
▼	
Display and Operating Elements	→ 42
An overview of the position of the display and operating elements can be found here.	
▼	
Commissioning via Display VU331	→ 55
In the "Commissioning" section, you learn how to switch on the device and check the functioning.	
▼	
Commissioning via Operating Software ToF Tool	→ 68
In the "Commissioning" section, you learn how to switch on the device and check the functioning. Additional information on the operation of the ToF Tool can be found in the operating instructions BA224F/00.	
▼	
Fault Tracking / Trouble Shooting	→ 81
If faults occur during operation, use the checklist to localise the cause. Here you can find measures you can take yourself to take remedial action against the fault.	
▼	
Index	→ 106
You can find important terms and keywords on the individual sections here. Use the keyword index to find quickly and efficiently the information you need.	

Brief operating instructions

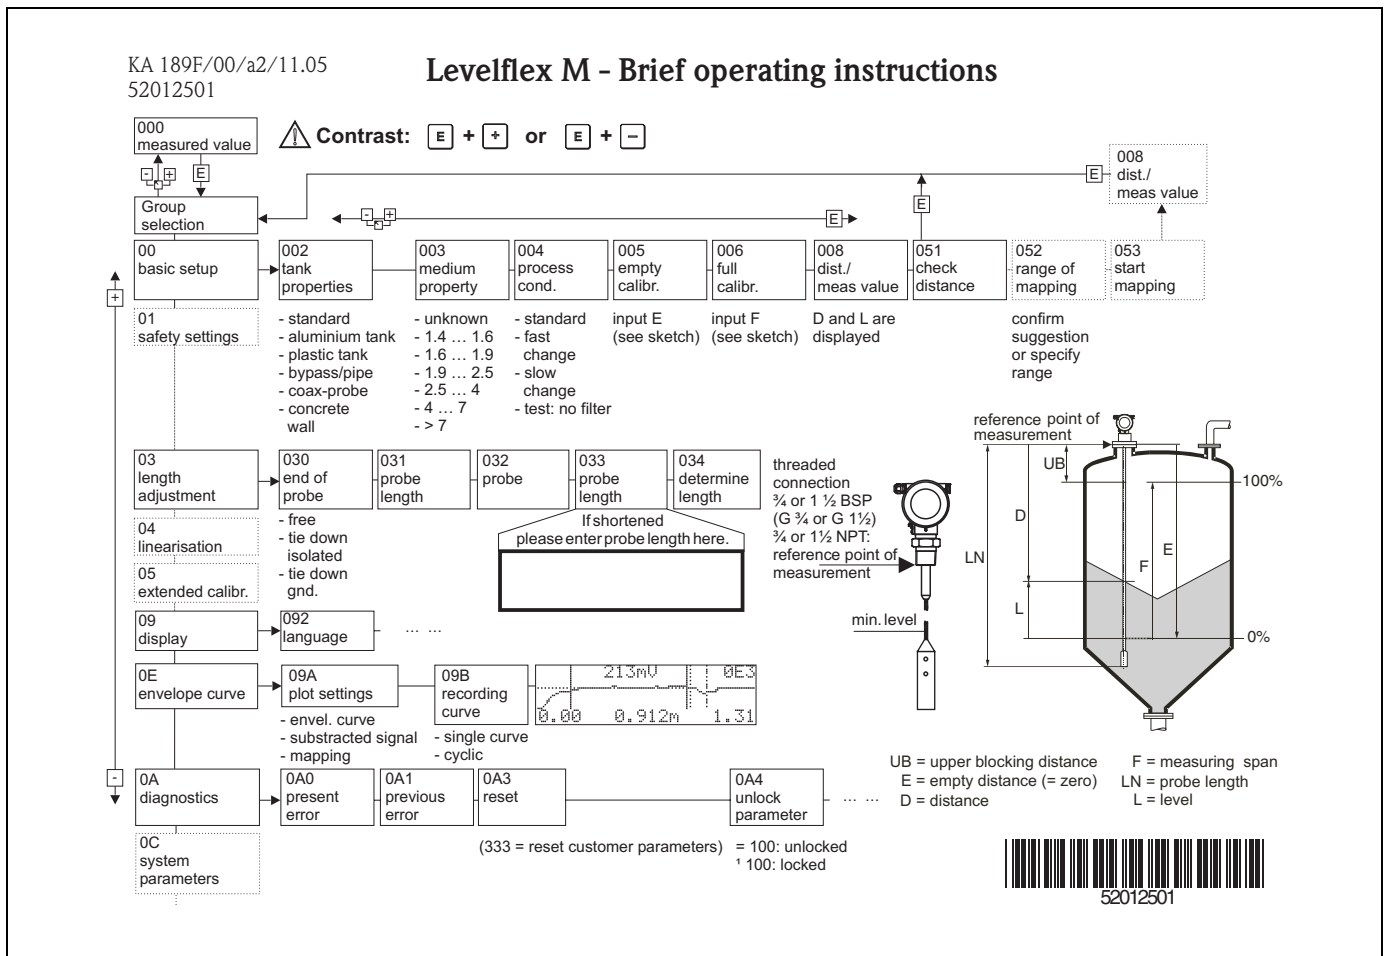

Note!

This operating manual explains the installation and initial start-up for the level transmitter measuring device. All functions that are required for a typical measuring task are taken into account here.

In addition, the Levelflex M provides many other functions that are not included in this operating manual, such as optimising the measuring point and converting the measured values.

An **overview of all device functions** can be found on → 102.

An **extensive description of all device functions** can be found in BA245F – "Description of the instrument functions" on the enclosed CD-ROM.

Operating Instructions can also be found on our homepage: www.endress.com

Table of contents

1	Safety instructions	6	9.4	Spare parts	86
1.1	Designated use	6	9.5	Return	93
1.2	Installation, commissioning and operation	6	9.6	Disposal	93
1.3	Operational safety	6	9.7	Software history	93
1.4	Notes on safety conventions and symbols	7	9.8	Contact addresses of Endress+Hauser	93
2	Identification	8	10	Technical data	94
2.1	Device designation	8	10.1	Additional technical data	94
2.2	Scope of delivery	12	11	Appendix	102
2.3	Certificates and approvals	12	11.1	Operating menu HART (Display modul), ToF Tool	102
2.4	Registered trademarks	12	11.2	Description of functions	104
3	Mounting	13	11.3	Function and system design	104
3.1	Quick installation guide	13	Index	106	
3.2	Incoming acceptance, transport, storage	14			
3.3	Installation conditions	15			
3.4	Installation	17			
3.5	Post-installation check	35			
4	Wiring	36			
4.1	Quick wiring guide	36			
4.2	Connecting the measuring unit	38			
4.3	Recommended connection	41			
4.4	Degree of protection	41			
4.5	Post-connection check	41			
5	Operation	42			
5.1	Quick operation guide	42			
5.2	Display and operating elements	44			
5.3	Local operation	46			
5.4	Display and acknowledging error messages	49			
5.5	HART communication	49			
6	Commissioning	52			
6.1	Function check	52			
6.2	Switching on the measuring device	52			
6.3	Basic Setup	53			
6.4	Basic Setup with the VU331	55			
6.5	Blocking distance	63			
6.6	Envelope curve with VU331	65			
6.7	Function "envelope curve display" (OE3)	66			
6.8	Basic Setup with the ToF Tool	68			
7	Maintenance	74			
8	Accessories	75			
9	Trouble-shooting	81			
9.1	Trouble-shooting instructions	81			
9.2	System error messages	82			
9.3	Application errors	84			

1 Safety instructions

1.1 Designated use

The Levelflex M FMP40 is a compact level transmitter for the continuous measurement of solids and liquids, measuring principle: Guided Level Radar / TDR: **T**ime **D**omain **R**eflectometry.

1.2 Installation, commissioning and operation

The Levelflex M has been designed to operate safely in accordance with current technical, safety and EU standards. If installed incorrectly or used for applications for which it is not intended, however, it is possible that application-related dangers may arise, e.g. product overflow due to incorrect installation or calibration. For this reason, the instrument must be installed, connected, operated and maintained according to the instructions in this manual: personnel must be authorised and suitably qualified. The manual must have been read and understood, and the instructions followed. Modifications and repairs to the device are permissible only when they are expressly approved in the manual.

1.3 Operational safety













Hazardous areas

Measuring systems for use in hazardous environments are accompanied by separate "Ex documentation", which is an *integral part* of this Operating Manual. Strict compliance with the installation instructions and ratings as stated in this supplementary documentation is mandatory.

- Ensure that all personnel are suitably qualified.
- Observe the specifications in the certificate as well as national and local regulations.

1.4 Notes on safety conventions and symbols

In order to highlight safety-relevant or alternative operating procedures in the manual, the following conventions have been used, each indicated by a corresponding symbol in the margin.

Safety conventions	
	<p>Warning! A warning highlights actions or procedures which, if not performed correctly, will lead to personal injury, a safety hazard or destruction of the instrument</p>
	<p>Caution! Caution highlights actions or procedures which, if not performed correctly, may lead to personal injury or incorrect functioning of the instrument</p>
	<p>Note! A note highlights actions or procedures which, if not performed correctly, may indirectly affect operation or may lead to an instrument response which is not planned</p>
Explosion protection	
	<p>Device certified for use in explosion hazardous area If the device has this symbol embossed on its name plate it can be installed in an explosion hazardous area</p>
	<p>Explosion hazardous area Symbol used in drawings to indicate explosion hazardous areas. Devices located in and wiring entering areas with the designation “explosion hazardous areas” must conform with the stated type of protection.</p>
	<p>Safe area (non-explosion hazardous area) Symbol used in drawings to indicate, if necessary, non-explosion hazardous areas. Devices located in safe areas still require a certificate if their outputs run into explosion hazardous areas</p>
Electrical symbols	
	<p>Direct voltage A terminal to which or from which a direct current or voltage may be applied or supplied</p>
	<p>Alternating voltage A terminal to which or from which an alternating (sine-wave) current or voltage may be applied or supplied</p>
	<p>Grounded terminal A grounded terminal, which as far as the operator is concerned, is already grounded by means of an earth grounding system</p>
	<p>Protective grounding (earth) terminal A terminal which must be connected to earth ground prior to making any other connection to the equipment</p>
	<p>Equipotential connection (earth bonding) A connection made to the plant grounding system which may be of type e.g. neutral star or equipotential line according to national or company practice</p>
	<p>Temperature resistance of the connection cables States, that the connection cables must be resistant to a temperature of at least 85 °C.</p>

2 Identification

2.1 Device designation

2.1.1 Nameplate

The following technical data are given on the instrument nameplate:

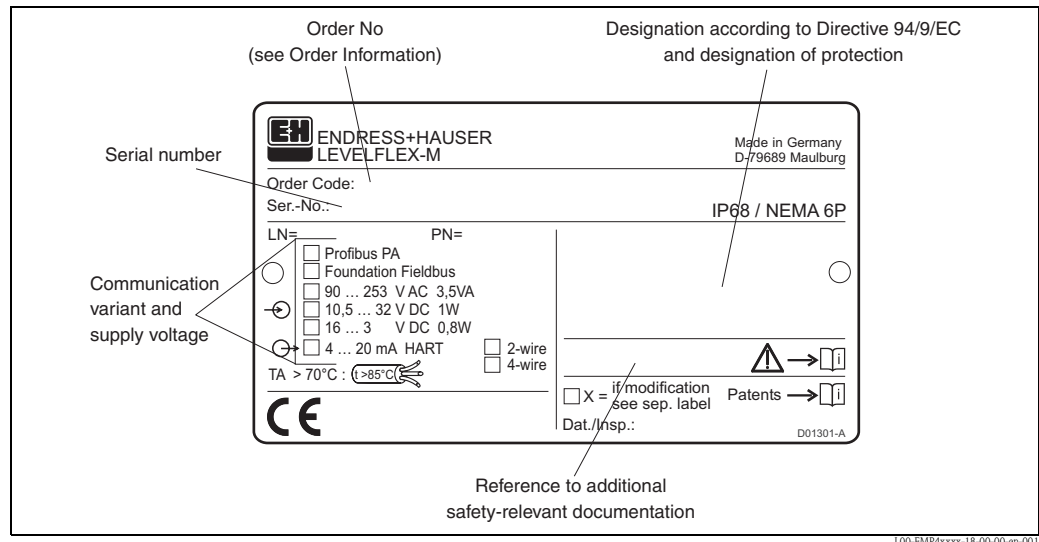


Fig. 1: Information on the nameplate of the Levelflex M FMP40 (example)

2.1.2 Ordering structure

This overview does not mark options which are mutually exclusive.

Ordering structure Levelflex M FMP40

10	Approval:
	A Non-hazardous area
	F Non-hazardous area, WHG
	1 ATEX II 1/2G EEx ia IIC T6/IECEx Zone 0/1
	2 ATEX II 1/2D, Alu blind cover
	3 ATEX II 2G EEx em (ia) IIC T6/IECEx Zone1
	4 ATEX II 1/3D
	5 ATEX II 1/2G EEx ia IIC T6, ATEX II 1/3D
	6 ATEX II 1/2G EEx ia IIC T6, WHG
	7 ATEX II 1/2G EEx d (ia) IIC T6
	8 ATEX II 1/2G EEx ia IIC T6, ATEX II 1/3D, WHG
	G ATEX II 3G EEx nA II T6
	M FM DIP Cl.II Div.1 Gr.E-G N.I.
	S FM IS Cl.I,II,III Div.1 Gr.A-G N.I.
	T FM XP Cl.I,II,III Div.1 Gr.A-G
	N CSA General Purpose
	P CSA DIP Cl.II Div.1 Gr.G + coal dust, N.I.
	U CSA IS Cl.I,II,III Div.1 Gr.A-D,G + coal dust, N.I.
	V CSA XP Cl.I,II,III Div.1 Gr.A-D,G + coal dust, N.I.
	K *TIIS Ex ia IIC T4
	L TIIS Ex d (ia) IIC T5
	D AUS Ex DIP A20/A21
	Y Special version
FMP40-	Product designation (part 1)

Ordering structure Levelflex M FMP40 (continued)

20	Probe:											
	A	Rope 4mm / 1/6", mainly liquids										
	B	Rope 6mm / 1/4", solid										
	H	Rope 6mm / 1/4", PA > steel, solid, T _{max} = 212 °F										
	P	Rod 6mm, liquids										
	1	Rod 12mm, liquids										
	K	Rod 16mm, mainly liquids										
	L	Coax, liquids										
	Y	Special version										
30	Probe length:											
	A mm, rope 4mm, 316										
	B mm, rope 6mm, 316										
	C inch rope 1/6", 316										
	D inch, rope 1/4", 316										
	E mm, rope 6mm, PA > Stahl										
	F inch, rope 1/4", PA > Stahl										
	K mm, rod 16mm, 316L										
	L mm, coax, 316L										
	M inch, rod 16mm, 316L										
	N inch, coax, 316L										
	P mm, rod 6mm, 316L										
	R inch, rod 6mm, 316L										
	1 mm rod 12mm, AlloyC22										
	2 mm coax, AlloyC22										
	3 inch, rod 12mm, AlloyC22										
	4 inch, coax, AlloyC22										
	Y	Special version										
40	O-ring Material; Temperature:											
	2	Viton; -30...150°C/-22...302°F										
	3	EPDM; -40...120°C/-40...248°F										
	4	Kalrez; -5...150°C/23...302°F										
	9	Special version										
FMP40-												Product designation (part 2)

Ordering structure Levelflex M FMP40 (continued)

50					Process Connection:					
					ACJ	1-1/2" 150lbs RF, 316/316L flange ASME B16.5				
					ACM	1-1/2" 150lbs, AlloyC22 >316/316L flange ASME B16.5				
					ADJ	1-1/2" 300lbs RF, 316/316L flange ASME B16.5				
					ADM	1-1/2" 300lbs, AlloyC22 >316/316L flange ASME B16.5				
					AEJ	2" 150lbs RF, 316/316L flange ASME B16.5				
					AEM	2" 150lbs, AlloyC22 >316/316L flange ASME B16.5				
					AFJ	2" 300lbs RF, 316/316L flange ASME B16.5				
					AFM	2" 300lbs, AlloyC22 >316/316L flange ASME B16.5				
					ALJ	3" 150lbs RF, 316/316L flange ASME B16.5				
					ALM	3" 150lbs, AlloyC22 >316/316L flange ASME B16.5				
					AMJ	3" 300lbs RF, 316/316L flange ASME B16.5				
					AMM	3" 300lbs, AlloyC22 >316/316L flange ASME B16.5				
					APJ	4" 150lbs RF, 316/316L flange ASME B16.5				
					APM	4" 150lbs, AlloyC22 >316/316L flange ASME B16.5				
					AQJ	4" 300lbs RF, 316/316L flange ASME B16.5				
					AQM	4" 300lbs, AlloyC22 >316/316L flange ASME B16.5				
					AWJ	6" 150lbs RF, 316/316L flange ASME B16.5				
					AWM	6" 150lbs, AlloyC22 >316/316L flange ASME B16.5				
					A3J	8" 150lbs RF, 316/316L flange ASME B16.5				
					CFJ	DN40 PN25/40 B1, 316L flange EN1092-1 (DIN2527 C)				
					CFM	DN40 PN25/40, AlloyC22 >316L flange EN1092-1 (DIN2527)				
					CGJ	DN50 PN25/40 B1, 316L flange EN1092-1 (DIN2527 C)				
					CGM	DN50 PN25/40, AlloyC22 >316L flange EN1092-1 (DIN2527)				
					CMJ	DN80 PN10/16 B1, 316L flange EN1092-1 (DIN2527 C)				
					CMM	DN80 PN10/16, AlloyC22 >316L flange EN1092-1 (DIN2527)				
					CSJ	DN80 PN25/40 B1, 316L flange EN1092-1 (DIN2527 C)				
					CSM	DN80 PN25/40, AlloyC22 >316L flange EN1092-1 (DIN2527)				
					CQJ	DN100 PN10/16 B1, 316L flange EN1092-1 (DIN2527 C)				
					CQM	DN100 PN10/16, AlloyC22 >316L flange EN1092-1 (DIN2527)				
					CTJ	DN100 PN25/40 B1, 316L flange EN1092-1 (DIN2527 C)				
					CTM	DN100 PN25/40, AlloyC22 >316L flange EN1092-1 (DIN2527)				
					CWJ	DN150 PN10/16 B1, 316L flange EN1092-1 (DIN2527 C)				
					CWM	DN150 PN10/16, AlloyC22 >316L flange EN1092-1 (DIN2527)				
					CXJ	DN200 PN16 B1, 316L flange EN1092-1 (DIN2527 C)				
					CRJ	Thread ISO228 G3/4, 316L				
					GRJ	Thread ISO228 G1-1/2, 316L				
					GRM	Thread ISO228 G1-1/2, AlloyC22				
					CNJ	Thread ANSI NPT3/4, 316L				
					GNJ	Thread ANSI NPT1-1/2, 316L				
					GNM	Thread ANSI NPT1-1/2, AlloyC22				
					KDJ	10K 40A RF, 316L flange JIS B2220				
					KDM	10K 40A, AlloyC22 >316L flange JIS B2220				
					KEJ	10K 50A RF, 316L flange JIS B2220				
					KEM	10K 50A, AlloyC22 >316L flange JIS B2220				
					KLJ	10K 80A RF, 316L flange JIS B2220				
					KLM	10K 80A, AlloyC22 >316L flange JIS B2220				
					KPJ	10K 100A RF, 316L flange JIS B2220				
					KPM	10K 100A, AlloyC22 >316L flange JIS B2220				
					YY9	Special version				
60					Power Supply; Output:					
					B	2-wire; 4-20mA HART				
					D	2-wire; PROFIBUS PA				
					F	2-wire; FOUNDATION Fieldbus				
					G	4-wire 90-250VAC; 4-20mA HART				
					H	4-wire 10.5-32VDC; 4-20mA HART				
					Y	Special version				
FMP40-										Product designation (part 3)

Ordering structure Levelflex M FMP40 (continued)

70										Operation:
										1 W/o display, via communication 2 4-line display VU331, Envelope curve display on site 3 Prepared for FHX40, Remote display (Accessory) 9 Special version
80										Type of Probe:
										1 Compact, basic version 2 Temp. separator, 400mm 3 Remote, cable 3m, top entry 4 Remote, cable 3m, side entry 9 Special version
90										Housing; Cable Entry:
										A F12 Alu, coated IP68; gland M20 B F12 Alu, coated IP68; thread G1/2 C F12 Alu, coated IP68; thread NPT1/2 D F12 Alu, coated IP68; plug M12 E F12 Alu, coated IP68; plug 7/8" G T12 Alu, coated IP68; gland M20 H T12 Alu, coated IP68; thread G1/2 J T12 Alu, coated IP68; thread NPT1/2 K T12 Alu, coated IP68; plug M12 L T12 Alu, coated IP68; plug 7/8" M T12 Alu, coated IP68; gland M20 + OVP OVP = overvoltage protection N T12 Alu, coated IP68; thread G1/2 + OVP OVP = overvoltage protection P T12 Alu, coated IP68; thread NPT1/2+OVP OVP = overvoltage protection Q T12 Alu, coated IP68; plug M12 + OVP OVP = overvoltage protection R T12 Alu, coated IP68; plug 7/8" + OVP OVP = overvoltage protection 1 F23 316L IP68; gland M20 2 F23 316L IP68; thread G1/2 3 F23 316L IP68; thread NPT1/2 4 F23 316L IP66; plug M12 5 F23 316L IP68; plug 7/8" 9 Special version
100										Additional Option:
										A Basic version B EN10204-3.1 material, rod/coax, (316L wetted parts) inspection certificate C EN10204-3.1 material, rope, (316L wetted parts) inspection certificate N EN10204-3.1 material, NACE MR0175 (316L wetted parts) inspection certificate S GL/ABS marine certificate Y Special version
FMP40-										complete product designation

Please enter probe length in mm or inch / 0.1 inch

mm

inch / 0.1 inch

probe length LN → 16

2.2 Scope of delivery



Caution!

It is essential to follow the instructions concerning the unpacking, transport and storage of measuring instruments given in the chapter "Incoming acceptance, transport, storage" on → 14!

The scope of delivery consists of:

- Assembled instrument
- 2 ToF Tool - FieldTool® Package CD-ROMs
 - CD 1: ToF Tool - FieldTool® Program
Program including Device Descriptions (device drivers) for all Endress+Hauser devices which are operable using ToF Tool
 - CD 2: ToF Tool - FieldTool® Documentation
Documentation for all Endress+Hauser devices which are operable using ToF Tool)
- Accessories (→ Chap. 8).

Accompanying documentation:

- Short manual (basic setup/troubleshooting): housed in the instrument
- Operating manual (this manual)
- Approval documentation: if this is not included in the operating manual.



Note!

The operating manual BA245F - "Description of Instrument functions" you can be found on the enclosed CD-ROM.

2.3 Certificates and approvals

CE mark, declaration of conformity

The device is designed to meet state-of-the-art safety requirements, has been tested and left the factory in a condition in which it is safe to operate. The device complies with the applicable standards and regulations as listed in the EC declaration of conformity and thus complies with the statutory requirements of the EG directives. Endress+Hauser confirms the successful testing of the device by affixing to it the CE mark.

2.4 Registered trademarks

KALREZ®, VITON®, TEFLON®

Registered trademark of the company E.I. Du Pont de Nemours & Co., Wilmington, USA

TRI-CLAMP®

Registered trademark of the company Ladish & Co., Inc., Kenosha, USA

HART®

Registered trademark of HART Communication Foundation, Austin, USA

ToF®

Registered trademark of the company Endress+Hauser GmbH+Co. KG, Maulburg, Germany


PulseMaster®

Registered trademark of the company Endress+Hauser GmbH+Co. KG, Maulburg, Germany


3 Mounting

3.1 Quick installation guide

F12/F23 or T12 housing

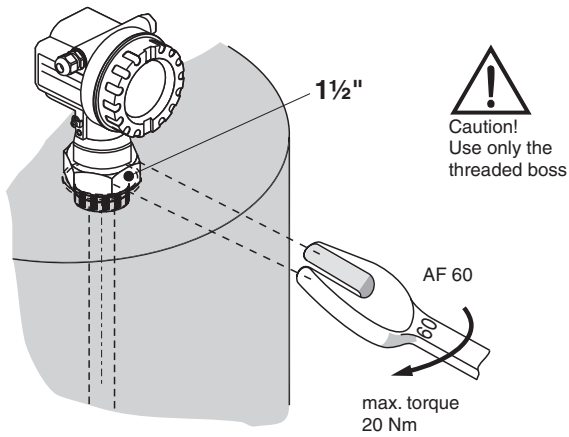


F12/F23 or T12 housing

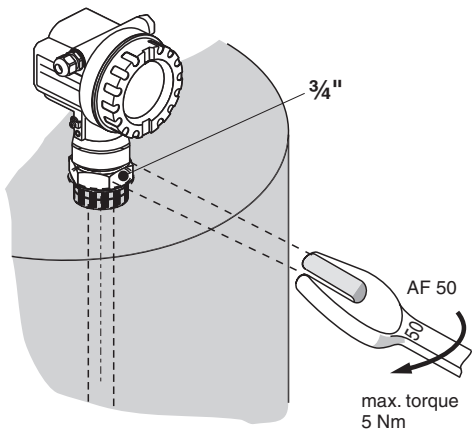


Turn housing

The housing can be turned 350° in order to simplify access to the display and the terminal compartment

F12/F23 housing

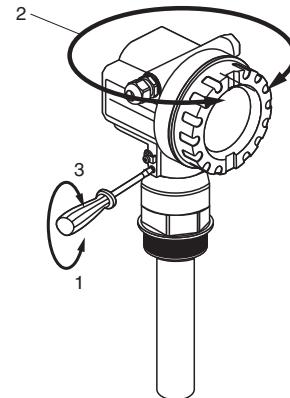

T12 housing

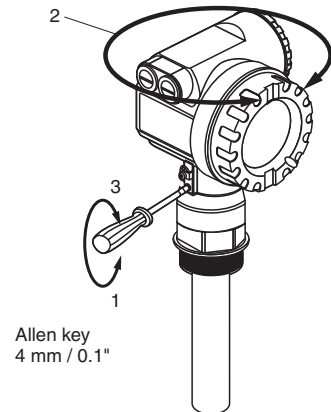

Allen key
4 mm / 0.1"

3.2 Incoming acceptance, transport, storage

3.2.1 Incoming acceptance

Check the packing and contents for any signs of damage.

Check the shipment, make sure nothing is missing and that the scope of supply matches your order.

3.2.2 Transport



Caution!

Follow the safety instructions and transport conditions for instruments of more than 18 kg.

Do not lift the measuring instrument by its probe rod in order to transport it.

3.2.3 Storage

Pack the measuring instrument so that is protected against impacts for storage and transport. The original packing material provides the optimum protection for this.


The permissible storage temperature is $-40\text{ °C} \dots +80\text{ °C}$.

3.3 Installation conditions


3.3.1 Dimensions

Housing dimensions


Dimensions for the process connection and the probe type → 16.

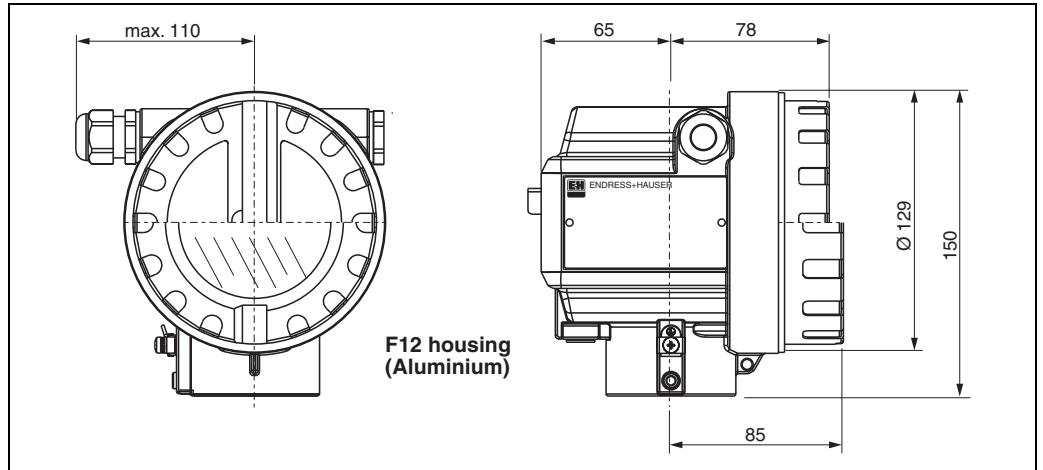

L00-F12xxxx-06-00-00-en-001

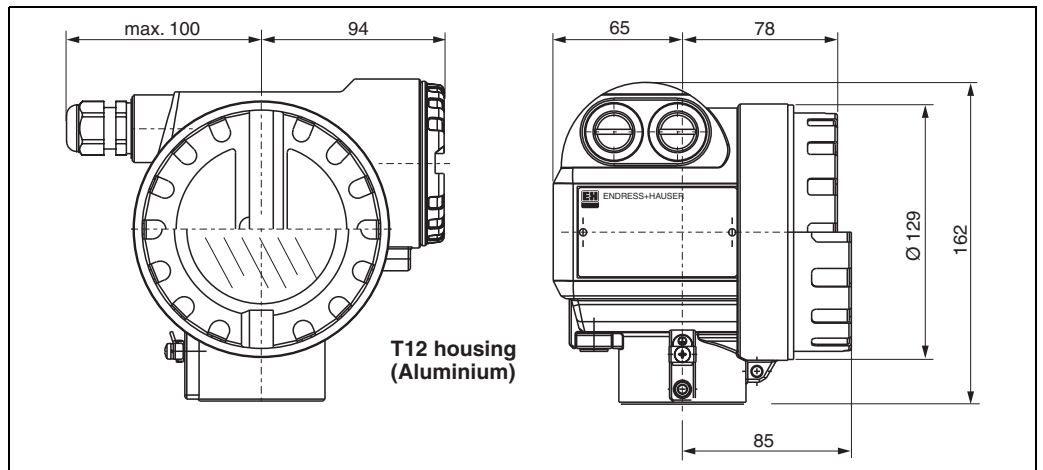

L00-T12xxxx-06-00-00-en-001

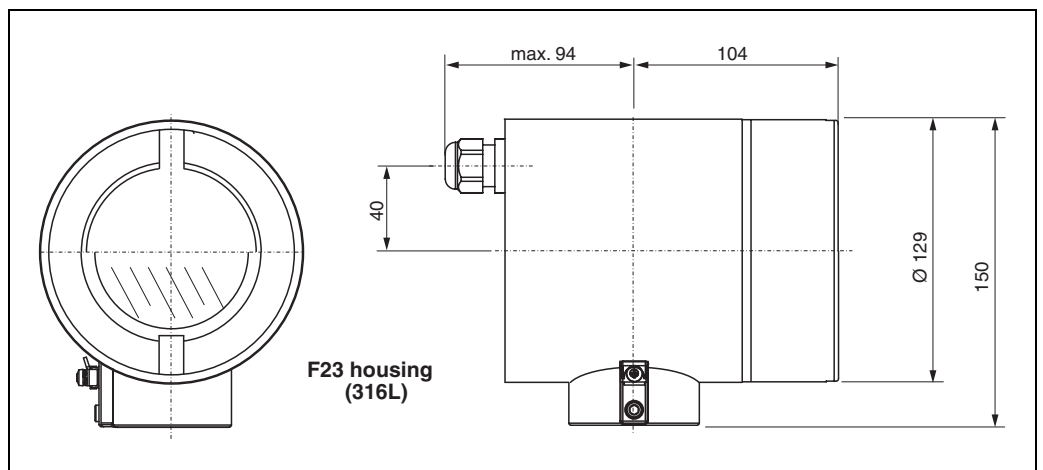

L00-F23xxxx-06-00-00-en-001

Levelflex M FMP40 - process connection, probe type

Housing dimensions → 15

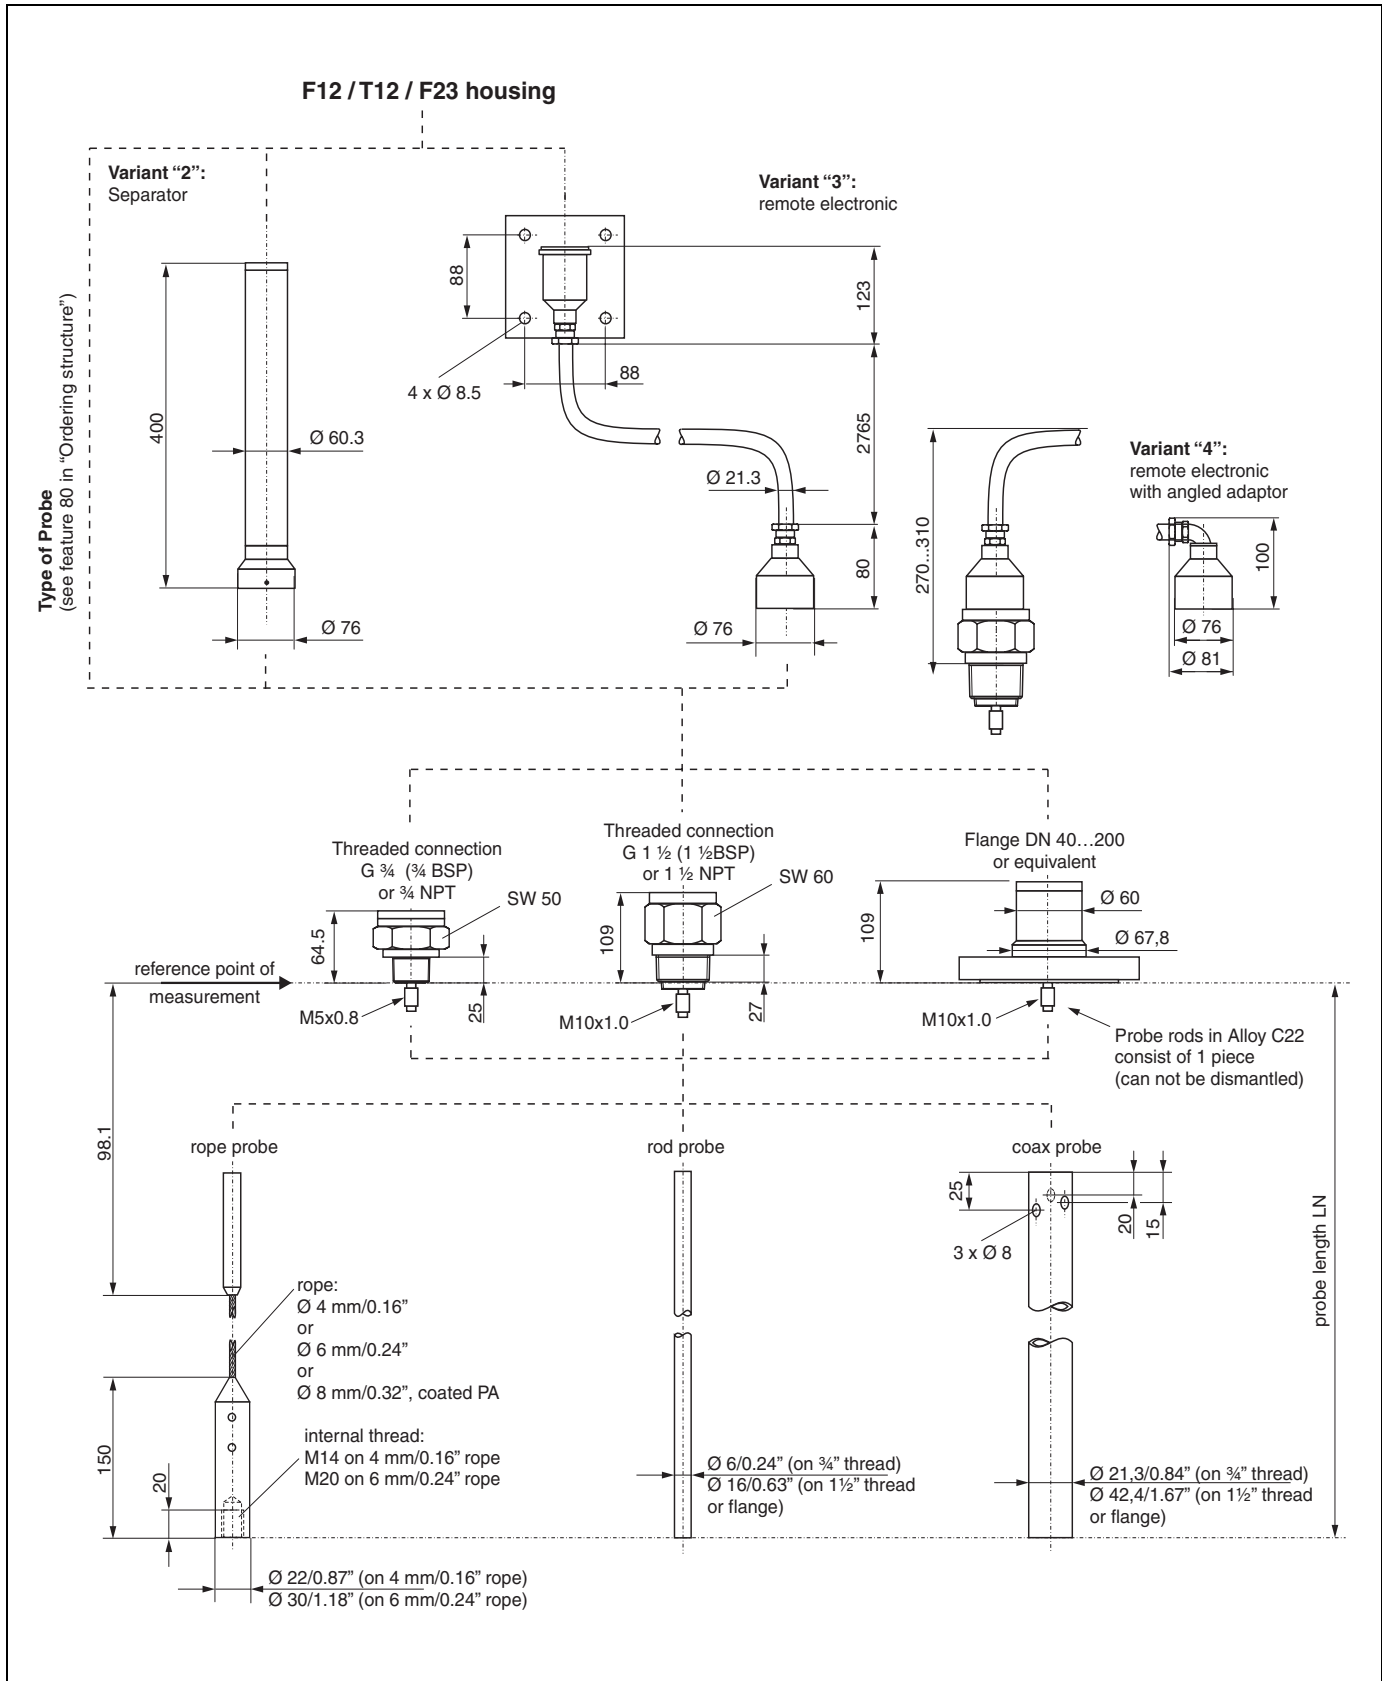


Fig. 2: Dimensions Levelflex M FMP40

3.4 Installation

3.4.1 Mounting kit

In addition to the tool needed for flange mounting, you will require the following tool:

- For the mounting of threaded connection: 60 mm Open-end spanner for 1½", 50 mm Open-end spanner for ¾".
- 4 mm Allen wrench for turning the housing.

3.4.2 Shortening probes

Rod probe

The shortening is necessary if the distance to the container floor or outlet cone is less than 50 mm. The rods of a rod probe are shortened by sawing or separating at the bottom end.


Rope probes

The shortening is necessary if the distance to the container floor or outlet cone is less than 150 mm.

- Remove ballast weight:
 - The weight is fixed to the probe rope with 3 Allen setscrews (M4, Allen key AF3). The screws are secured with Loctite. This may first have to be made plastic with a hot air apparatus.
- Remove released rope from the weight
- Measure off new rope length
- Wrap adhesive tape around the rope at the point to be shortened to prevent it from fanning out.
- Saw off the rope at a right angle or cut it off with a bolt cutter.
- Insert the rope completely into the weight,
 - thin rope (4 mm) 60 mm deep,
 - thick rope(6 mm) 80 mm deep

The weight is then refixed to the rope:

- Reapply screw locking fluid (we recommend Loctite type 243) to the setscrews and screw into place.
- When doing so, observe the following torques:
 - For 6 mm rope: 15 Nm
 - For 4 mm rope: 5 Nm

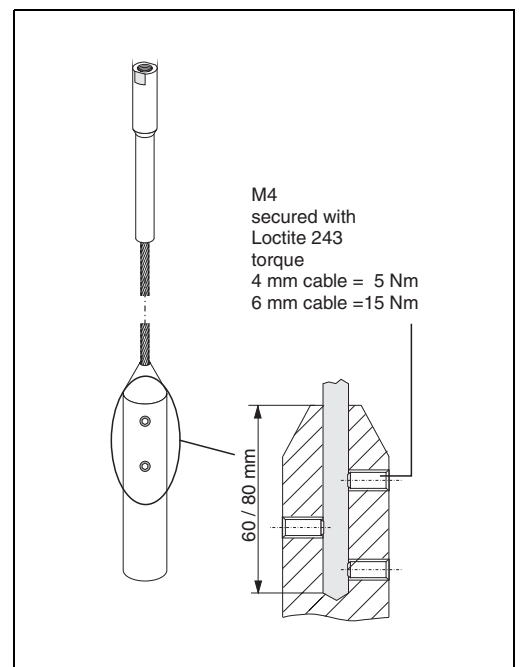

L00-FMP4xxxx-17-00-00-en-044

Coax probes

The shortening is necessary if the distance to the container floor or outlet cone is less than 10 mm. Coax probes can be shortened max. 80 mm from the end. They have centering units inside which fix the rod centrally in the pipe. The centerings are held with borders on the rod. Shortening is possible up to approx. 10 mm below the centering.

3.4.3 Mounting probes in an empty silo



Caution!

If there is a risk of electrostatic discharge from the product, then both processconnection and rope must be earthed before the probe is lowered into the silo.


Levelflex can be screwed into a threaded socket or flange. Proceed as follows:

Insert probe

- Uncoil rope and lower it slowly and carefully into the silo.
- Do not kink the rope
- Avoid any backlash, since this might damage the probe or the silo fittings.

Note!


- Flanges: bolt the flange in position before inserting the cable into the silo.
- For flange mounting: if a seal is used, be sure to use unpainted metal bolts to ensure good electrical contact between probe flange and process flange.

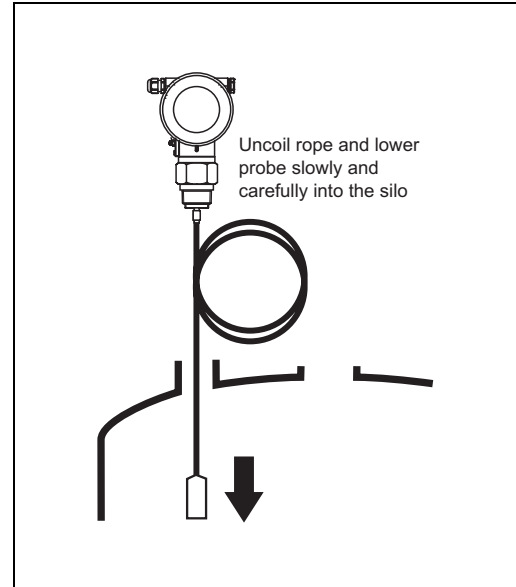

L00-FMP4xxxx-17-00-00-en-056

Screw down

- Screw the Levelflex into the process connection or to flange.
- Turn with the hexagonal nut only: torque 10...20 Nm.
- Levelflex functions in metal, concrete and plastic silos. When installing in metal silos, take care to ensure good metallic contact between the process connection and silo.

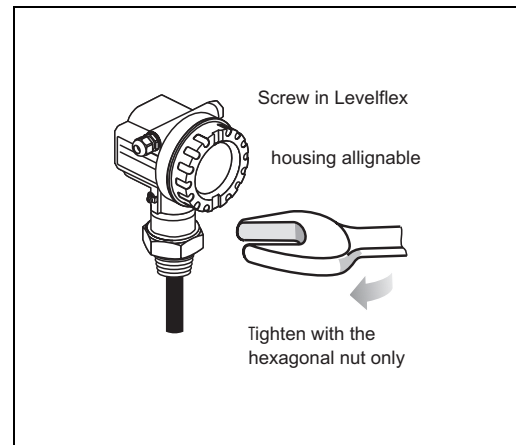

L00-FMP4xxxx-17-00-00-en-057

3.4.4 Mounting rope probes in a partially full silo

It is not always possible to empty a silo which is already in operation. Because the probe can be turned in the threaded boss, it can also be mounted when the silo is only partially filled. In order to avoid problems when Levelflex is mounted into a partially full silo, the following measures should be taken:

- Mount when the silo is as empty as if possible. A minimum of 2/3 of the silo must be empty.

After mounting, map must be made should the installation conditions require it.




Caution!

If there is a risk of electrostatic discharge from the product, the housing must be earthed before the probe is lowered into the silo.

Screw down


- If appropriate, screw the Levelflex into the threaded flange.
- Turn with the hexagonal nut only: torque 10...20 Nm
- For flange mounting: if a seal is used, be sure to use unpainted metal bolts to ensure good electrical contact between probe flange and process flange.
- When installing in metal silos, take care to ensure good metallic contact between the process connection and silo.

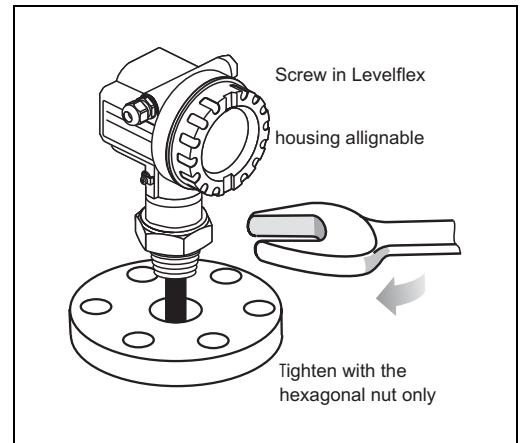

L00-FMP4xxxx-17-00-00-en-058

Insert probe

- Uncoil rope and lower it slowly and carefully into the silo.
- Avoid tangles.
- Avoid any backlash, since this might damage the silo fittings.
- If possible, make a visual check to see that the rope has not tangled or is lying such that it can knot when the level falls. This is particularly important if a flange was not used. Re-insert the probe if necessary.
- Screw the flange to the counterflange on the nozzle.

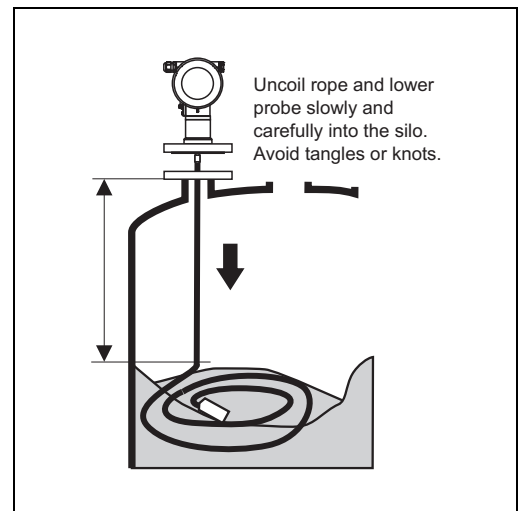

L00-FMP4xxxx-17-00-00-en-059



Note!


Before full accuracy is obtained the probe rope must hang fully extended.

3.4.5 Engineering hints for level measurement in bulk solids and fluids

- Normally, rope probes should be used for bulk solids, rod probes are only suitable for short measuring ranges up to approx. 2 m in bulk solids. This applies above all to applications in which the probe is installed laterally at an angle and for light and pourable bulk solids.
- Normally use rod or coax probes for liquids. Rope probes are used in liquids for measuring ranges > 4m and with restricted ceiling clearance which does not allow the installation of rigid probes.
- Coax probes are suited to liquids with viscosities of up to approx. 500 cSt.
Coax probes can measure most liquefied gases, as of dielectric constant 1.4. Moreover, installation conditions, such as nozzles, tank internal fittings etc., have no effect on the measurement when a coax probe is used. A coax probe offers maximum EMC safety when used in plastic tanks.
- In the case of large silos, the lateral pressure on the rope can be so high that a rope with plastic jacketing must be used. We recommend PA-coated ropes be used for cereal products wheat, flour etc..

Mounting location

- Do not mount rod or rope probes in the filling curtain (2).
- Mount rod and rope probes away from the wall (B) at such a distance that, in the event of build-up on the wall, there is still a minimum distance of 100 mm between the probe and the build-up.
- Mount rod and rope probes as far away as possible from installed fittings. "Mapping" must be carried out during commissioning in the event of distances < 300 mm.
- When installing rod and rope probes in plastic containers, the minimum distance of 300 mm also applies to metallic parts outside the container.
- Rod and rope probes may not, at times, contact metallic container walls or floors.
- Minimum distance of probe end to the container floor (C):
 - Rope probe: 150 mm
 - Rod probe: 50 mm
 - Coax probe: 10 mm
- When installing outdoors, it is recommended that you use a protective cover (1) Accessories on → 75.
- Avoid buckling the rope probe during installation or operation (e.g. through product movement against silo wall) by selecting a suitable mounting location.

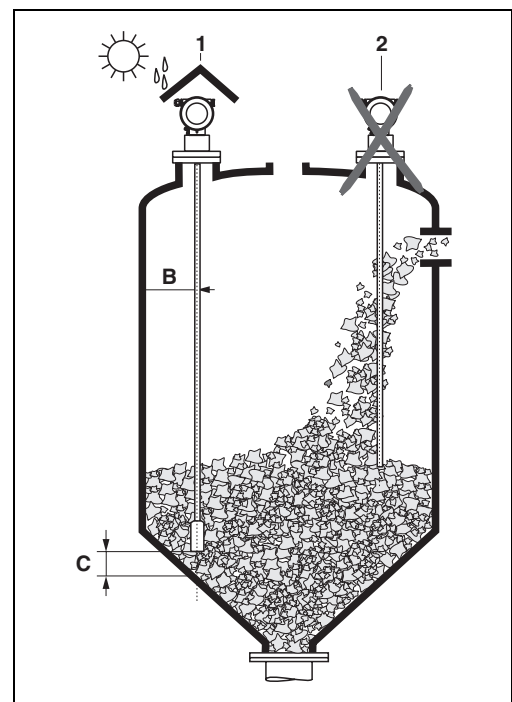


L00-FMP4xxxx-17-00-00-xx-003

Other installations

- Select the mounting location such that the distance to internals (5) (e.g. limit switch, struts) > is 300 mm over the entire length of the probe, also during operation.
- Probe must within the measuring span not touch any internals during operation. If necessary: when using rope probes the probe end (4) may be fixed to ensure that → 29!

Optimization options

- Interference echo suppression: Measurement can be optimised by electronically tuning out interference echoes.

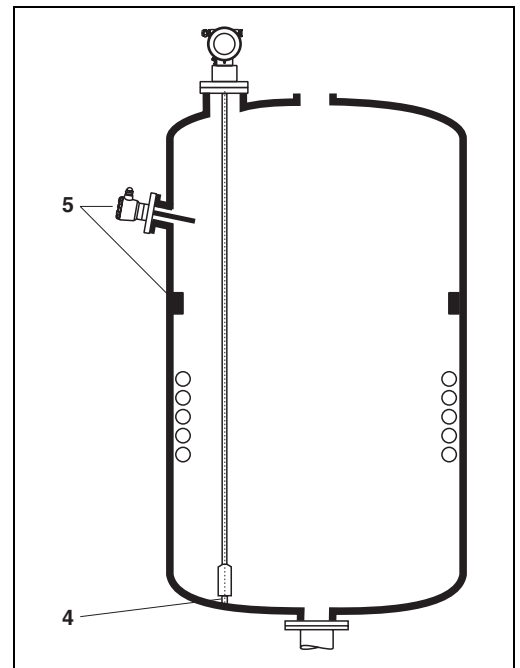

L00-FMP4xxxx-17-00-00-xx-037


Minimum distance B of the probe to the container wall:

Wall	min. distance B
Metal	100 mm for smooth walls
Plastic	100 mm, min. 300 mm to metallic components outside of the tank
Concrete	0.5 m/20", otherwise the max. possible measuring range is reduced

Distance to protruding internals min. 300 mm.

Type of probe installation

- Probes are mounted to the process connection with threaded connections or flanges and are usually also secured with these. If during this installation there is the danger that the probe end moves so much that it touches the tank floor or cone at times, the probe must, if necessary, be shortened and fixed down. The easiest way to fix the rope probes is to screw them to the internal thread on the lower end of the weight. Thread size, → [29](#).
- The ideal installation is mounting in a screwed joint / screw-in sleeve which is internally flush with the container ceiling.
- If installation takes place in a nozzle, the nozzle should be 50 ... 150 mm in diameter and should not be more than 150 mm high. Installation adapters are available for other dimensions, see "Accessories" on → [75](#).

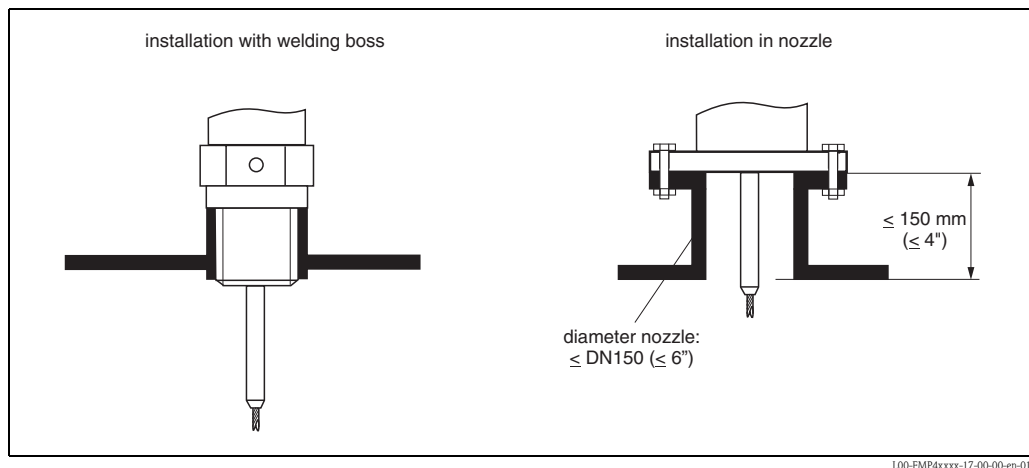

Welding the probe into the vessel



Caution!

Before welding the probe into the vessel, it must be grounded by a low-resistive connection. If this is not possible, the electronics as well as the HF module must be disconnected. Otherwise the electronics may be damaged.

Probe length

The measuring range is directly dependent on the probe length.

It is better to order probes too long than too short since it is possible to shorten the probe if necessary.

Supporting probes against warping

For WHG or Ex approval:


For probe lengths ≥ 3 m a support is required (see figure).

For GL/ABS approval:

Rod probes $\varnothing 16 \text{ mm} \leq 1 \text{ m}$ permissible, Rod probes $\varnothing 6 \text{ mm}$ not permissible.


For coax probes $\geq 1 \text{ m}$ a support is required (see figure).

a. Rod probes

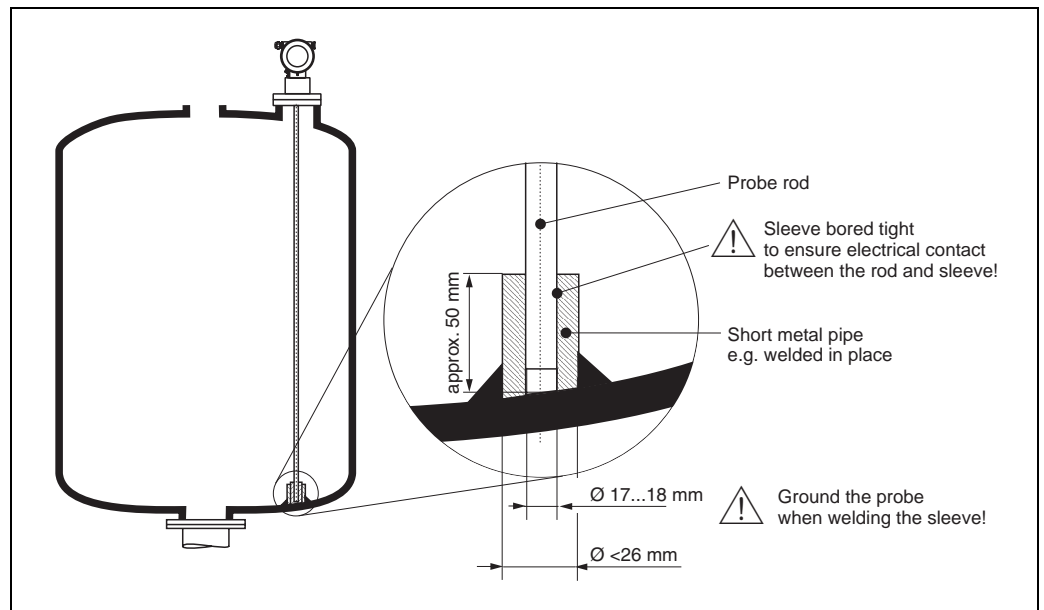

L00-FMP4xxxx-17-00-00-en-055


b. Coax probes

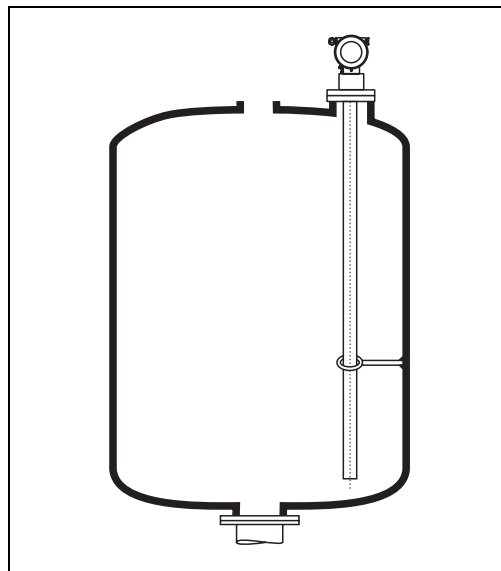

L00-FMP4xxxx-17-00-00-en-054


3.4.6 Special notes for bulk solids

- In the case of bulk solids, as great a distance as possible from the filling curtain is especially important to avoid wear.
- In concrete silos, a **large distance** (B) should be observed between the probe and the concrete wall, if possible $\geq 1\text{m}$, but at least 0.5m
- The installation of rope probes must be carried out carefully. If possible, installation should be carried out when the silo is empty.
- Check the probe regularly for defect.

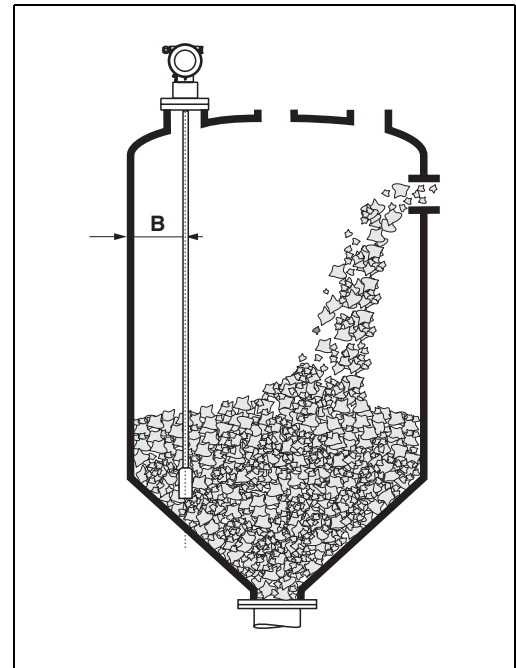

Installation in concrete silos

Installation, for example, into a thick concrete ceiling should be made flush with the lower edge. Alternatively, the probe can also be installed into a pipe that must not protrude over the lower edge of the silo ceiling. The pipe should be kept at a minimum length. Installation suggestions see diagram.

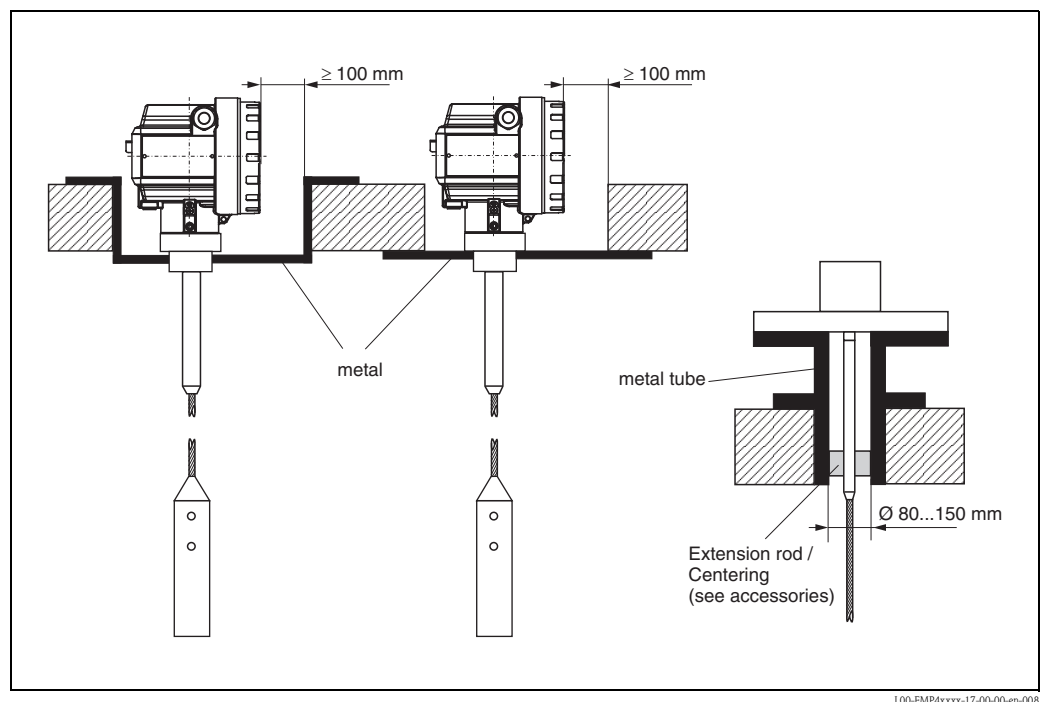

The centering disk should be used for tube diameter $> 150\text{ mm}$ to prevent build-up in the inner part of the tube.

3.4.7 Installation in bulk solid silos


Tensile load

Bulk solids exert tensile forces on rope probes whose height increases with:


- the length of the probe, i.e. max. cover,
- the bulk density of the product,
- the silo diameter and
- the diameter of the probe rope

The following diagrams show typical loads for frequently occurring bulk solids as reference values. The calculation is performed for the following conditions:


- Suspended probe (probe end not fixed at the bottom)
- Free-flowing bulk solid, i.e. mass flow. A calculation for core flow is not possible. In the event of collapsing cornices, considerably higher loads can occur.
- The specification for tensile forces contains the safety factor 2, which compensates for the normal fluctuation range in pourable bulk solids.

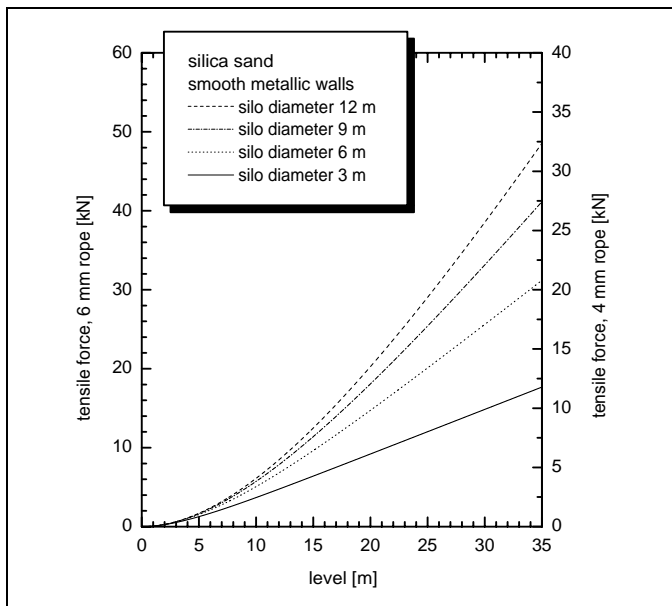


L00-FMP40xxxx-05-00-00-en-007

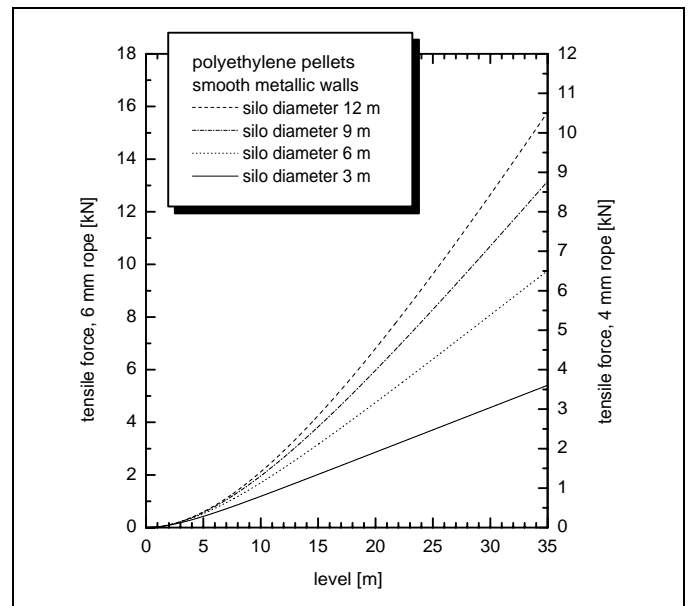

L00-FMP40xxxx-05-00-00-en-008

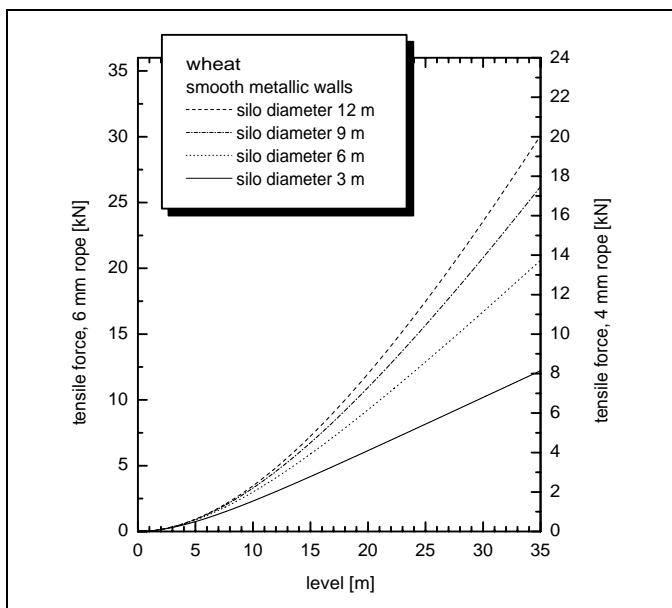

L00-FMP40xxxx-05-00-00-en-006

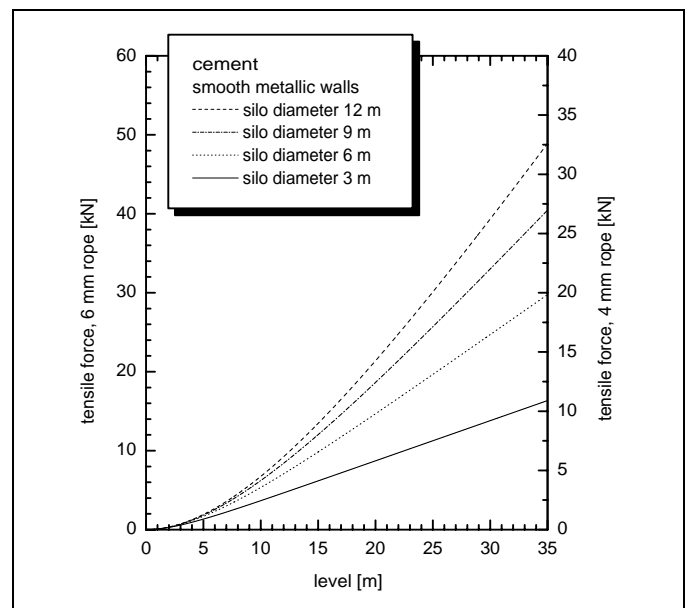

L00-FMP40xxxx-05-00-00-en-005

Since the tensile forces are also heavily dependent on the viscosity of the product, a higher safety factor is necessary for highly viscous products and if there is a risk of cornice build-up. In critical cases it is better to use a 6 mm rope instead of a 4 mm one..

The same forces also act on the silo cover.

On a fixed rope, the tensile forces are definitely greater, but this can not be calculated. Observe the tensile strength of the probes or ensure that the tensile strength of the probes is not exceeded.

Options for reducing the tensile forces:

- Shorten the probe
- If the maximum tensile load is exceeded, check whether it would be possible to use a non-contact Ultrasonic or Level-Radar device.

3.4.8 Installation in liquid tanks

- When installing in agitation units, check whether a no-contact process (ultrasonic or radar) would be better suited, especially if the agitator generates large mechanical loads on the probe.
- If Levelflex is, nevertheless, installed in tanks with agitators, it is better to use coax probes which have a greater lateral loading capacity.


Standard installation

Using a coax probe offers great advantages when the viscosity of the product is ≤ 500 cSt and it is certain that the product does not accumulate build-up:

- Greater reliability:
As of dielectric constant=1.4, measurement functions independently of all electrical properties in all liquids.
- Internals in the tank and nozzle dimensions do not have any influence on measurement.
- Higher lateral load-bearing capacity than rod probes.
- For higher viscosity a rod probe is recommended, or using a non-contact measuring principle with the Level-Radar Micropilot M.

Installation in horizontal and upright cylindrical tanks


- Use a coax or rod probe for measuring ranges up to 4 m. For longer measuring ranges, a separable probe is available as special version, or the use of a 4 mm rope probe is recommended.
- Installation and possible fixing as with bulk solids.
- Any distance from wall, as long as occasional contact is prevented.
- When installing in tanks with a lot of internals or internals situated close to the probe: Use a coax probe.

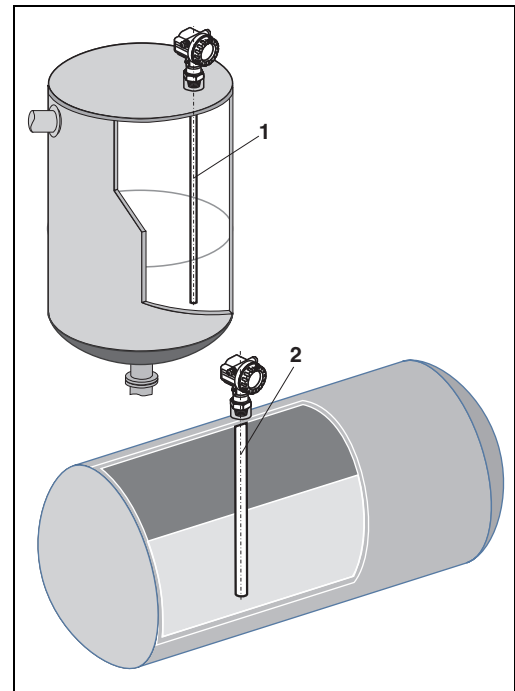

L00-FMP4xxxx-17-00-00-yy-021

Installation in underground tanks

- Use coax probe for nozzles with large diameters in order to avoid reflections at the nozzle wall.

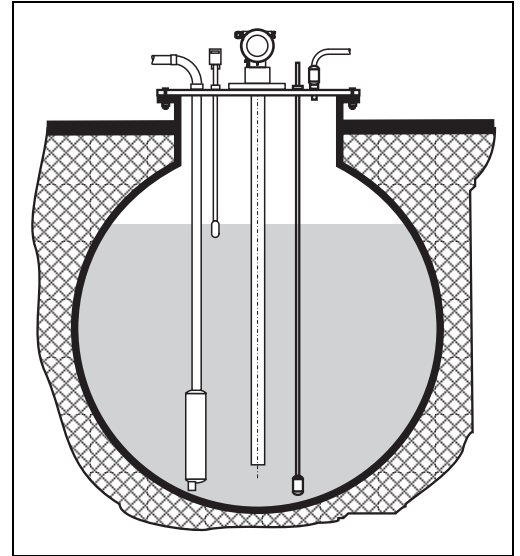


L00-FMP4xxxx-17-00-00-yy-022

Measurement in corrosive fluids

For measurement in corrosive liquids use Levelflex M FMP41C. When using plastic tanks it is also possible to mount the probe on the outside of the tank (see Installation instructions on → [30](#)). Levelflex measures the level through the plastic in both cases.

Installation in stilling well or bypass


- A rod probe can be used for pipe diameters bigger than 40 mm.
- When installing a rod probe into a metallic pipe with internal diameter of up to 150 mm, you have all the advantages of a coax probe.
- Welded joints that protrude up to approx. 5 mm/0.2" inwards do not influence measurement.

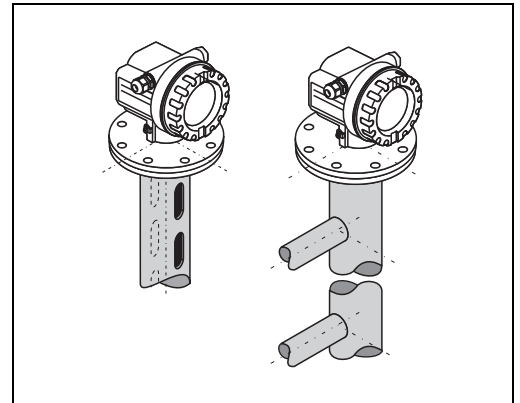

L00-FMP4xxxx-17-00-00-yy-023

Mounting Location

- Recommended distance B wall-mounted rope probe: $\sim 1/6 \dots 1/4$ of the container diameter (min. 100 mm/4", concrete silos: min. 500 mm).
- Not central (2) in metallic tanks.
- Not in the filling curtain (3).
- Please order the probe length such that it ends approx 30 mm above the floor of the tank.
- Temperature conditions must be met.
- It is recommended that a protective cover (1) be used, in order to protect the transmitter against direct sunlight or rain. Mounting and demounting are carried out simply with a clamp (see "Accessories" on \rightarrow 76).

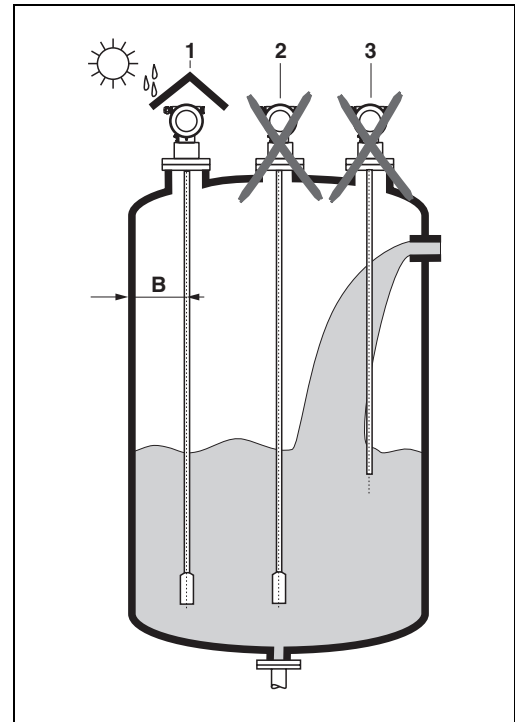


L00-FMP4xxxx-17-00-00-xx-001

Tank installations

- Select the mounting location such that the distance to internals (4) (e.g. limit switch, struts) is > 300 mm.

Optimization options

- Interference echo suppression: Measurement can be optimised by electronically tuning out interference echoes.
- Bypass pipe and stilling well (only for liquids): for viscosities of up to 500 cSt, a bypass pipe, stilling well or a coax probe can be used to prevent interference.

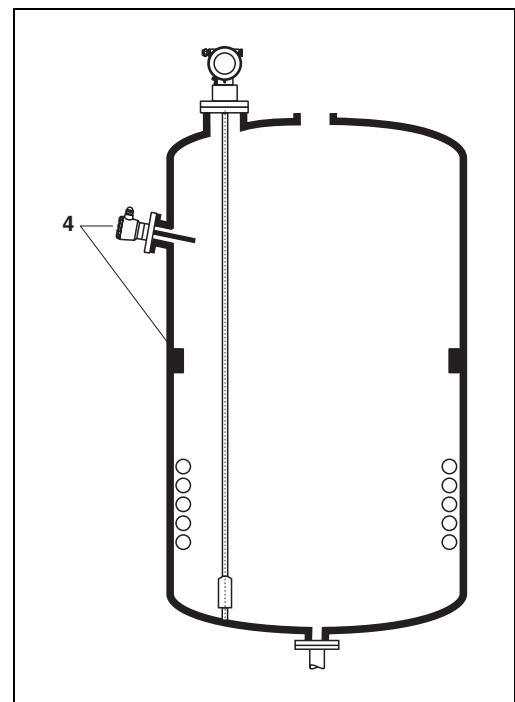

L00-FMP4xxxx-17-00-00-xx-002

3.4.9 Notes on special installation situations

Welding the probe into the vessel




Caution!


Before welding the probe into the vessel, it must be grounded by a low-resistive connection. If this is not possible, the electronics as well as the HF module must be disconnected. Otherwise the electronics may be damaged.

Fixing rope probe

- The end of the probe needs to be secured if the probe would otherwise touch the silo wall, the cone or another part, or the probe comes closer than 0.5 m to a concrete wall. This is what the internal thread in the probe weight is intended for:
 - for 4 mm rope: M 14
 - for 6 mm rope: M 20
- Preferably use the 6 mm rope probe due to the higher tensile strength when fixing a rope probe.
- The fixing must be either reliably grounded or reliably insulated (see "Accessories" on → 80)! If it is not possible to mount the probe weight with a safe earthed connection, it can be secured using an isolated eyelet, which is available as an accessory (see → 80).
- In order to prevent an extremely high tensile load and the risk of rope crack, the rope has to be slack. Make the rope longer than the required measuring range such that there is a sag in the middle of the rope that is $\geq 1 \text{ cm/m}$ ($1''/100''$) of the rope length.

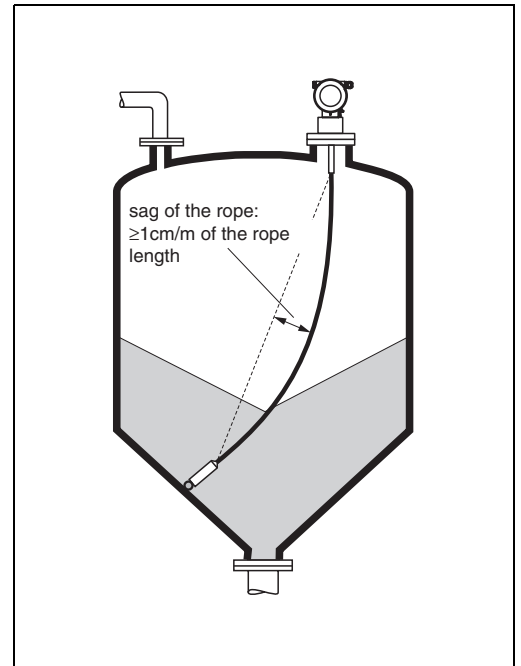


L00-FMP4xxxx-17-00-00-de-019

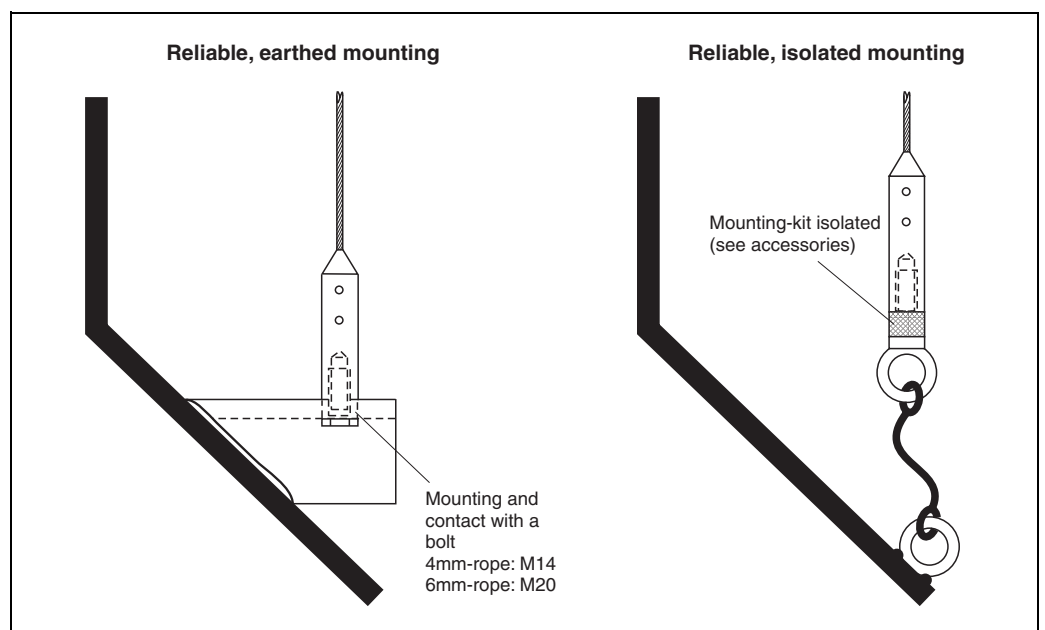


L00-FMP4xxxx-17-00-00-en-027

Installation from the side

- If installation from above is not possible, the Levelflex can also be mounted from the side.
- In this case, always fix the rope probe (see "Fixing rope probe").
- Support coax probe if the lateral load-bearing capacity is exceeded. Only fix rod probes at the probe end.
- Connect rod probe metallically with the container wall.

 **Caution!**
Insulate or ground the rod probe when welding the sleeve as device will otherwise be destroyed!

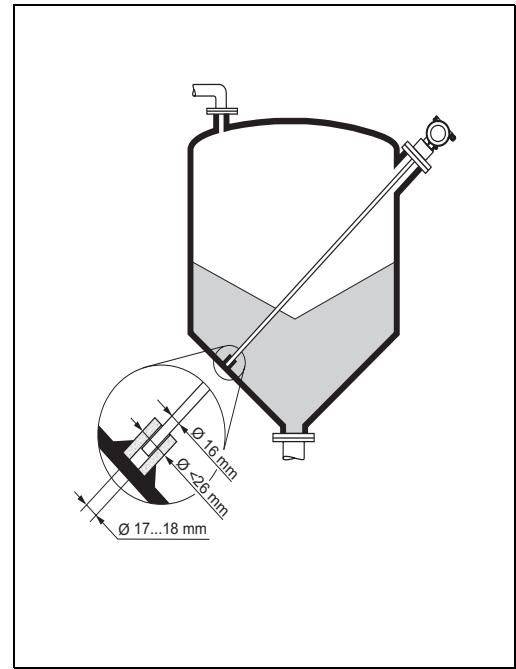


L00-FMP4xxxx-17-00-00-xx-037

Installation in plastic containers

Please note that the "guided level radar" measuring principle requires a metallic surface at the process connection.

When installing rod or rope probes in plastic silos, whose silo cover is also made of plastic or silos with wood cover, the probes must either be mounted in a \geq DN 50 / 2" metallic flange, or a metal sheet with diameter of \geq 200 mm must be mounted under the screw-in piece.

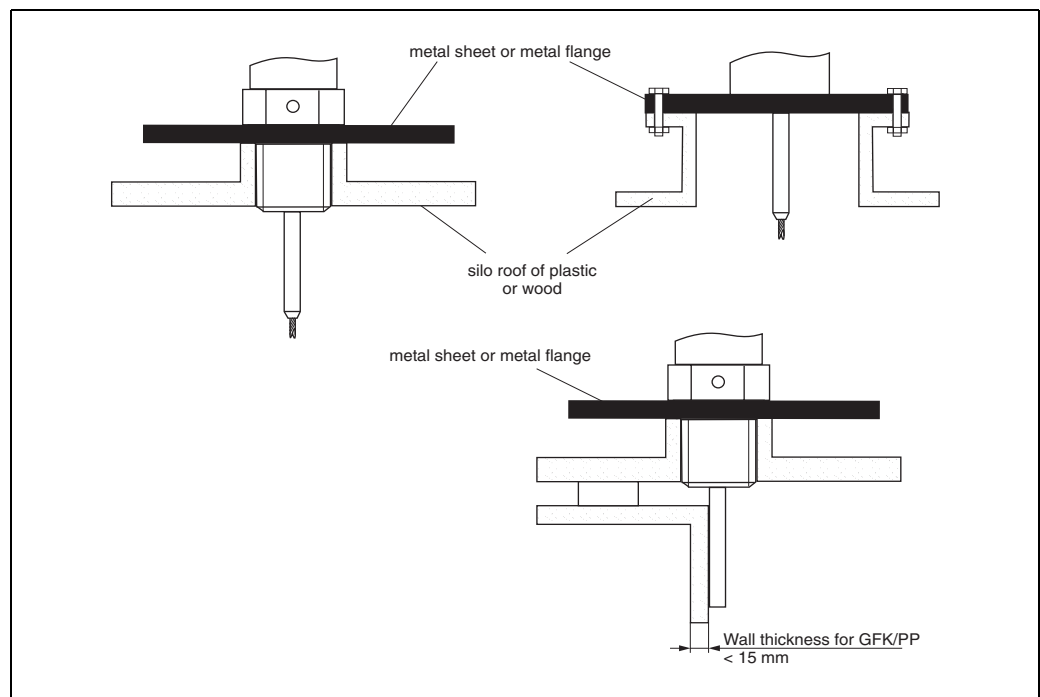

L00-FMP4xxxx-17-00-00-es-018

- It is also possible to mount the probe externally on the tank wall for measuring in Aqueous solutions. Measurement then takes place through the tank wall without contacting the medium. If people are in the vicinity of the probe mounting location, a plastic half pipe with a diameter of approx. 200 mm, or some other protective unit, must be affixed externally to the probe to prevent any influences on the measurement.
- There must not be any metallic reinforcement rings secured to the tank.
- The wall thickness should be at Fibre-Glass Reinforced Plastic/PP < 15 mm.
- There must be no open space between the tank wall and the probe.
- If measuring externally, an automatic probe length determination and a two point linearisation must be performed in order to compensate for the time-of-flight change caused by the plastic wall.


Installation in nozzles > 150 mm high

If, when installing probes in nozzles DN 40...250/1 1/2"...10" with nozzle height (HS) of > 150 mm/6", the probe could touch the lower edge due to moving materials in the container, we recommend using an extension rod with or without centering disk.

This accessory consists of the extension rod corresponding to the nozzle height, on which a centering disk is also mounted if the nozzles are narrow or when working in bulk solids. This component is delivered separately from the device. Please order the probe length correspondingly shorter. For the exact length of the rod see Extension rod / Centering on → 75.

Order codes for specific nozzle nominal diameters and heights can be found on → 78.

Only use centering disks with small diameters (DN 40 and DN 50) if there is no significant build-up in the nozzle above the disk.

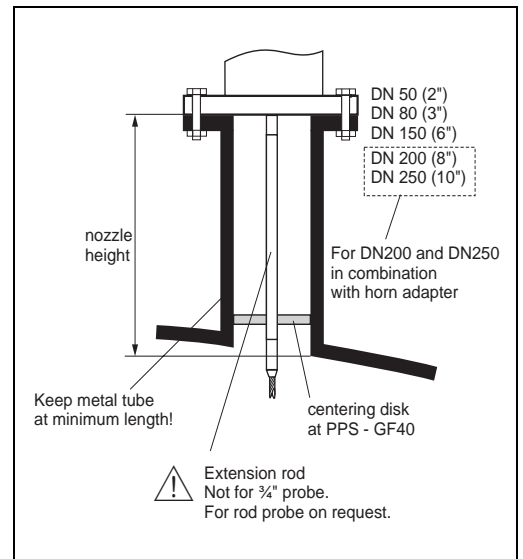


L00-FMP4xxxx-17-00-00-en-025

Installation in DN 200/DN 8"and DN 250/DN 10" nozzles

When installing the Levelflex in nozzles of > 200 mm / 8", signals are generated by reflections on the nozzle wall, which can sometimes lead to faulty measurements in the case of products with small dielectric constants. With nozzle diameters of 200 mm / 8" or 250 mm / 10", therefore, a special flange with a "horn adaptor" must be fitted.

Nozzles with nominal diameters greater than DN 250 / 10" should be avoided.


If the rope probe is strongly deflected: use an extension rod/centering HMP40, additionally.

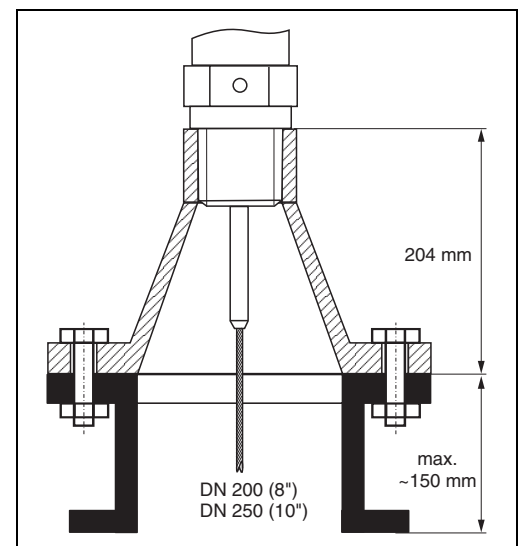

L00-FMP4xxxx-17-00-00-de-026

Installation in \geq DN 300 nozzles

If installation in $\geq 300\text{mm}/12\text{"}$ nozzles is unavoidable, installation must be carried out in accordance with the sketch on the right.

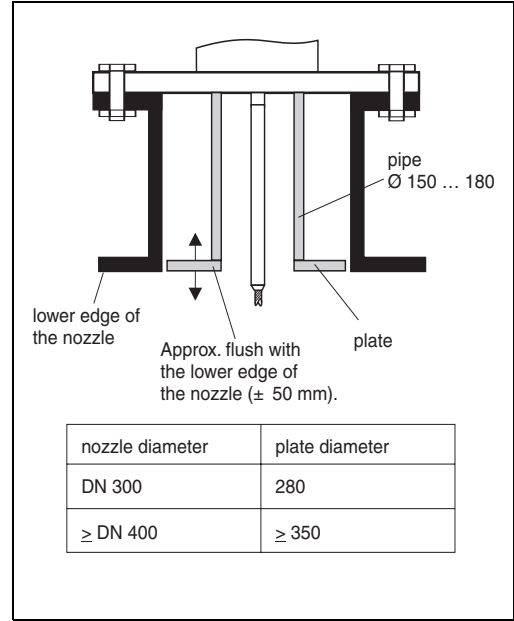


L00-FMP40xxx-17-00-00-en-034

Installing FMP40 with heat insulation


- If process temperatures are high, FMP40 must be included in normal tank insulation to prevent the electronics heating up as a result of heat radiation or convection.
- The insulation may not exceed beyond the points labelled "MAX" in the drawing.

Process connection with adapter G $\frac{3}{4}$, G $1\frac{1}{2}$, $\frac{3}{4}$ NPT or $1\frac{1}{2}$ NPT

Process connection with flange DN40...DN200

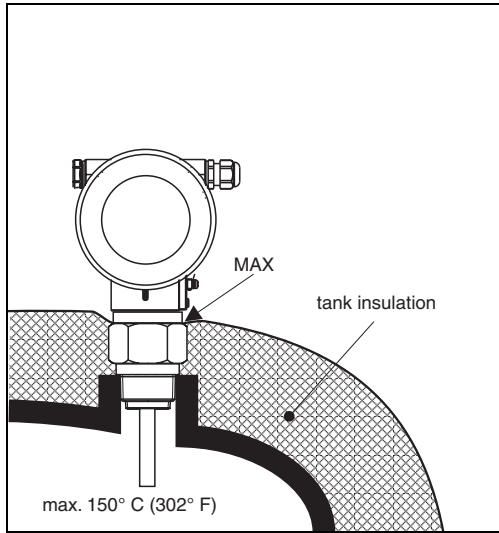

L00-FMP40xxx-17-00-00-en-003

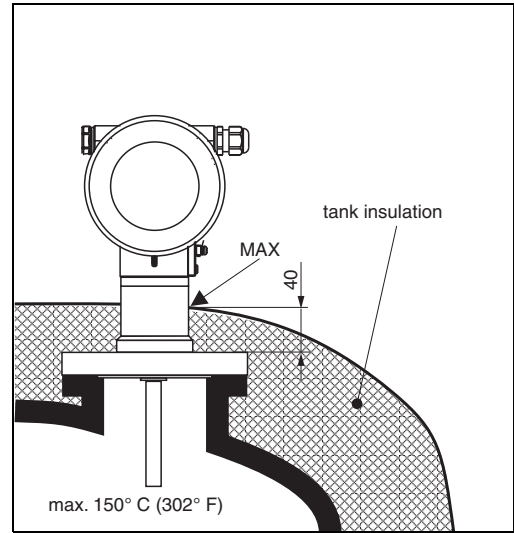

L00-FMP40xxx-17-00-00-en-002


3.4.10 Installation for difficult to access process connections

For tight spaces or temperatures above that in the graphic, the electronics housing can be ordered with distance pipe or connecting cable (seperate housing).

Installation with distance pipe

Follow installation instructions on →  20


- After mounting, the housing can be turned 350°, in order make access to the display and the connection compartment easier.
- The max. measuring range is reduced to 34 m/1338".

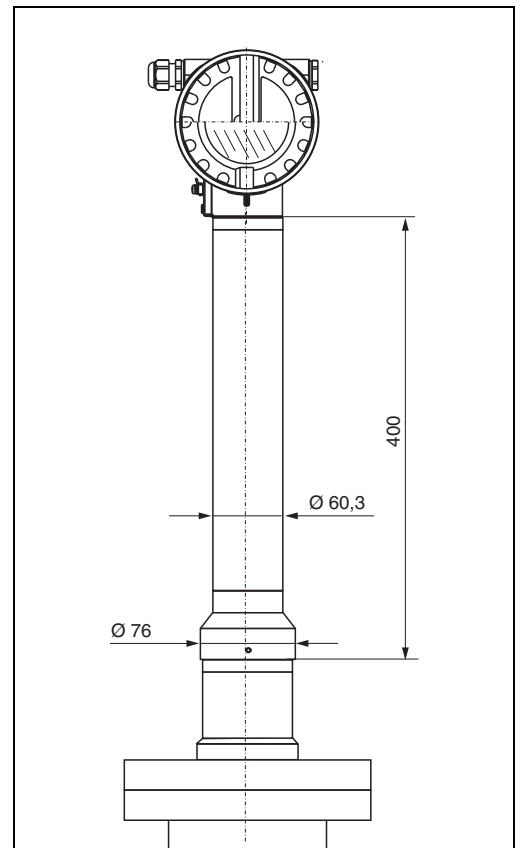

L00-FMP4xxxx-17-00-00-de-014

Installation with remote electronic

- Follow installation instructions on → 20
- Mount housing on a wall or pipe as shown in the diagram.

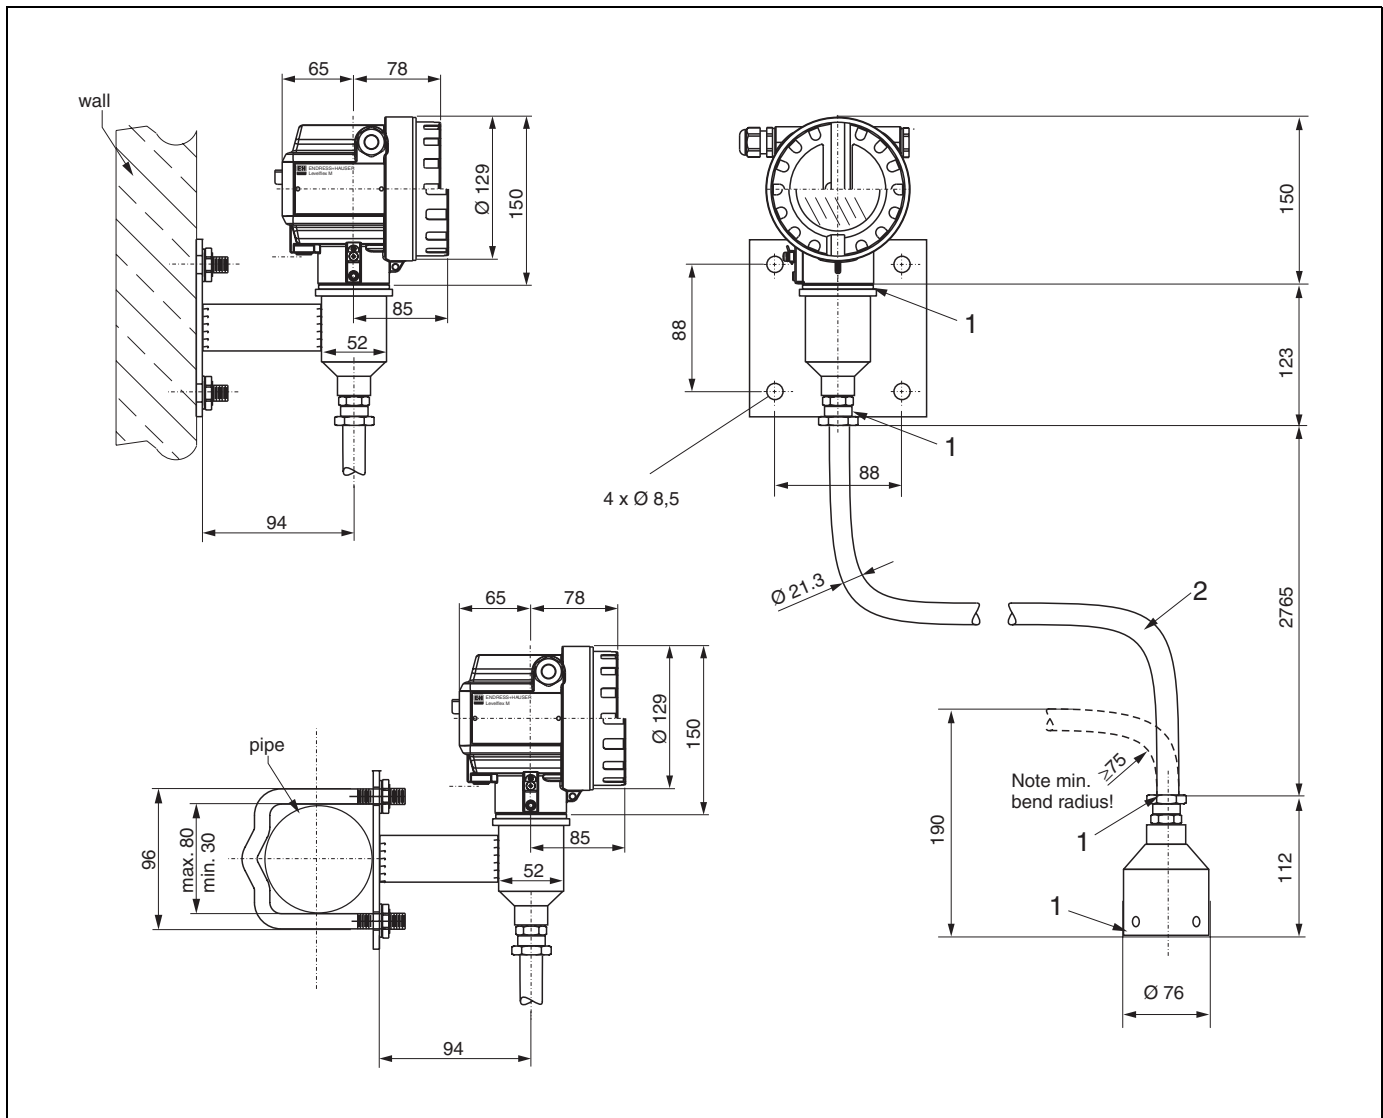

L00-FMP4xxxx-17-00-00-es-015



Note!


The protective hose cannot be disassembled at these points (1).

The ambient temperature for the connecting line (2) between the probe and the electronics must not be greater than 105°C. The version with remote electronics consists of the probe, a connecting cable and the housing. If they are ordered as a complete unit they will be delivered assembled and cannot be separated.

3.4.11 Turn housing

After mounting, the housing can be turned 350° in order to simplify access to the display and the terminal compartment. Proceed as follows to turn the housing to the required position:

- Undo the fixing screws (1)
- Turn the housing (2) in the required direction
- Tighten up the fixing screws (1).

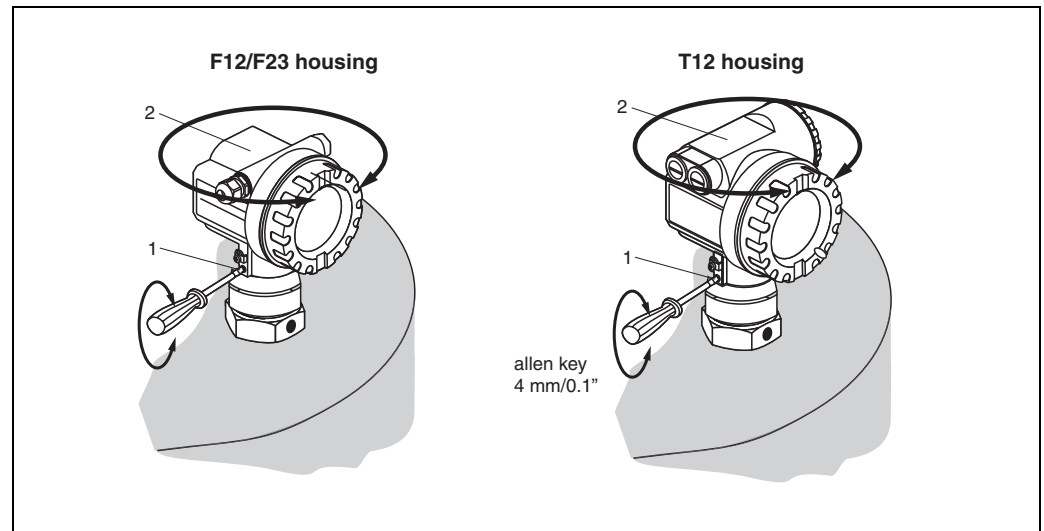

L00-FMP4xxxx-17-00-00-en-028

3.5 Post-installation check

After the measuring instrument has been installed, perform the following checks:


- Is the measuring instrument damaged (visual check)?
- Does the measuring instrument correspond to the measuring point specifications such as process temperature/pressure, ambient temperature, measuring range, etc.?
- Are the measuring point number and labeling correct (visual check)?
- Is the measuring instrument adequately protected against rain and direct sunlight (see → 75)?

4 Wiring

4.1 Quick wiring guide

Wiring in F12/F23 housing

- Caution!**
- Before connection please note the following:
 - The power supply must be identical to the data on the nameplate (1).
 - Switch off power supply before connecting up the device.
 - Connect Equipotential bonding to transmitter ground terminal (7) before connecting up the device.
 - Tighten the locking screw (8): It forms the connection between the probe and the housing ground potential.

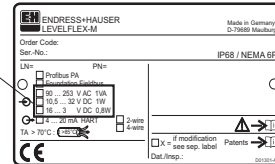

When you use the measuring system in hazardous areas, make sure you comply with national standards and the specifications in the safety instructions (XA's). Make sure you use the specific cable gland.

- EX**
- On devices supplied with a certificate, the explosion protection is designed as follows:
- Housing F12 - EEx ia: Power supply must be intrinsically safe.
 - The electronics and the current output are galvanically separated from the probe circuit.



Connect up the Levelflex M as follows:

- Unscrew housing cover (2).
- Remove any display (3) if fitted.
- Remove cover plate from terminal compartment (4).
- Pull out terminal module slightly using "pulling loop" (only 2-wire).
- Insert cable (5) through gland (6). A standard installation cable is sufficient if only the analogue signal is used. Use a screened cable when working with a superimposed communications signal (HART).

- EX**
- Only ground screening of the line (7) on sensor side.

- Make connection (see pin assignment).
- Re-insert terminal module.
- Tighten cable gland (6). Max. torque 10...12 Nm!
- Tighten screws on cover plate (4).
- Insert display if fitted.
- Screw on housing cover (2). (on dust-Ex torque ≈ 40 Nm).
- Switch on power supply.

Unplug display connector!

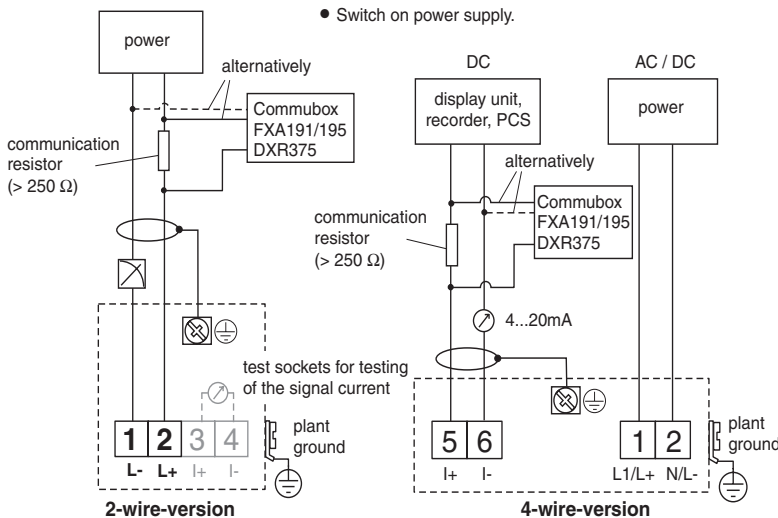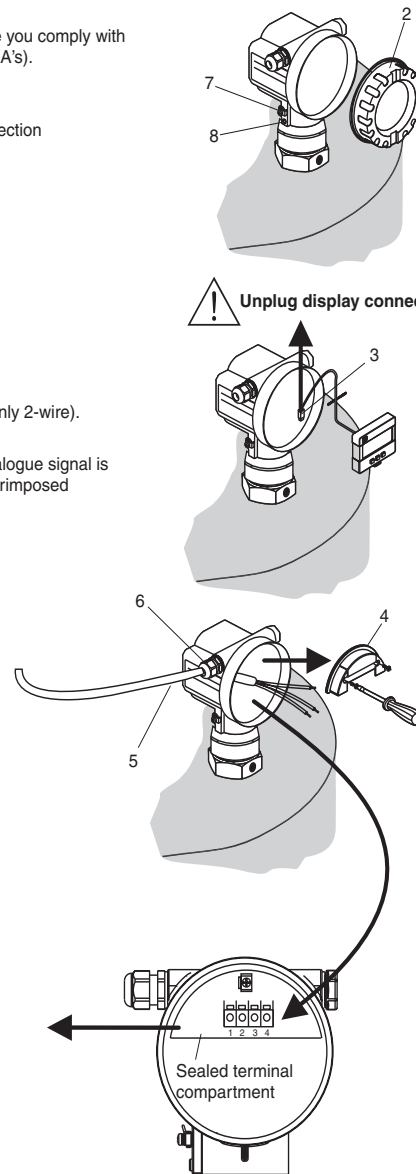


Note!
If 4-wire for dust-Ex-applications is used, the current output is intrinsically safe.

Wiring in T12 housing



Before connection please note the following:

- The power supply must be identical to the data on the nameplate (1).
- Switch off power supply before connecting up the device.
- Connect Equipotential bonding to transmitter ground terminal (7) before connecting up the device.
- Tighten the locking screw (8):
It forms the connection between the probe and the housing ground potential.

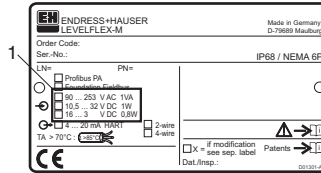

When you use the measuring system in hazardous areas, make sure you comply with national standards and the specifications in the safety instructions (XA's). Make sure you use the specific cable gland.



Connect up the Levelflex M as follows:




Before unscrew housing cover (2) at separate connection room turn off the power supply!

- Insert cable (3) through gland (4).
A standard installation cable is sufficient if only the analogue signal is used. Use a screened cable when working with a superimposed communications signal (HART).



Only ground screening of the line (5) on sensor side.

- Make connection (see pin assignment).
- Tighten cable gland (4). Max. torque 10...12 Nm!
- Screw on housing cover (2) (on dust-Ex torque ≈ 40 Nm).
- Switch on power supply.

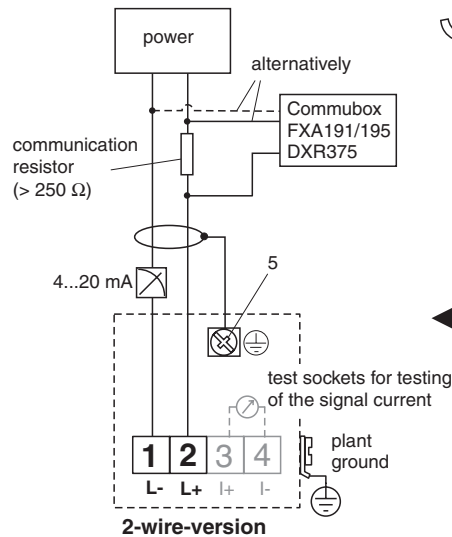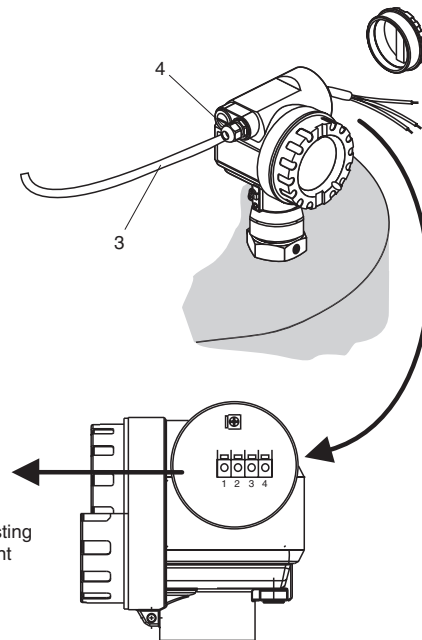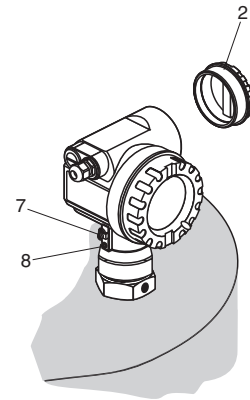


4.2 Connecting the measuring unit

Terminal compartment

Three housings are available:

- Aluminium housing F12 with additionally sealed terminal compartment for:
 - standard,
 - EEx ia.
- Aluminium housing T12 with separate terminal compartment for:
 - standard,
 - EEx e,
 - EEx d
 - EEX ia (with overvoltage protection).
- Stainless steel 316L housing F23 for:
 - standard,
 - EEx ia.

After mounting, the housing can be turned 350° in order to simplify access to the display and the terminal compartment.

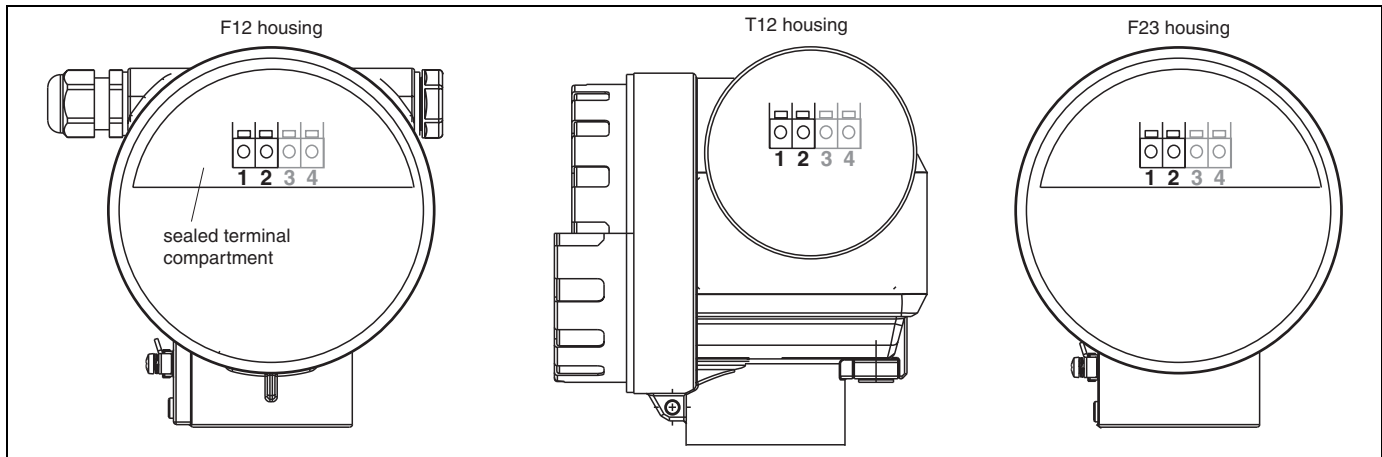

The instrument data are given on the nameplate together with important information regarding the analog output and voltage supply. Housing orientation regarding the wiring see "Turn housing" on → 35.

Load HART

Minimum load for Hart communication: 250 Ω

Ground connection

It is necessary to make a good ground connection to the ground terminal on the outside of the housing, in order to achieve EMC security.

Cable gland

	Type	Clamping area
Standard, EEx ia, IS	Plastic M20x1.5	5...10 mm
EEx em, EEx nA	Metal M20x1.5	7...10.5 mm

Terminals

for wire cross-sections of 0.5...2.5 mm²

Cable entry

Cable gland: M20x1.5

Cable entry: G ½ or ½ NPT

Supply voltage

HART, 2-wire

The following values are the voltages across the terminals directly at the instrument:

Communication		Current consumption	Terminal voltage	
			minimal	maximal
HART	standard	4 mA	16 V	36 V
		20 mA	7.5 V	36 V
	EEx ia	4 mA	16 V	30 V
		20 mA	7.5 V	30 V
	EEx em EEx d	4 mA	16 V	30 V
		20 mA	11 V	30 V
Fixed current, adjustable e.g. for solar power operation (measured value transferred at HART)	standard	11 mA	10 V	36 V
	EEx ia	11 mA	10 V	30 V
Fixed current for HART Multidrop mode	standard	4 mA ¹⁾	16 V	36 V
	EEx ia	4 mA ¹⁾	16 V	30 V

1) Start up current 11 mA.

HART residual ripple, 2-wire: $U_{ss} \leq 200 \text{ mV}$

HART, 4-wire active

Version	Voltage	Max. load
DC	10.5...32 V	600 Ω
AC	85...253 V	600 Ω

HART residual ripple, 4-wire, DC version: $U_{ss} = 2 \text{ V}$, voltage incl. ripple within the permitted voltage (10.5...32 V).

Power consumption

min. 60 mW, max. 900 mW

Current consumption


Communication	Current consumption	Current consumption Power consumption
HART, 2-wire	3.6...22 mA	—
HART, 4-wire (90...250 V _{AC})	2.4...22 mA	~ 3...6 mA / ~ 3.5 VA
HART, 4-wire (10,5...32 V _{DC})	2.4...22 mA	~ 100 mA / ~ 1 W

Overvoltage protection


If the measuring device is used for the level measurement in flammable liquids which requires the use of an overvoltage protection according to DIN EN 60079-14, standard for testprocedures DIN IEC 60060-1 (10 kA, Puls 8/20 μ s) it has to be ensured that

- the measuring device with integrated overvoltage protection with gas discharge tubes within the T12-enclosure is used, refer to product overview on → 8
- or
- this protection is achieved by the use of other appropriate measures (external protection devices e.g. HAW262Z).

4.2.1 HART connection with Endress+Hauser RMA422 / RN221N

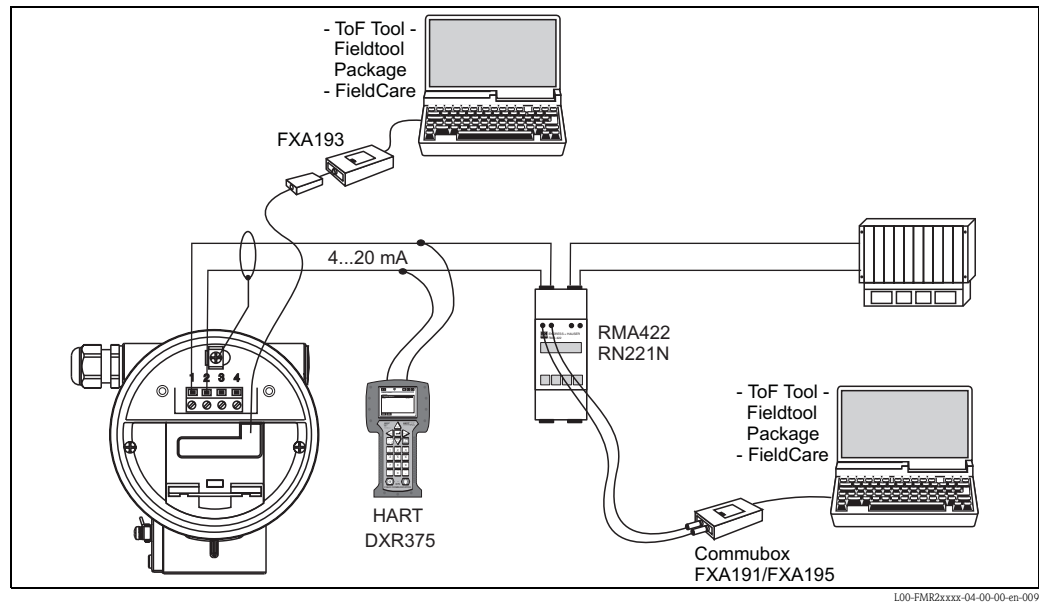

4.2.2 HART connection with other supplies

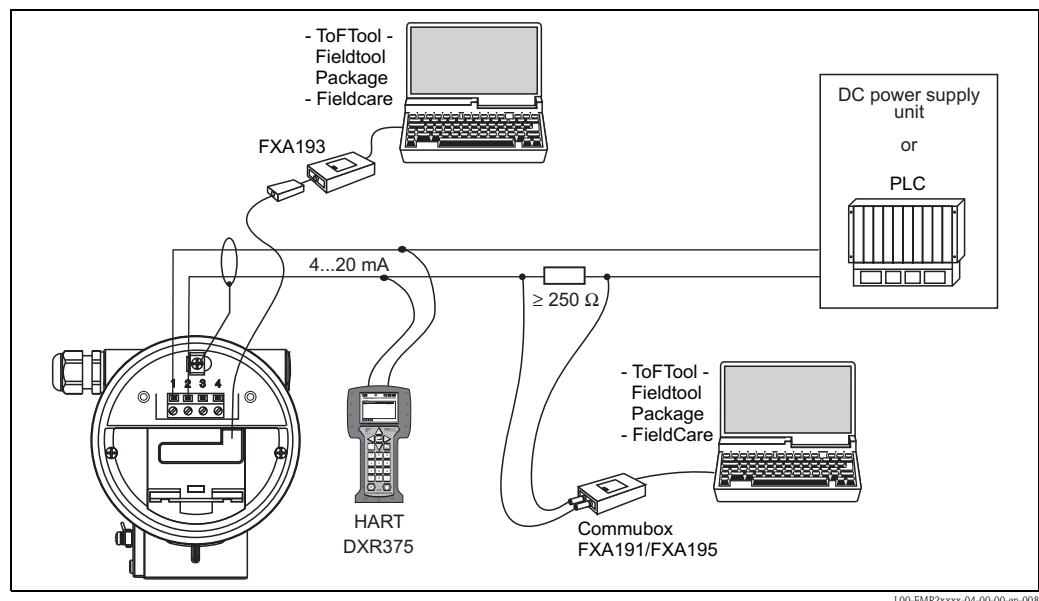


Caution!

If the HART communication resistor is not built into the supply unit and the HART interface is to be used, it is necessary to insert a communication resistor of 250 Ω into the 2-wire line.

4.3 Recommended connection

4.3.1 Equipotential bonding

Connect the Equipotential bonding to the external ground terminal (1) of the transmitter.

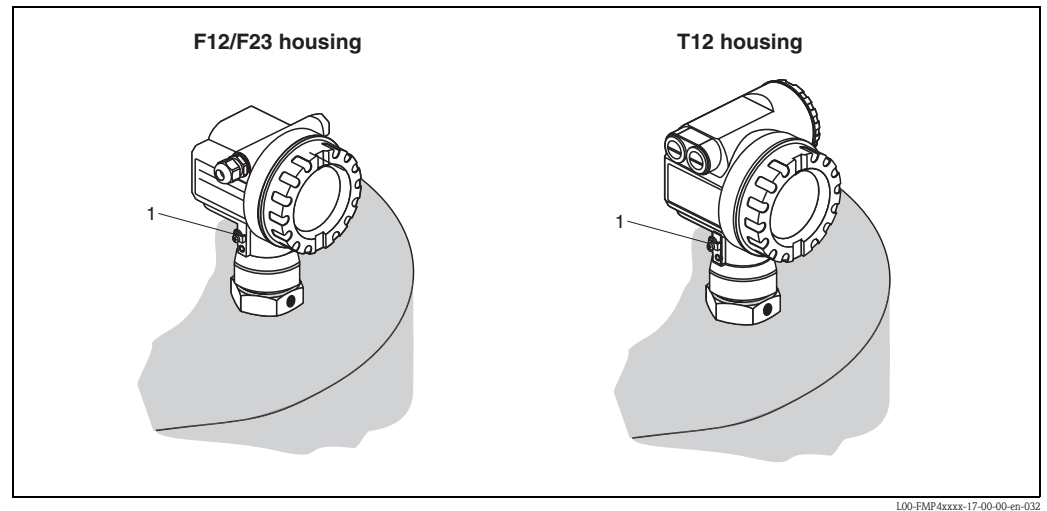

L00-FMP4xxxx-17-00-00-en-032

4.3.2 Wiring screened cable



Caution!

In Ex applications, the instrument must only be grounded on the sensor side. Further safety instructions are given in the separate documentation for applications in explosion hazardous areas.

4.4 Degree of protection

- with closed housing tested according to
 - IP68, NEMA6P (24 h at 1.83 m under water surface)
 - IP66, NEMA4X
- with open housing: IP20, NEMA1 (also ingress protection of the display)


4.5 Post-connection check

After wiring the measuring instrument, perform the following checks:

- Is the terminal allocation correct (see → [36](#) and → [37](#))?
- Is the cable gland tight?
- Is the housing cover screwed tight?
- If auxiliary power is available:
 - Is the instrument ready for operation and is the liquid crystal display visible?

5 Operation

5.1 Quick operation guide

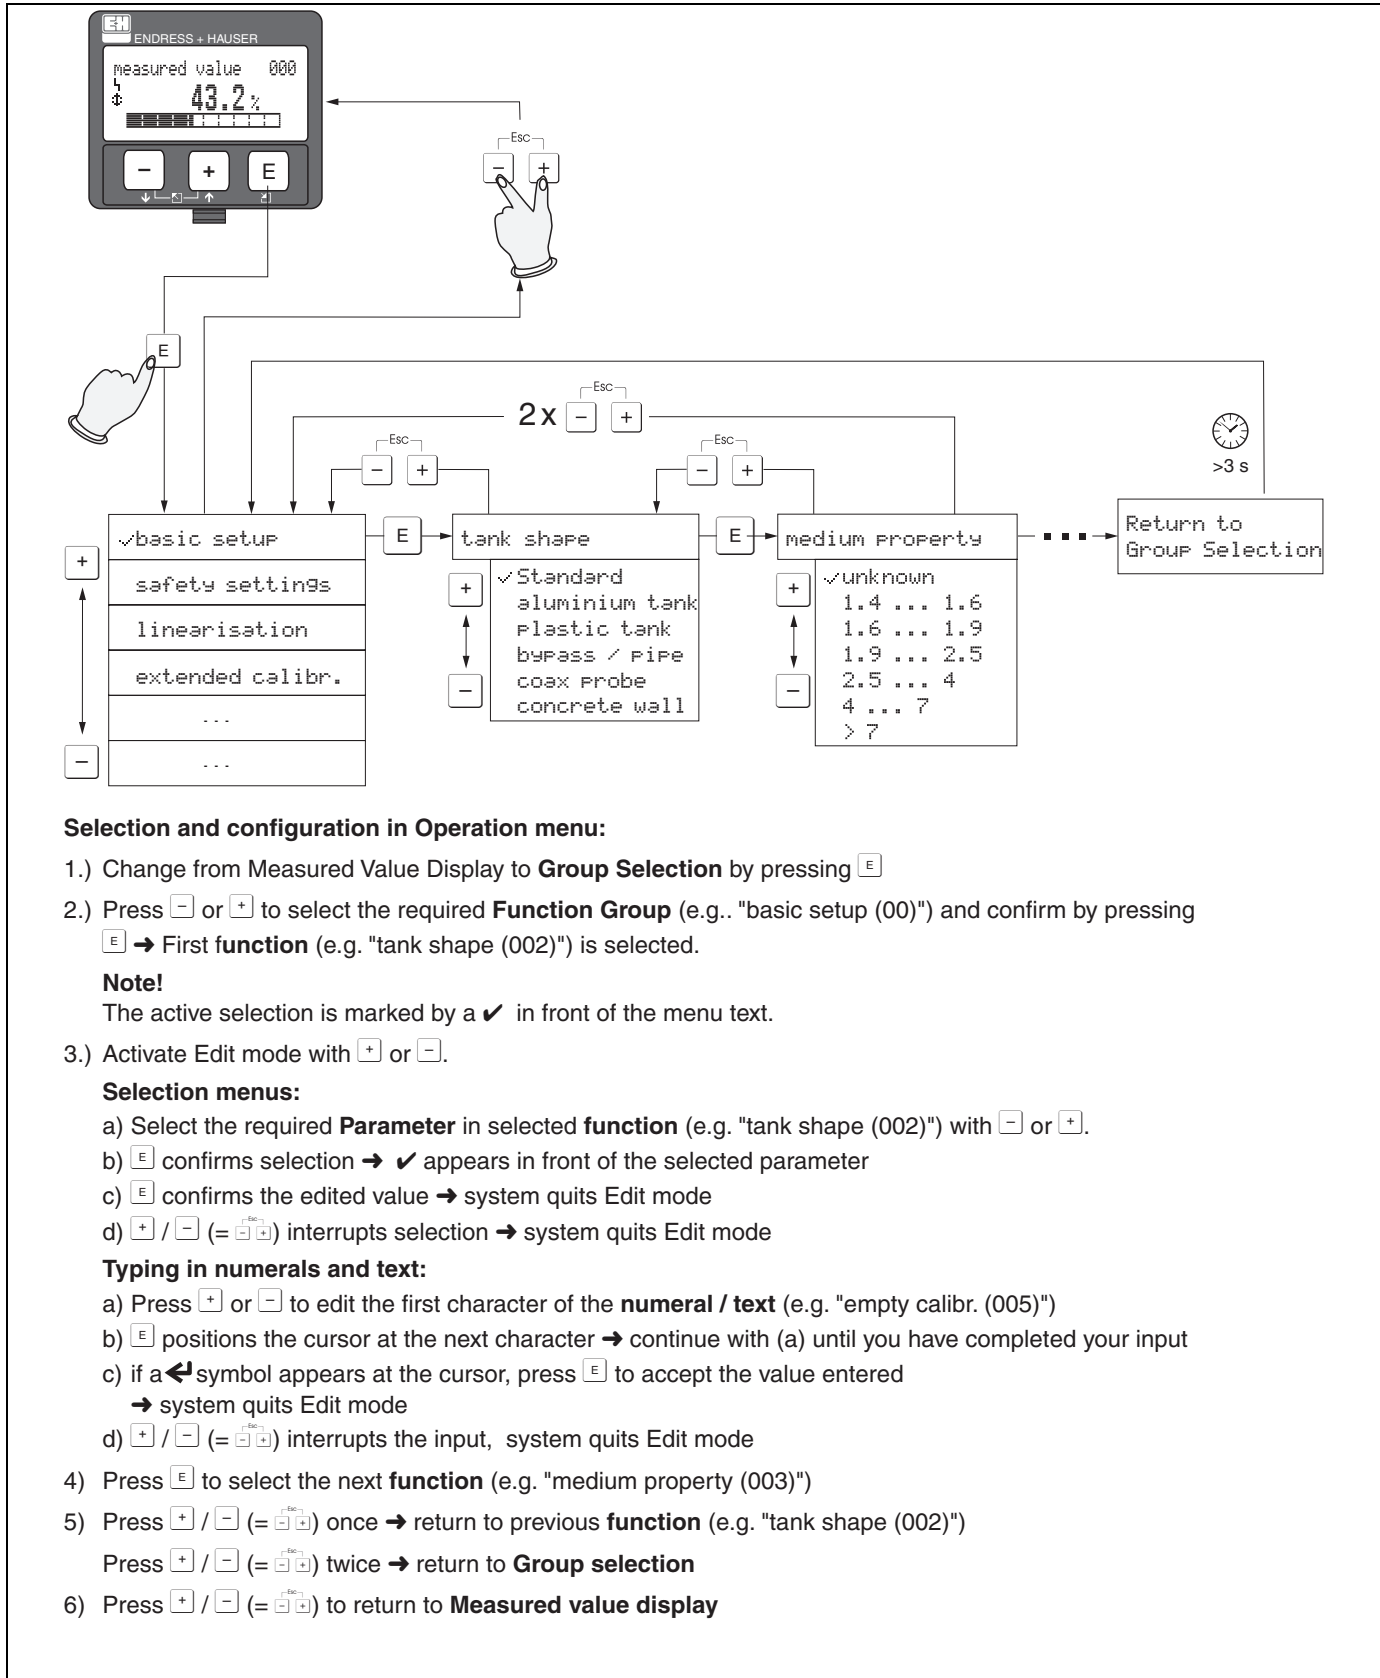

Selection and configuration in Operation menu:

- 1.) Change from Measured Value Display to **Group Selection** by pressing **E**
- 2.) Press **-** or **+** to select the required **Function Group** (e.g.. "basic setup (00)") and confirm by pressing **E** → **First function** (e.g. "tank shape (002)") is selected.

Note!

The active selection is marked by a ✓ in front of the menu text.

- 3.) Activate Edit mode with **+** or **-**.

Selection menus:

- a) Select the required **Parameter** in selected **function** (e.g. "tank shape (002)") with **-** or **+**.
- b) **E** confirms selection → ✓ appears in front of the selected parameter
- c) **E** confirms the edited value → system quits Edit mode
- d) **+** / **-** (= **Esc**) interrupts selection → system quits Edit mode

Typing in numerals and text:

- a) Press **+** or **-** to edit the first character of the **numeral / text** (e.g. "empty calibr. (005)")
 - b) **E** positions the cursor at the next character → continue with (a) until you have completed your input
 - c) if a **←** symbol appears at the cursor, press **E** to accept the value entered → system quits Edit mode
 - d) **+** / **-** (= **Esc**) interrupts the input, system quits Edit mode
- 4) Press **E** to select the next **function** (e.g. "medium property (003)")
 - 5) Press **+** / **-** (= **Esc**) once → return to previous **function** (e.g. "tank shape (002)")
Press **+** / **-** (= **Esc**) twice → return to **Group selection**
 - 6) Press **+** / **-** (= **Esc**) to return to **Measured value display**

5.1.1 General structure of the operating menu

The operating menu is made up of two levels:

■ **Function groups (00, 01, 03, ..., 0C, 0D):**

The individual operating options of the instrument are split up roughly into different function groups. The function groups that are available include, e.g.: "basic setup", "safety settings.", "output", "display", etc.

■ **Functions (001, 002, 003, ..., 0D8, 0D9):**


Each function group consists of one or more functions. The functions perform the actual operation or parameterisation of the instrument. Numerical values can be entered here and parameters can be selected and saved. The available functions of the "basic setup" (00) function group include, e.g.: "tank properties" (002), "medium property" (003), "process cond." (004), "empty calibr." (005), etc.

If, for example, the application of the instrument is to be changed, carry out the following procedure:

1. Select the "basic setup" (00) function group.
2. Select the "tank properties" (002) function (where the existing tank shape is selected).

5.1.2 Identifying the functions

For simple orientation within the function menus, for each function a position is shown on the display.

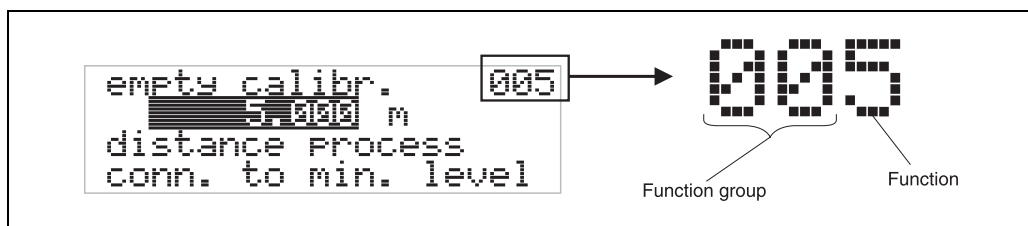

The first two digits identify the function group:

- basic setup 00
- safety settings 01
- linearisation 04
- ...


The third digit numbers the individual functions within the function group:

- | | | |
|---|---|---|
| <ul style="list-style-type: none"> ■ basic setup 00 | → | <ul style="list-style-type: none"> ■ tank properties 002 ■ medium property 003 ■ process cond. 004 ... |
|---|---|---|

Here after the position is always given in brackets (e.g. "tank properties" (002)) after the described function.

5.2 Display and operating elements

Four lines with 20 characters each. Display contrast adjustable through key combination.

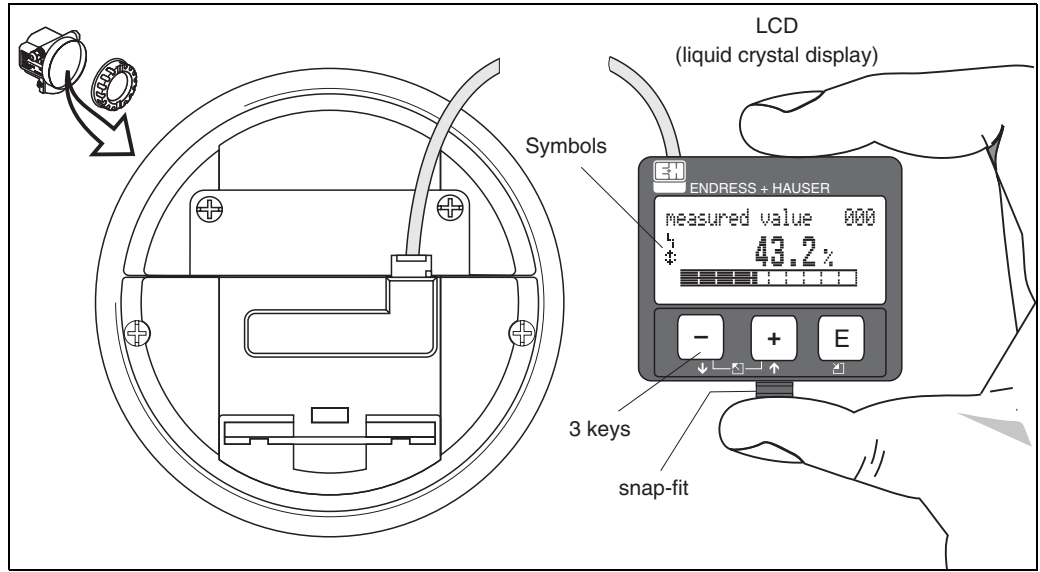

The VU331 LCD display can be removed to ease operation by simply pressing the snap-fit (see graphic above). It is connected to the device by means of a 500 mm cable.

5.2.1 Display

Liquid crystal display (LCD):

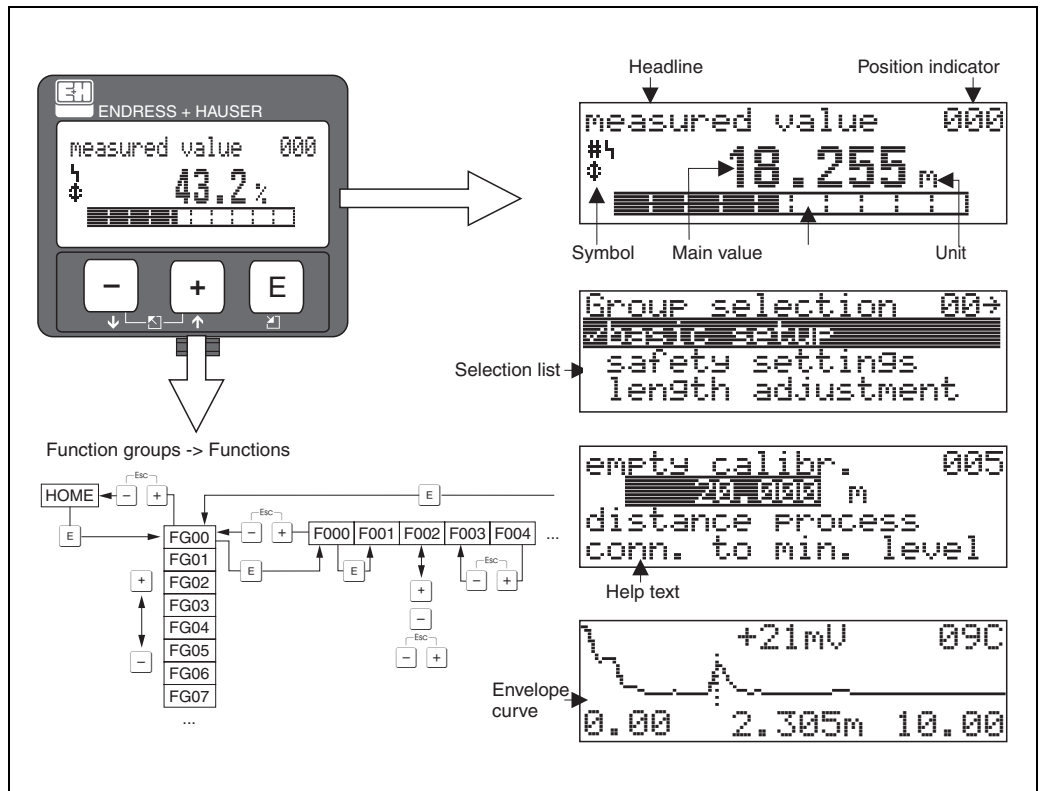





Fig. 3: Display

5.2.2 Display symbols















The following table describes the symbols that appear on the liquid crystal display:

Sybmol	Meaning
	ALARM_SYMBOL This alarm symbol appears when the instrument is in an alarm state. If the symbol flashes, this indicates a warning.
	LOCK_SYMBOL This lock symbol appears when the instrument is locked, i.e. if no input is possible.
	COM_SYMBOL This communication symbol appears when a data transmission via e.g. HART, PROFIBUS PA or FOUNDATION Fieldbus is in progress.

5.2.3 Key assignment

The operating elements are located inside the housing and are accessible for operation by opening the lid of the housing.

Function of the keys


Key(s)	Meaning
 or 	Navigate upwards in the selection list Edit numeric value within a function
 or 	Navigate downwards in the selection list Edit numeric value within a function
 or 	Navigate to the left within a function group
	Navigate to the right within a function group, confirmation.
 and  or  and 	Contrast settings of the LCD
 and  and 	Hardware lock / unlock After a hardware lock, an operation of the instrument via display or communication is not possible! The hardware can only be unlocked via the display. An unlock parameter must be entered to do so.

5.3 Local operation








5.3.1 Locking of the configuration mode


The Levelflex can be protected in two ways against unauthorised changing of instrument data, numerical values or factory settings:

"unlock parameter" (0A4):

A value $\lt; 100$ (e.g. 99) must be entered in "unlock parameter" (0A4) in the "diagnostics" (0A) function group. The lock is shown on the display by the  symbol and can be released again either via the display or by communication.

Hardware lock:

The instrument is locked by pressing the  and  and  keys at the same time. The lock is shown on the display by the  symbol and can **only** be unlocked again via the display by pressing the  and  and  keys at the same time again. It is **not** possible to unlock the hardware by communication. All parameters can be displayed even if the instrument is locked.

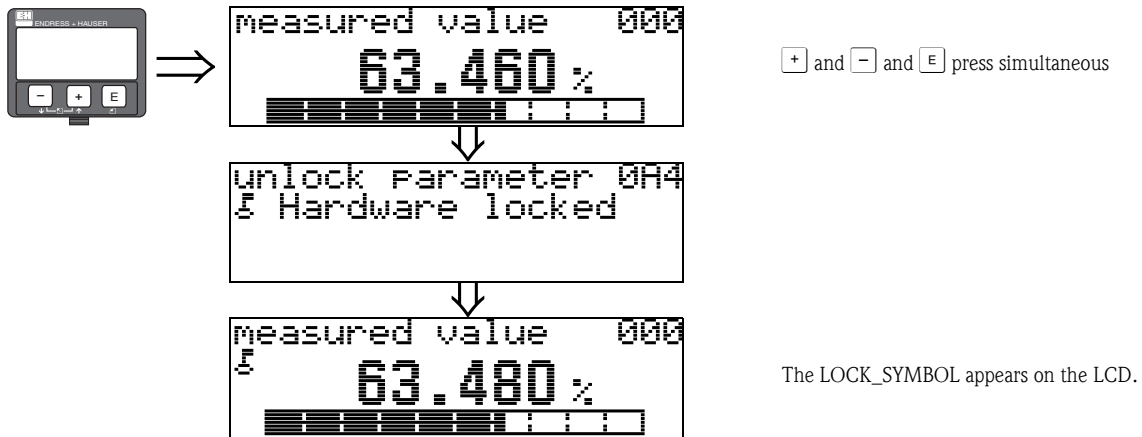

5.3.2 Unlocking of configuration mode

If an attempt is made to change parameters when the instrument is locked, the user is automatically requested to unlock the instrument:

"unlock parameter" (0A4):

By entering the unlock parameter (on the display or via communication)


100 = for HART devices

the Levelflex is released for operation.

Hardware unlock:

After pressing the **+** and **-** and **E** keys at the same time, the user is asked to enter the unlock parameter

100 = for HART devices

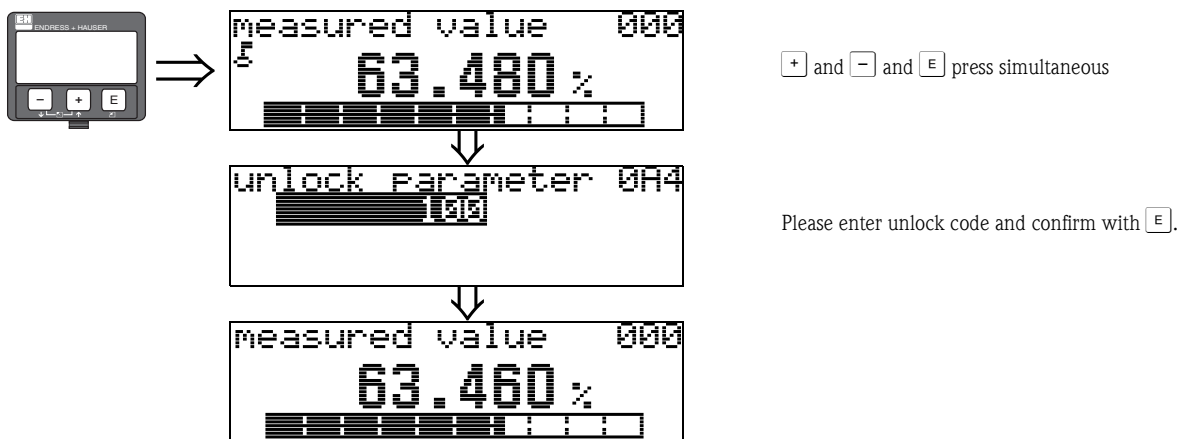

Caution!

Changing certain parameters such as all sensor characteristics, for example, influences numerous functions of the entire measuring system, particularly measuring accuracy. There is no need to change these parameters under normal circumstances and consequently, they are protected by a special code known only to the Endress+Hauser service organization. Please contact Endress+Hauser if you have any questions.

5.3.3 Factory settings (Reset)



Caution!

A reset sets the instrument back to the factory settings. This can lead to an impairment of the measurement. Generally, you should perform a basic setup again following a reset.

A reset is only necessary:

- if the instrument no longer functions
- if the instrument must be moved from one measuring point to another
- if the instrument is being de-installed /put into storage/installed



User input ("reset" (0A3)):

- 333 = customer parameters

333 = reset customer parameters

This reset is recommended whenever an instrument with an unknown 'history' is to be used in an application:

- The Levelflex is reset to the default values.
- **The customer specific tank map is not deleted.**
- The mapping can also be deleted in the "cust. tank map" (055) function of the "extended calibr" (05) function group.
- A linearisation is switched to "linear" although the table values are retained. The table can be reactivated in the "linearisation" (04) function group.

List of functions that are affected by a reset:

- | | |
|------------------------------|---------------------------|
| ■ tank properties (002) | ■ max. scale (046) |
| ■ medium cond. (003) | ■ diameter vessel (047) |
| ■ process proper. (004) | ■ check distance (051) |
| ■ empty calibr. (005) | ■ range of mapping (052) |
| ■ full calibr. (006) | ■ start mapping (053) |
| ■ output on alarm (010) | ■ offset (057) |
| ■ output on alarm (011) | ■ output damping (058) |
| ■ outp. echo loss (012) | ■ low output limit (062) |
| ■ ramp %span/min (013) | ■ curr. output mode (063) |
| ■ delay time (014) | ■ fixed cur. value (064) |
| ■ safety distance. (015) | ■ 4mA value (068) |
| ■ in safety dist. (016) | ■ language (092) |
| ■ overspill protection (018) | ■ back to home (093) |
| ■ end of probe (030) | ■ format display (094) |
| ■ level/ullage (040) | ■ no of decimals (095) |
| ■ linearisation (041) | ■ sep. character (096) |
| ■ customer unit (042) | ■ unlock parameter (0A4) |

A complete "basic setup" (00) must be activated.


5.4 Display and acknowledging error messages

Type of error

Errors that occur during commissioning or measuring are displayed immediately on the local display. If two or more system or process errors occur, the error with the highest priority is the one shown on the display.

The measuring system distinguishes between two types of error:

- **A (Alarm):**
Instrument goes into a defined state (e.g. MAX 22 mA)
Indicated by a constant I_1 symbol.
(For a description of the codes see → 82)
- **W (Warning):**
Instrument continue measuring, error message is displayed.
Indicated by a flashing I_1 symbol.
(For a description of the codes see → 82)
- **E (Alarm / Warning):**
Configurable (e.g. loss of echo, level within the safety distance)
Indicated by a constant/flashing I_1 symbol.
(For a description of the codes see → 82)

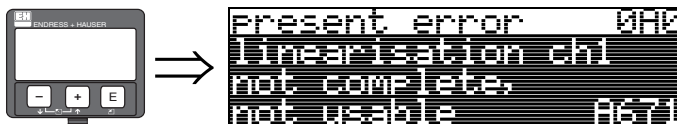

Error messages

Error messages appear as four lines of plain text on the display. In addition, a unique error code is also output. A description of the error codes is given on → 82.

- The "**diagnostics**" (**0A**) function group can display current errors as well as the last errors that occurred.
- If several current errors occur, use \square or \square to page through the error messages.
- The last occurring error can be deleted in the "**diagnostics**" (**0A**) function group with the function "**clear last error**" (**0A2**).


5.5 HART communication

Apart from local operation, you can also parameterise the measuring instrument and view measured values by means of a HART protocol. There are two options available for operation:

- Operation via the universal handheld operating unit, the HART Communicator DXR375.
- Operation via the Personal Computer (PC) using the operating program (e.g. ToF Tool) (For connections, see → 40).

5.5.1 Operation with handheld unit Field Communicator DXR375

All device functions can be adjusted via a menu operation with the handheld unit DXR375.

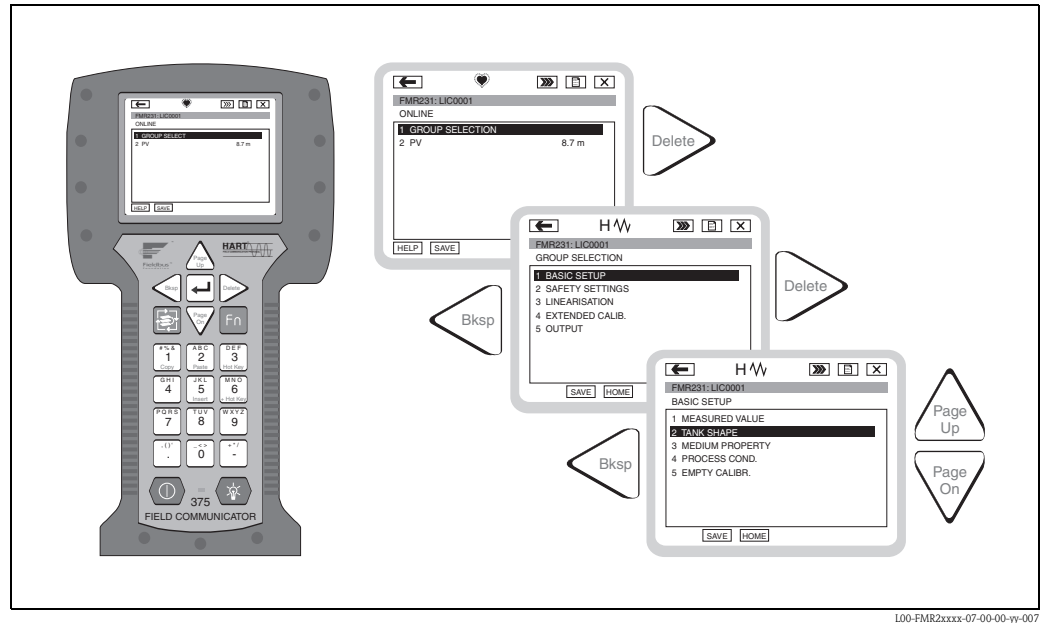

L00-FMR2xxxx-07-00-00-yy-007



Note!

- Further information on the HART handheld unit is given in the respective operating manual included in the transport bag of the DXR375.

5.5.2 ToF Tool operating program

The ToF Tool is a graphical operation software for instruments from Endress+Hauser. It is used to support commissioning, securing of data, signal analysis and documentation of the instruments. It is compatible with the following operating systems: WinNT4.0, Win2000 and WinXP.

The ToF Tool supports the following functions:


- Online configuration of transmitters
- Signal analysis via envelope curve
- Linearisation table (graphically supported creation, editing, importing and exporting)
- Loading and saving of instrument data (Upload/Download)
- Documentation of measuring point




Note!

Further information you may find on the CD-ROM, which is enclosed to the instrument.

Menu-guided commissioning

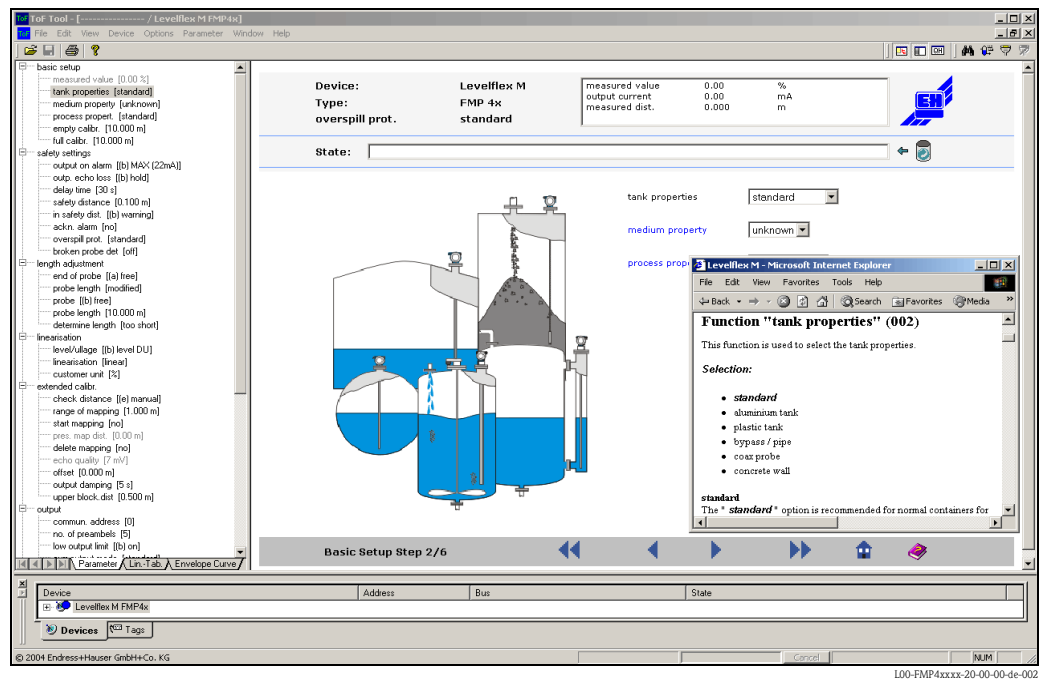

Signal analysis via envelope curve:

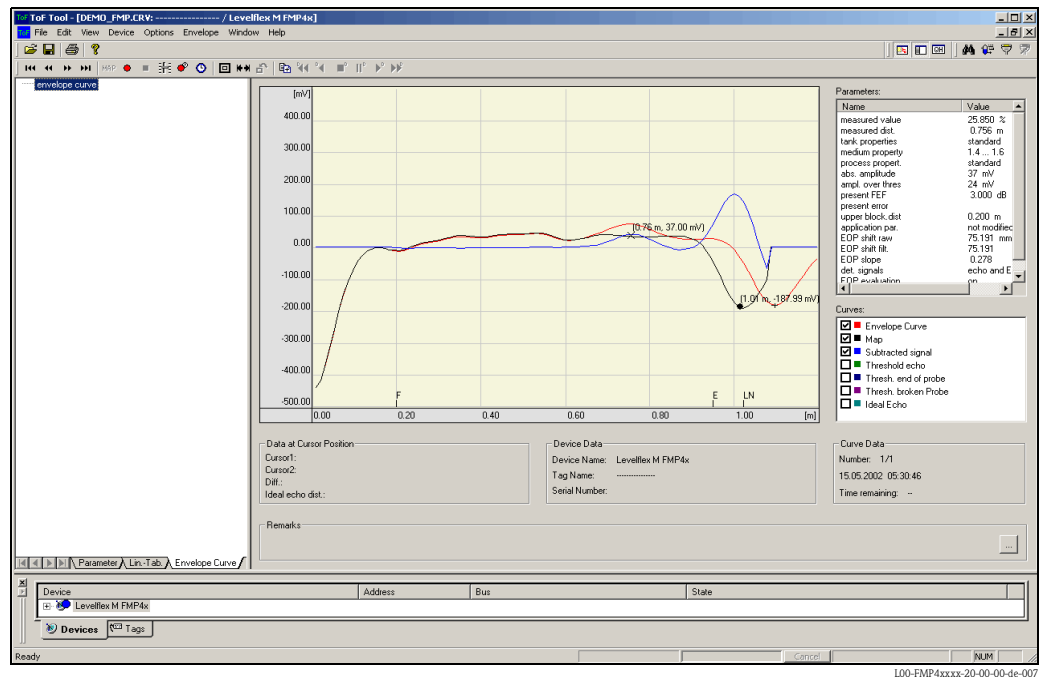

Connection options

- HART with Commubox FXA191/FXA195 (see → 40)
- Service-interface with adapter FXA193 (RS232C) or FXA291 and ToF Adapter FXA291 (USB)

6 Commissioning


6.1 Function check

Make sure that all final checks have been completed before you start up your measuring point:

- Checklist “Post-installation check” (→ 35).
- Checklist “Post-connection check” (→ 35).

6.2 Switching on the measuring device

When the instrument is switched on for the first time, the following messages appear on the display:

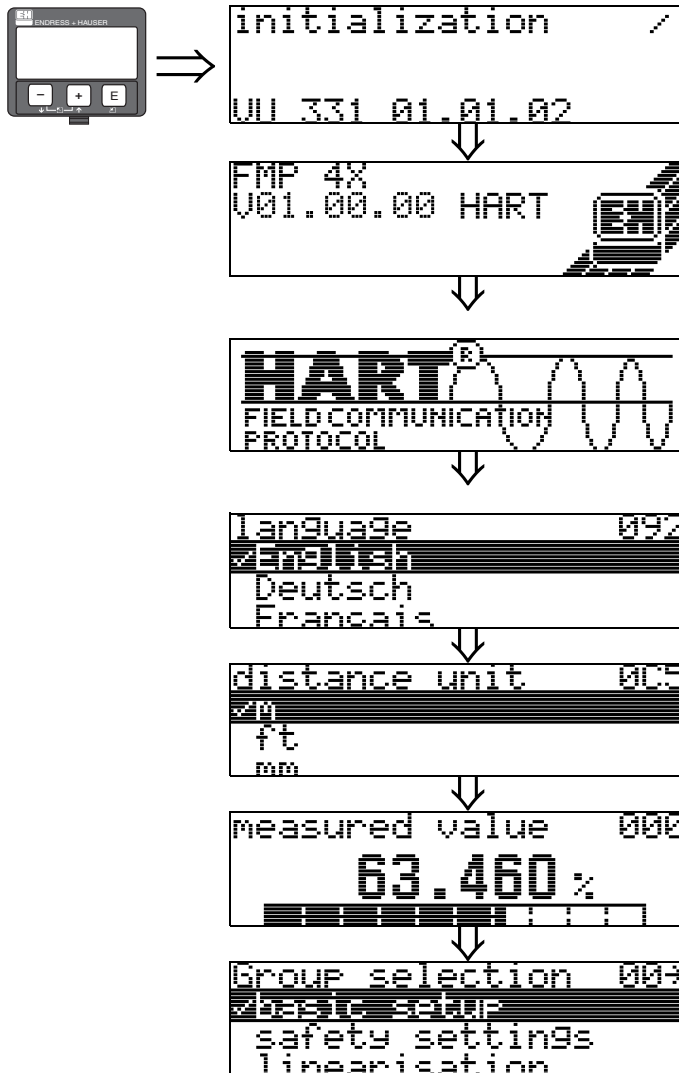

After 5 s, the following message appears

After 5 s, the following message appears (e.g. on HART devices)

After 5 s or after you have pressed **E** the following message appears

Select the language
(this message appears the first time the instrument is switched on)



Select the basic unit
(this message appears the first time the instrument is switched on)

The current measured value is displayed


After **E** is pressed, you reach the group selection.

This selection enables you to perform the basic setup

6.3 Basic Setup

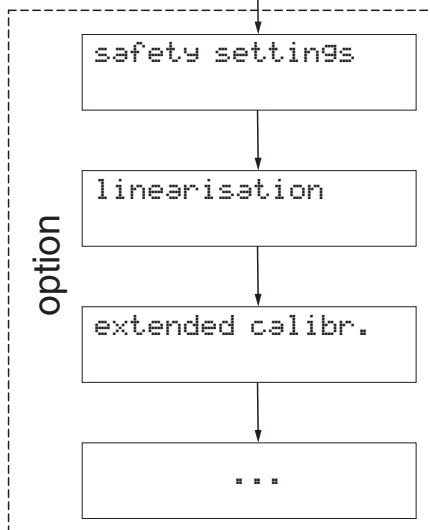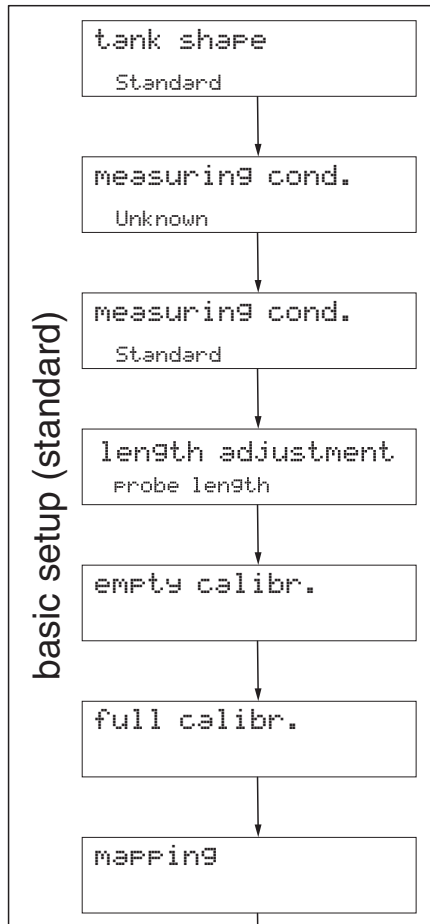

(description see BA 245F)

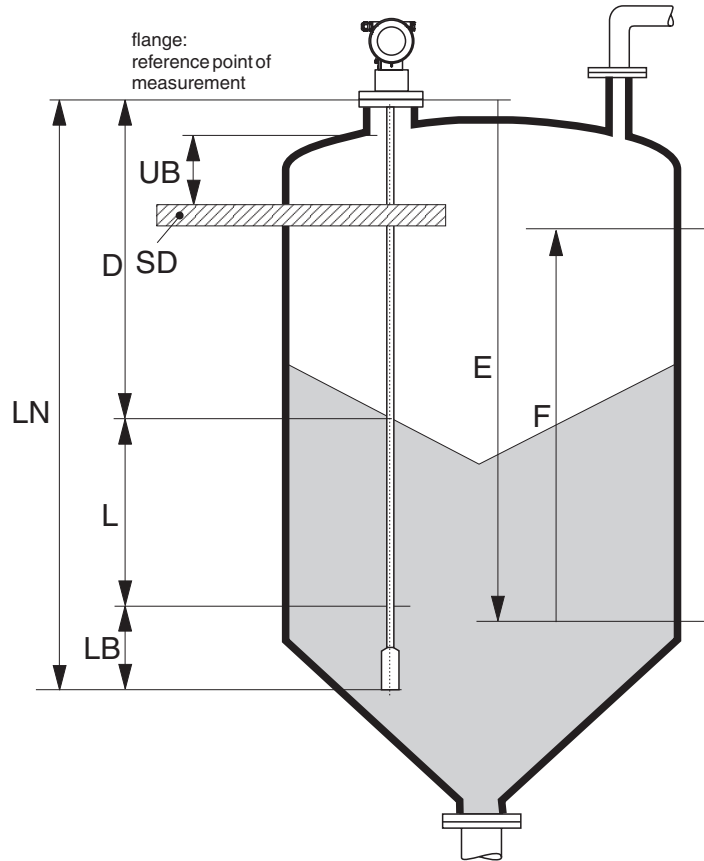

- | | |
|--|--|
| E = empty calibr. (= zero)
setting in 005 | LN = probe length
setting in 033 |
| F = full calibr. (= span)
setting in 006 | UB = upper blocking distance
setting in 059 |
| D = distance (distance flange / product)
display in 0A5 | SD = safety distance
setting in 015 |
| L = level
display in 0A6 | LB = lower blocking
distance |

The basic setup is sufficient for successful commissioning in most applications.

The Levelflex is initially adjusted at the factory to the probe length ordered, so that in most cases only the application parameters, that automatically adapt the device to the measuring conditions, need to be entered. For models with current output, the factory adjustment for zero point and span is F 4 mA and 20 mA, for digital outputs and the display module 0 % and 100 %. A linearisation function with max. 32 points, that is based on a manually or semi-automatically input table, can be activated on-site or via remote operation. This function enables, for example, the conversion of the level into units of volume or weight.



Note!

The Levelflex M allows to check for broken probe. On delivery, this function is switched off, because otherwise shortening of the probe would be mistaken for a broken probe.

In order to activate this function, perform the following steps:

1. With the probe uncovered, perform a mapping ("**range of mapping**" (052) and "**start mapping**." (053)).
2. Activate the "**broken probe det**" (019) function in the "**safety settings**" (01) function group.

Complex measuring operations necessitate additional functions that the user can use to customise the Levelflex as necessary to suit his specific requirements. The functions available to do this are described in detail in the BA245F – "Description of the instrument functions" on the enclosed CD-ROM.

Comply with the following instructions when configuring the functions in the "**basic setup**" (00):

- Select the functions as described on → 42.
- Certain functions (e.g. starting an interference echo mapping (053)) prompt you to confirm your data entries. Press or to select "**YES**" and press to confirm. The function is now started.
- If you do not press a key during a configurable time period (→ function group "**display** (09)"), an automatic return is made to the home position (measured value display).



Note!

- The instrument continues to measure while data entry is in progress, i.e. the current measured values are output via the signal outputs in the normal way.
- If the envelope curve mode is active on the display, the measured values are updated in a slower cycle time. Thus, it is advisable to leave the envelope curve mode after the measuring point has been optimised.
- If the power supply fails, all preset and parameterised values remain safely stored in the EEPROM.



Caution!

All functions are described in detail, as is the overview of the operating menu itself, in the manual BA245F – "**Description of the instrument functions**" on the enclosed CD-ROM.


6.4 Basic Setup with the VU331

Function "measured value" (000)




This function displays the current measured value in the selected unit (see "customer unit" (042)) function). The number of digits after decimal point can be selected in the "no.of decimals" (095) function.

6.4.1 Function group "basic setup" (00)

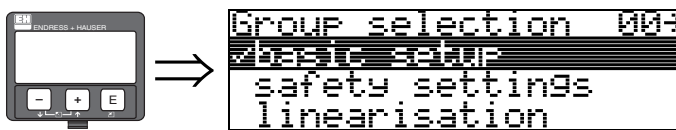

Function "tank properties" (002)

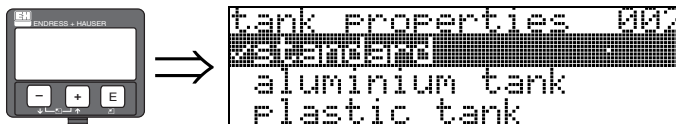

This function is used to select the tank properties.

Selection:

- standard
- aluminium tank
- plastic tank
- bypass / pipe
- coax probe
- concrete wall

standard

The "standard" option is recommended for normal containers for rod and rope probes.

aluminium tank

The "aluminium tank" option is designed especially for high aluminium silos that cause an increased level of noise when empty. This option is only useful for probes longer than (> 4 m). For short probes (< 4 m) select the "standard" option!



Note!

If "aluminium tank" is selected, the device calibrates of its own accord when first filled, depending on the medium's properties. Slope errors can, therefore, occur when beginning the first filling procedure.

plastic tank

Select the "plastic tank" option when installing probes in wood or plastic containers **without** metallic surfaces at the process connection (see installation in plastic containers). When using a metallic surface at the process connection, the "standard" option is sufficient!



Note!

In principle the employment of a metallic surface area should be preferred at the process connection!

bypass / pipe


The "**bypass / pipe**" option is designed especially for the installation of probes in a bypass or a stilling well. If this option is selected, the upper blocking distance is preset to 100 mm.

coax probe

Select the "**coax probe**" option when using a coaxial probe. When this setting is made, the evaluation is adapted to the high sensitivity of the coax probe. This option should, therefore, **not** be selected when using rope or rod probes.

concrete wall

The "**concrete wall**" option takes into account the signal-damping property of concrete walls when mounting with < 1 m distance to the wall.

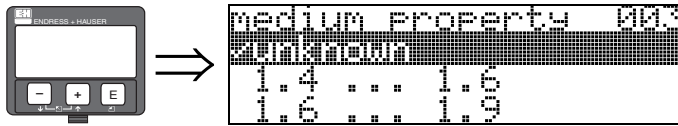Function "medium property" (003)

This function is used to select the dielectric constant.

Selection:

- **unknown**
- 1.4 ... 1.6 (for coaxial and Rod probe with installation in metallic pipes ≤ DN 150)
- 1.6 ... 1.9
- 1.9 ... 2.5
- 2.5 ... 4.0
- 4.0 ... 7.0
- > 7.0

Media group	DC (εr)	Typical bulk solids	Typical liquids	Measuring range	
				bare metallic probes	PA-coated rope probes
1	1.4...1.6		– Condensed gases, e.g. N ₂ , CO ₂	4 m / 157", only coax probe	—
2	1.6...1.9	– Plastic granulate – White lime, special cement – Sugar	– Liquefied gas, e.g. Propane – Solvent – Frigen / Freon – Palm oil	25...30 m / 984...1181"	12,5...15 m / 492...590"
3	1.9...2.5	– Portland cement, plaster	– Mineral oils, fuels	30...35 m / 1181...1378"	—
		– Flour	—	—	15...25 m / 590...984"
4	2.5...4	– Grain, seeds	—	—	25...30 m / 984...1181"
		– Ground stones – Sand	– Benzene, styrene, toluene – Furan – Naphthalene	35 m / 1378"	25...30 m / 984...1181"
5	4...7	– Naturally moist (ground) stones, ores – Salt	– Chlorobenzene, chloroform – Cellulose spray – Isocyanate, aniline	35 m / 1378"	35 m / 1378"
6	> 7	– Metallic powder – Carbon black – Coal	– Aqueous solutions – Alcohols – Ammonia	35 m / 1378"	35 m / 1378"

The lower group applies to very loose or loosened bulk solids. Reduction of the max. possible measuring range by means of:

- extremely loose surfaces of bulk solids, e.g. bulk solids with low piled density when filled pneumatically.

- Build-up, primarily of moist products.



Note!

Due to the high diffusion rate of ammonia it is recommended to use the FMP45 with gas-tight bushing for measurements in this medium.

Function "process propert." (004)




Use this function to adapt the device reaction to the filling speed in the tank. The setting impacts on an intelligent filter.

Selection:

- standard
- fast change
- slow change
- test:no filter

Selection:	standard	fast change	slow change	test:no filter
Application:	For all normal applications, bulk solids and fluids at low to medium filling speed and sufficiently large tanks.	Small tanks, primarily with fluids, at high filling speeds.	Applications with strong surface movement, e.g. caused by stirrer, primarily large tanks with slow to medium filling speed.	Shortest reaction time: <ul style="list-style-type: none"> ■ For test purposes ■ Measurement in small tanks at high filling speeds, if "rapid change" setting is too slow.
2-wire electronics:	Dead time: 4 s Rise time: 18 s	Dead time: 2 s Rise time: 5 s	Dead time: 6 s Rise time: 40 s	Dead time: 1 s Rise time: 0 s
4-wire electronics:	Dead time: 2 s Rise time: 11 s	Dead time: 1 s Rise time: 3 s	Dead time: 3 s Rise time: 25 s	Dead time: 0,7 s Rise time: 0 s

Function "end of probe" (030)

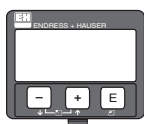


Use this function to select the polarity of the probe end signal. If the probe end is uncovered or in an insulated attachment, there is a negative probe end signal.

The signal from the probe end is positive if the attachment is grounded.

Selection:

- free
- tie down isol.
- tie down gnd.

Function "probe length" (031)

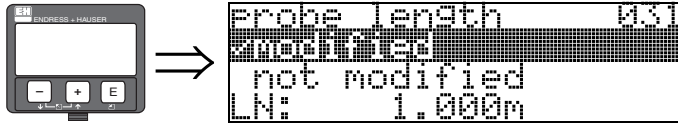

Use this function to select whether the probe length was changed after factory calibration. Only then is it necessary to enter or correct the probe length.

Selection:

- not modified
- modified



Note!

If "modified" was selected in the "**probe length**" (031) function, the probe length is defined in the next step.

Function "probe" (032)



Use this function to select whether the probe is at the time of the commissioning uncovered or covered.

If the probe is uncovered, the Levelflex can determine the probe length automatically "**determine length**" (034) function. If the probe is covered, a correct entry is required in the "**probe length**" (033) function.

Selection:

- free
- covered

Function "probe length" (033)



Use this function, the probe length can be entered manually.

Function "determine length" (034)



Use this function, the probe length can be determined automatically.


Due to the mounting conditions, the automatically determined probe length may be larger than the actual probe (typically 20 .. 30 mm longer). This has no influence on the measuring accuracy. When entering the empty value for a linearisation, please use the "empty calibration" instead of the automatically determined probe length.

Selection:

- length ok
- too short
- too long


After selection "length too short" or "length too long", the calculation of the new value need approx. 10 s.

Function "empty calibr." (005)

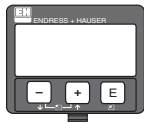

```
empty calibr. 005
0.1234 m
distance Process
conn. to min. level
```

This function is used to enter the distance from the flange (reference point of the measurement) to the minimum level (=zero).

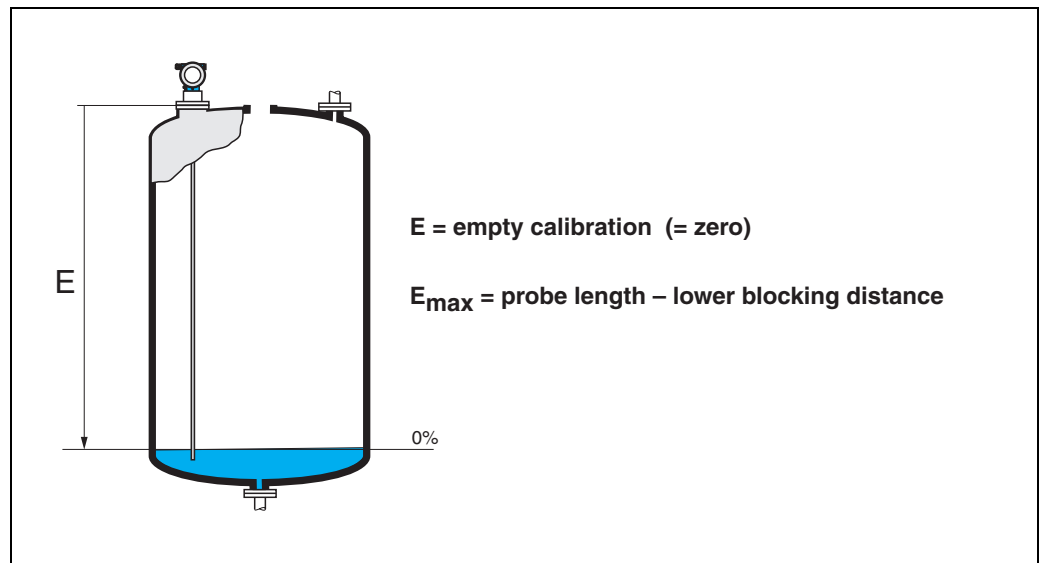


L00-FMP4xxxx-14-00-06-en-008

Function "full calibr." (006)



```
full calibr. 006
0.1234 m
span
```


This function is used to enter the distance from the minimum level to the maximum level (=span).

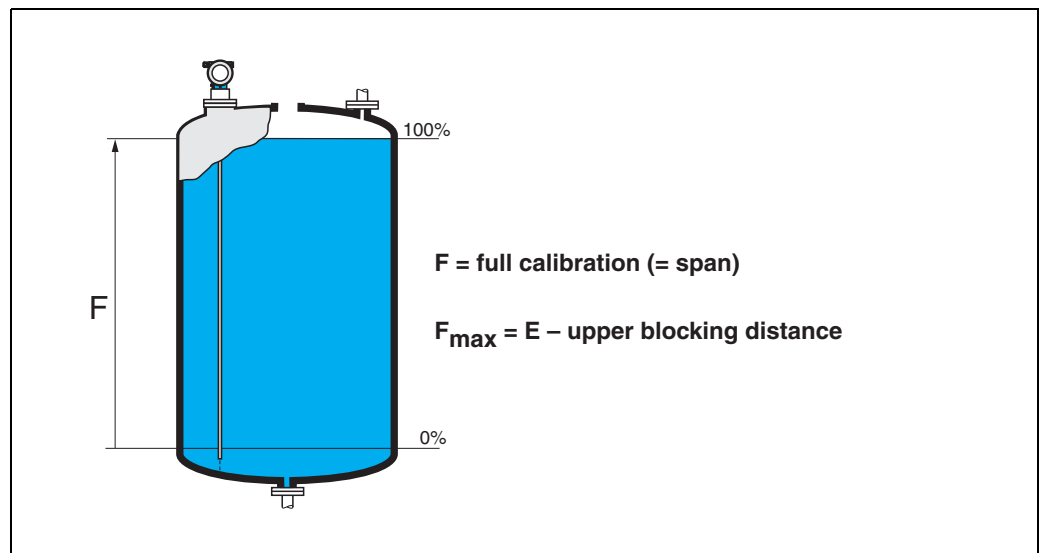

L00-FMP4xxxx-14-00-06-en-009

**Note!**

The usable measuring range lies between the lower and the upper blocking distance. The values for empty distance (E) and span (F) can be set independently of this.

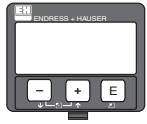Display (008)

```
dist./meas.value 008
dist:    0.180 m
M.val    102.46 %
```

The **distance** measured from the reference point to the product surface and the **meas. value** calculated with the aid of the empty adjustment are displayed. Check whether the values correspond to the actual meas. value or the actual distance. The following cases can occur:

- Distance correct – meas. value correct -> continue with the next function "**check distance**" (051).
- Distance correct – meas. value incorrect -> Check "**empty calibr.**" (005)
- Distance incorrect – meas. value incorrect -> continue with the next function "**check distance**" (051).


Function "check distance" (051)

```
check distance 051
dist. unknown
manual
probe free
```

This function triggers the mapping of interference echoes. To do so, the measured distance must be compared with the actual distance to the product surface. The following options are available for selection:

Selection:

- distance = ok
- dist. too small
- dist. too big
- dist. unknown
- **manual**
- probe free

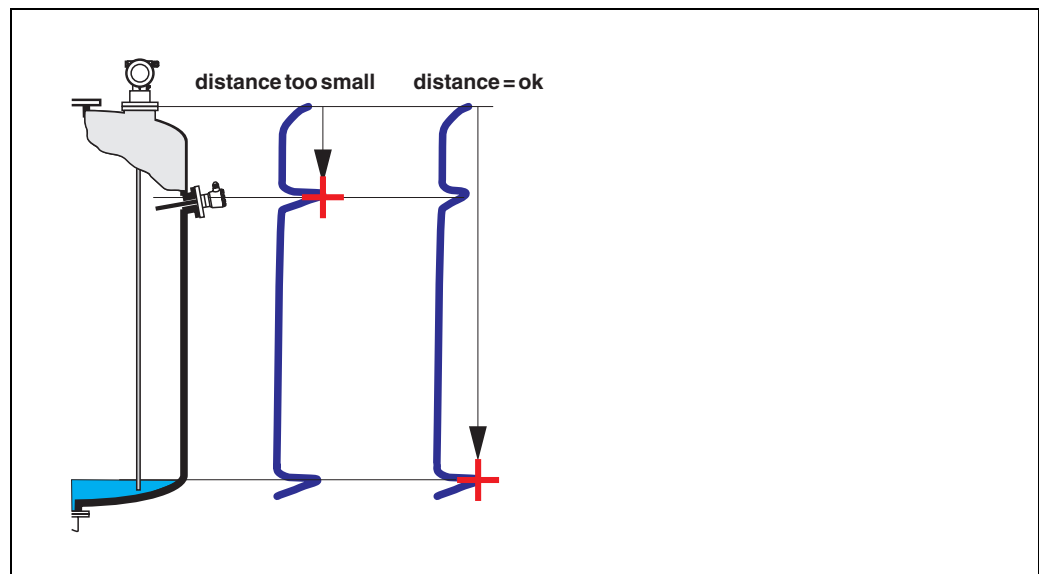

L00-FMP4xxxx-14-00-06-es-010

distance = ok

Use this function at part-covered probe. Choosing function "manual" or "probe free" at free probe.

- mapping is carried out up to the currently measured echo
- The range to be suppressed is suggested in the "range of mapping" (052) function

Anyway, it is wise to carry out a mapping even in this case.



Note!

At free probe, the mapping should be confirmed with the choice "probe free".

dist. too small

- At the moment, an interference is being evaluated
- Therefore, a mapping is carried out including the presently measured echoes
- The range to be suppressed is suggested in the "range of mapping" (052) function

dist. too big

- This error cannot be remedied by interference echo mapping
- Check the application parameters (002), (003), (004) and "probe length." (031)

dist. unknown

If the actual distance is not known, no mapping can be carried out.

manual

A mapping is also possible by manual entry of the range to be suppressed. This entry is made in the "range of mapping" (052) function.



Caution!

The range of mapping must end 0.3 m (20") before the echo of the actual level. In case of empty vessel it is possible to make a map over the whole probe length.

probe free



If the probe is uncovered, mapping is carried out along the whole probe length.



Caution!


Only begin mapping in this function if the probe is safely uncovered. Otherwise, the device will not make correct measurements!

Function "range of mapping" (052)

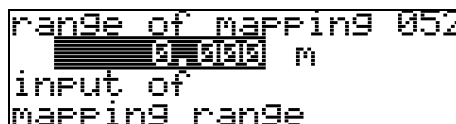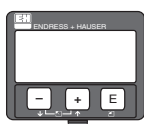

This function displays the suggested range of mapping. The reference point is always the reference point of the measurement (→ 53). This value can be edited by the operator. For manual mapping, the default value is 0,3 m.


Function "start mapping" (053)

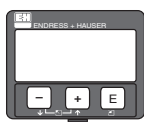

This function is used to start the interference echo mapping up to the distance given in "range of mapping" (052).

Selection:

- off: no mapping is carried out
- on: mapping is started

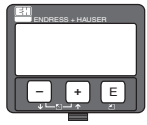Display (008)

```

dist./meas.value 008
dist.      2.463 m
meas.v.    63.422 %
  
```

The distance measured from the reference point to the product surface and the meas. value calculated with the aid of the empty alignment are displayed again. Check whether the values correspond to the actual meas. value or the actual distance. The following cases can occur:

- Distance correct – meas. value correct -> basic setup completed
- Distance incorrect – meas. value incorrect -> a further interference echo mapping must be carried out "**check distance**" (051).
- Distance correct – meas. value incorrect -> check "**empty calibr**" (005)



```

Return to
Group Selection
  
```

After 3 s, the following message appears

```

Group selection 00+
basic setup
safety settings
length adjustment
  
```

**Note!**

After the basic setup, an evaluation of the measurement with the aid of the envelope curve ("**envelope curve**" (0E) function group) is recommended (→ 72).

6.5 Blocking distance

Function "upper block. dist" (059)



For rod probes and for rope probes with lengths of up to 8 m, the upper blocking distance is preset to 0.2 m on delivery.

For rope probes with lengths of more than 8 m, the upper blocking distance is preset to 2.5% of the probe length.

For media with $DC > 7$, the upper blocking distance for rod and rope probes can be reduced to 0.1 m, if the probe is mounted flush with the wall or in a nozzle of maximum 50 mm.

Blocking distance and measuring range

At the lower end of the probe there is no blocking distance but a transition region with reduced accuracy, see section "Maximum measured error" on → 64.

FMP40	LN [m]		UB [m]
	min	max	min
Rope probe	1	35 ¹⁾	0,2 ²⁾
6 mm rod probe	0,3		0,2 ²⁾
16 mm rod probe	0,3	4	0,2 ²⁾
Coax probe	0,3	4	0

1) Larger measuring range available on request.

2) The indicated blocking distances are preset. At media with $DC > 7$, the upper blocking distance UB can be reduced to 0.1 mm for rod and rope probes. The upper blocking distance UB can be entered manually.



Note!

Within the upper and lower blocking distance, a reliable measurement can not be guaranteed.

For stilling well applications

The upper blocking distance (UB) is preset to 100 mm when the "bypass/pipe" parameter has been selected in the "tank properties" (002) function.


Maximum measured error

Typical statements for reference conditions:
DIN EN 61298-2, percentage of the span.


Output:	digital	analogue
sum of non-linearity, non-repeatability and hysteresis	measuring range: - up to 10 m: ± 3 mm - > 10 m: ± 0.03 % for PA coated rope measuring range: - up to 5 m: ± 5 mm - > 5 m: ± 0.1 %	± 0.06 %
Offset / Zero	± 4 mm	± 0.03 %

If the reference conditions are not met, the offset/zero arising from the mounting situation may be up to ± 12 mm. This additional offset/zero can be compensated for by entering a correction (function "**offset**" (057)) during commissioning.

Differing from this, the following measuring error is present in the vicinity of the probe end:

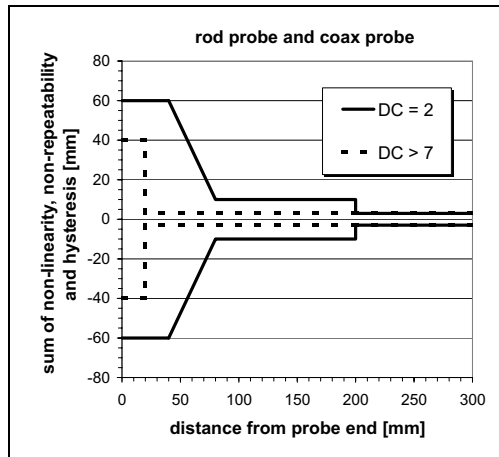

L00-FMP4xxxx-05-00-00-en-001

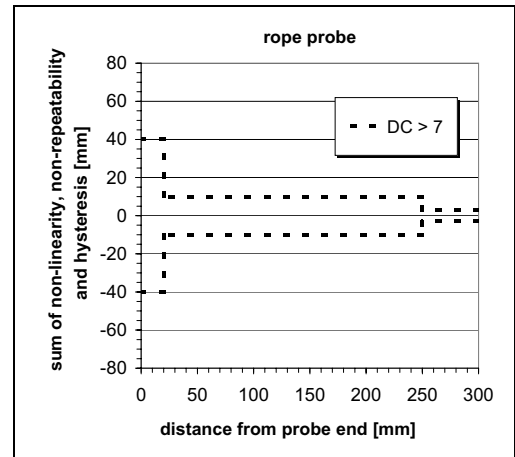


L00-FMP4xxxx-05-00-00-en-002



Note!

Please reenter the blocking distance in the function group "**extended calibr.**" (05) function "**upper block.dist**" (059) when installing the device in a high nozzle: upper blocking distance (UB) = nozzle height (H) + 50 mm.

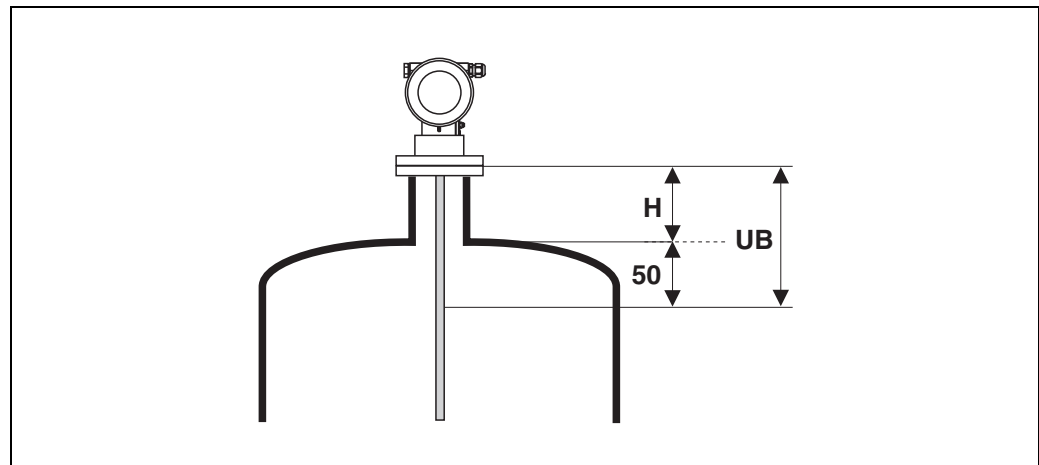


L00-FMP4xxxx-14-00-06-xx-001

6.6 Envelope curve with VU331

After the basic setup, an evaluation of the measurement with the aid of the envelope curve ("envelope curve" (0E)) function group) is recommended.

6.6.1 Function "plot settings" (0E1)

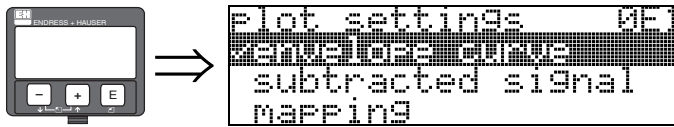

Here you can select which information is shown on the display:

- **envelope curve**
- **subtracted signal**
- **mapping**

6.6.2 Function "recording curve" (0E2)

This function determines whether the envelope curve is read as

- **single curve** or
- **cyclic**




Note!

If the envelope curve mode is active on the display, the measured values are updated in a slower cycle time. Thus, it is advisable to leave the envelope curve mode after the measuring point has been optimised.

6.7 Function "envelope curve display" (0E3)


You can obtain the following information from the envelope curve display in this function:

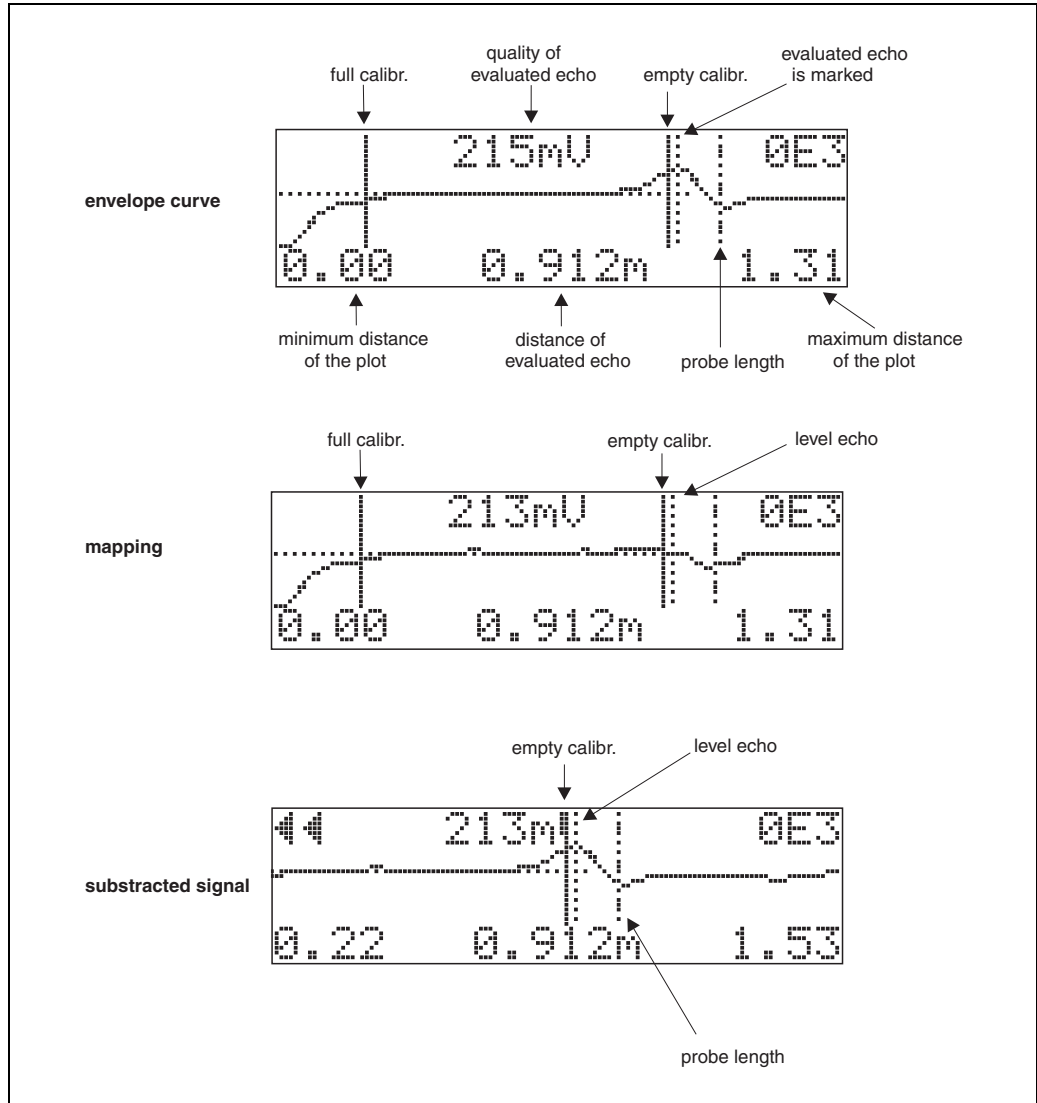

L00-FMPxxxxx-07-00-00-en-003

Navigation in the envelope curve display

Using navigation, the envelope curve can be scaled horizontally and vertically and shifted to the left or the right. The active navigation mode is indicated by a symbol in the top left hand corner of the display.

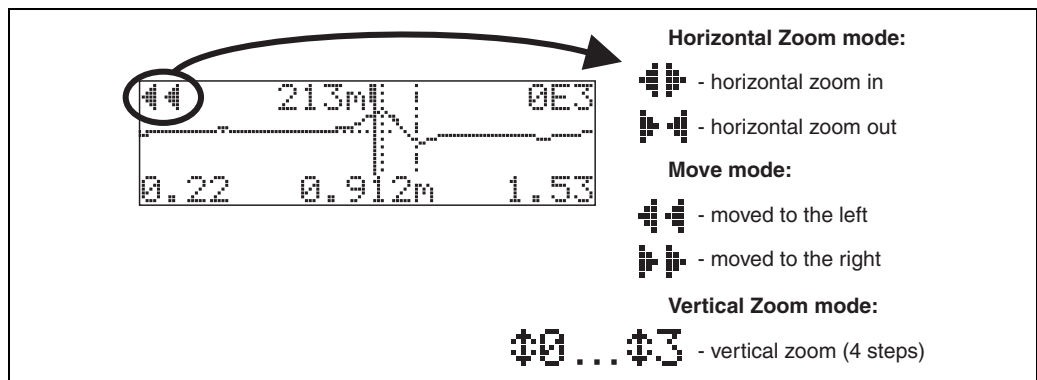


L00-FMPxxxxx-07-00-00-en-004

Horizontal-Zoom-Modus

Press $\boxed{+}$ or $\boxed{-}$, to switch to the envelope curve navigation. You are then in Horizontal Zoom mode. Either \mathbb{H} or \mathbb{H} is displayed.

You now have the following options:

- $\boxed{+}$ increases the horizontal scale.
- $\boxed{-}$ decreases the horizontal scale.

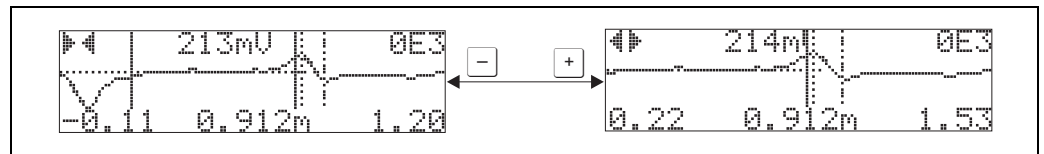


L00-FMPxxxx-07-00-00-xx-001

Move-Modus

Then press \boxed{E} , to switch to Move mode. Either \mathbb{H} or \mathbb{H} is displayed.

You now have the following options:

- $\boxed{+}$ shifts the curve to the right.
- $\boxed{-}$ shifts the curve to the left.

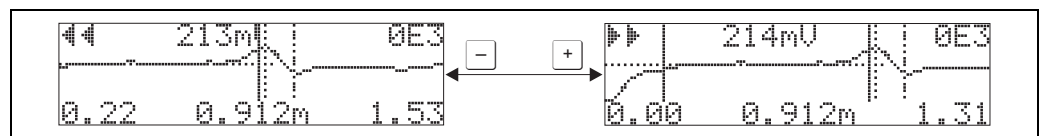

L00-FMPxxxx-07-00-00-xx-002


Vertical-Zoom-Modus

Press \boxed{E} , once more to switch to Vertical Zoom mode. \mathbb{H} is displayed.

You now have the following options:

- $\boxed{+}$ increases the vertical scale.
- $\boxed{-}$ decreases the vertical scale.


The display icon shows the current zoom factor (\mathbb{H} to \mathbb{H}).

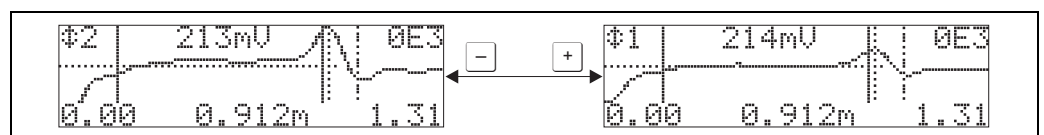

L00-FMPxxxx-07-00-00-xx-003

Exiting the navigation

- Press \boxed{E} again to run through the different modes of the envelope curve navigation.
- Press $\boxed{+}$ and $\boxed{-}$ to exit the navigation. The set increases and shifts are retained. Only when you reactivate the "recording curve" (OE2) function does the Levelflex use the standard display again.

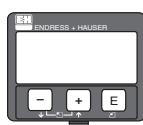

Return to
Group Selection



Group selection OE2
~~Envelope curve~~
 display
 diagnostics

After 3 s, the following message appears

6.8 Basic Setup with the ToF Tool


To carry out the basic setup with the ToF Tool operating program, proceed as follows:

- Start the ToF Tool operating program and establish a connection
- Select the "**basic setup**" function group in the navigation bar

The following display appears on the screen:

Basic Setup step 1/6:

- Status image
- Enter the measuring point description (TAG number).

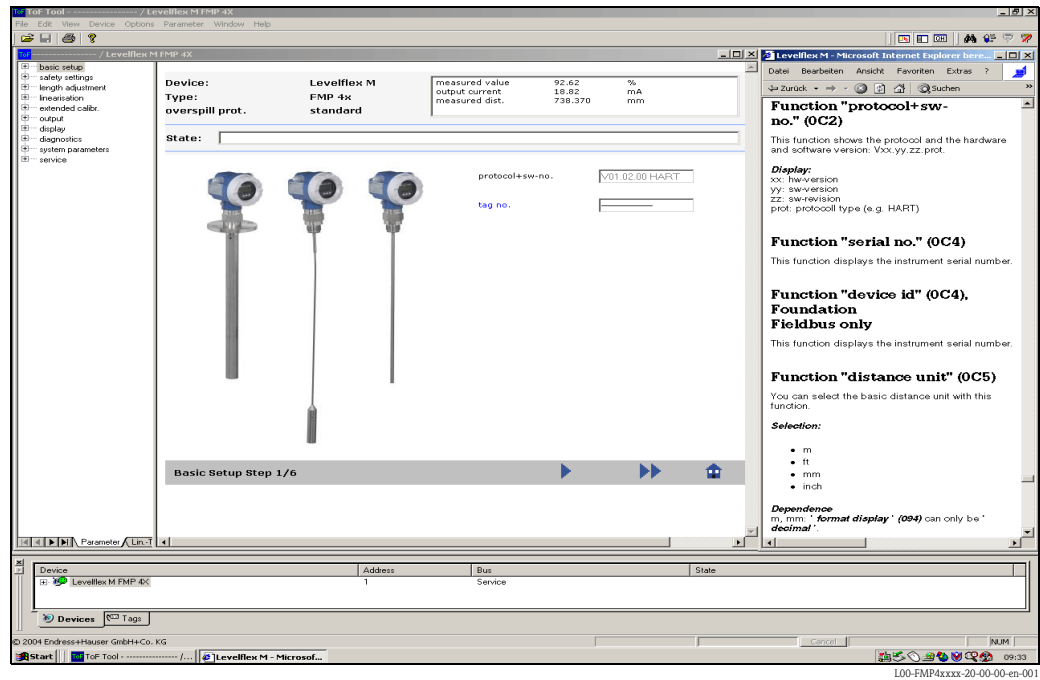


Note!

- Each parameter that is changed must be confirmed with the **RETURN** key!
- The "**Next**" button moves you to the next screen display:


Basic Setup step 2/6:

- Enter the application parameters:
 - tank properties (for a description, → 55)
 - medium properties (for a description, → 56)
 - process properties (for a description, → 57)

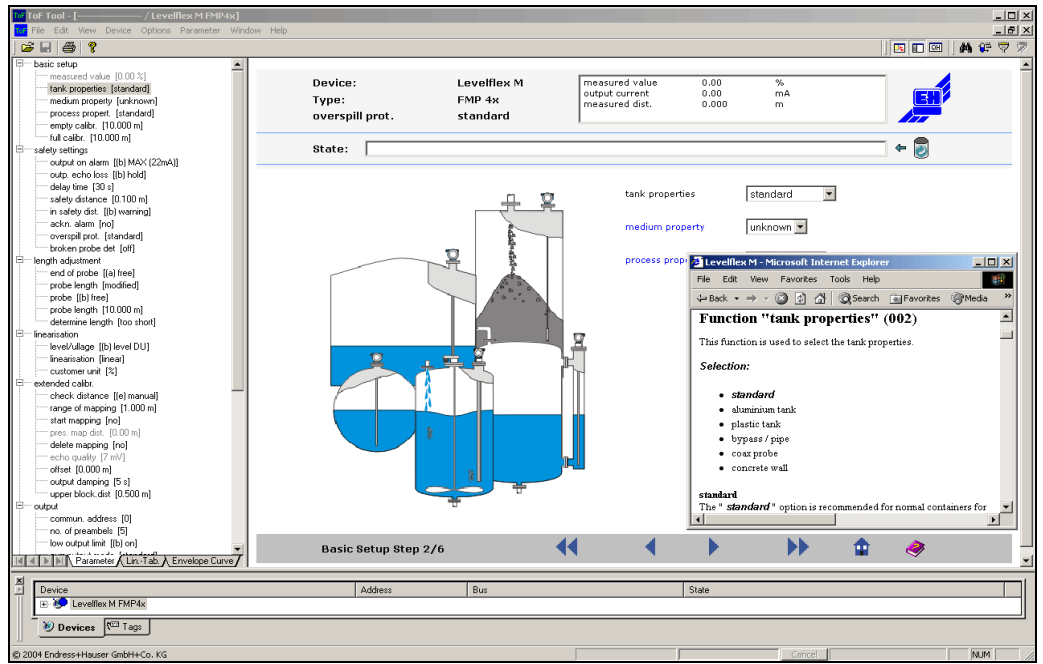


Basic Setup step 3/6:

- Enter the application parameters:
 - end of probe (for a description, → 57)

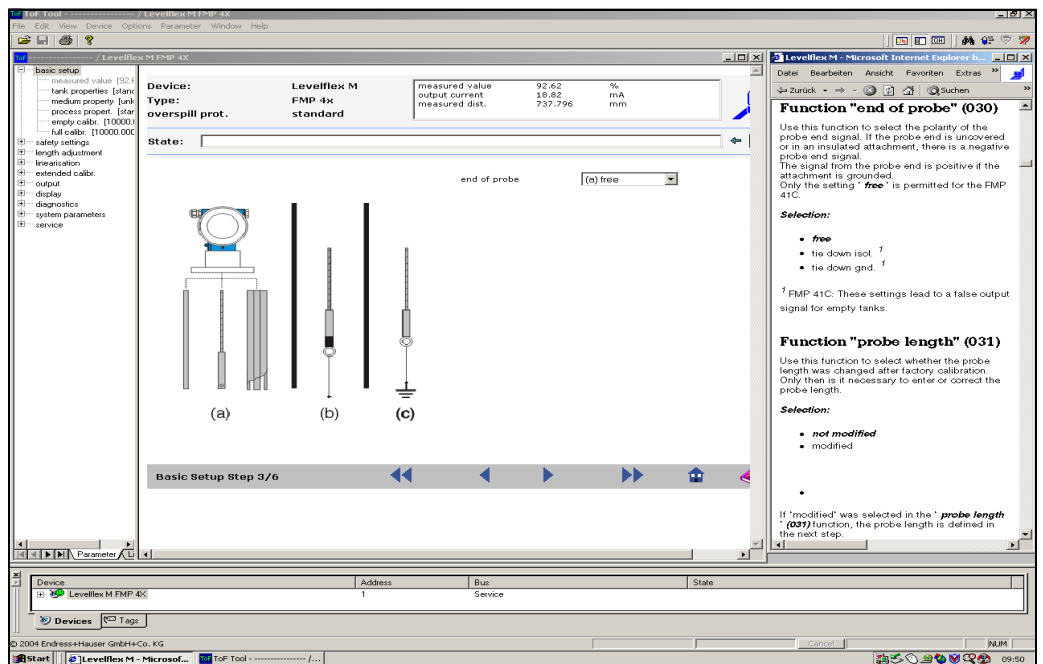


Basic Setup step 4/6:

- Enter the application parameters:
 - probe length (for a description, → 58)
 - probe (for a description, → 58)
 - probe length (for a description, → 58)
 - determine length (for a description, → 58)

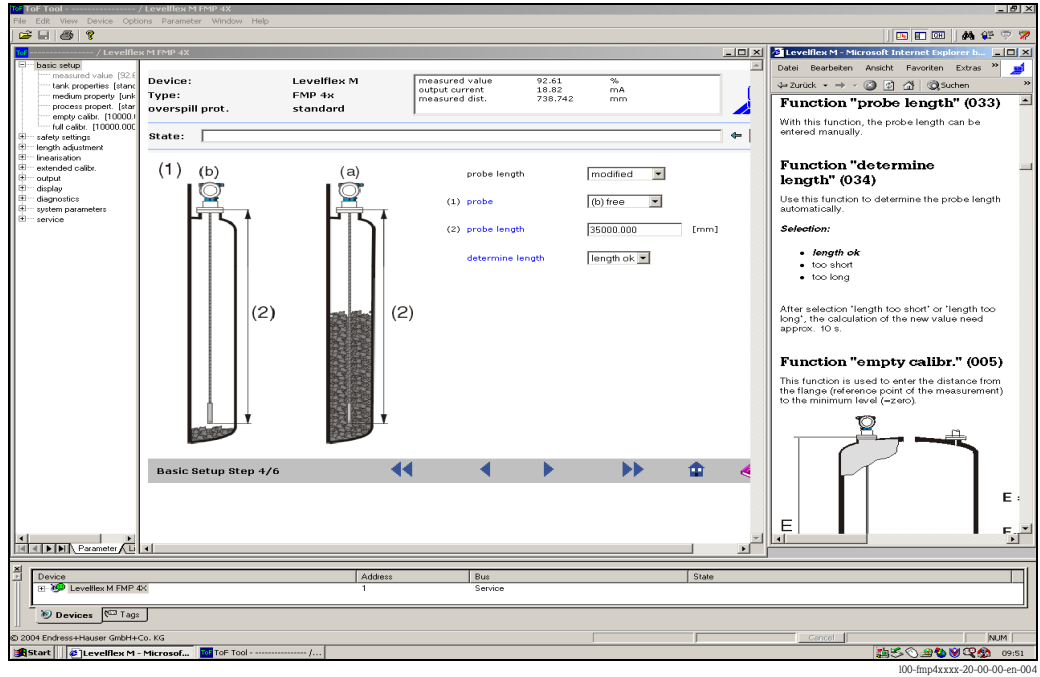


Basic Setup step 5/6:

- Enter the application parameters:
 - empty calibration (for a description, → 59)
 - full calibration (for a description, → 59)

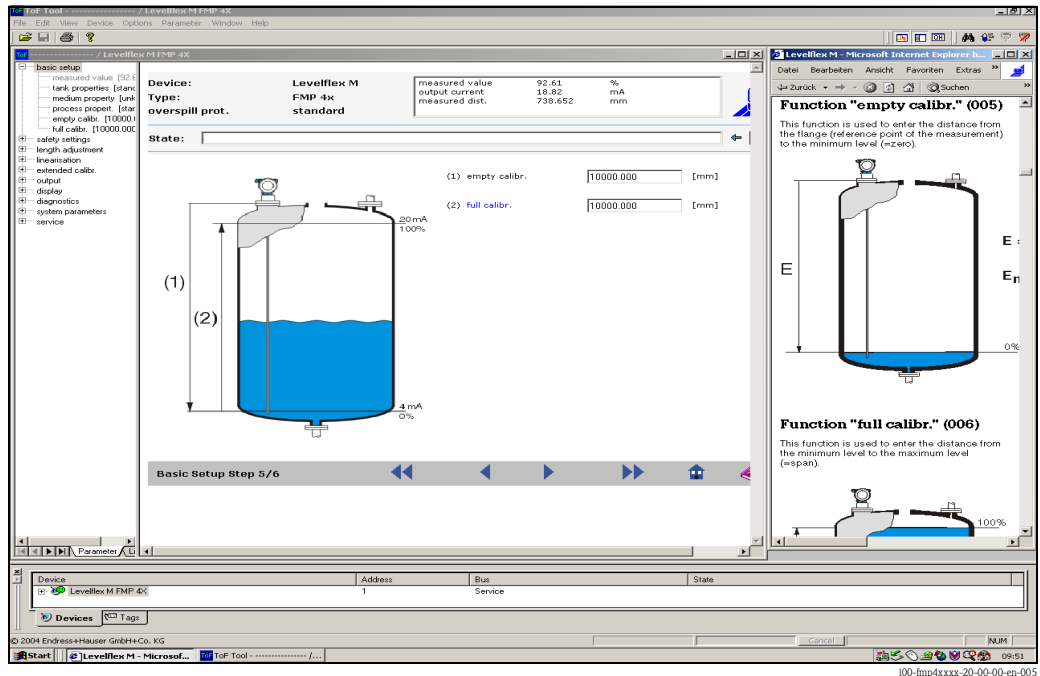

Basic Setup step 6/6:

- This step starts the tank mapping
- The measured distance and the current measured value are always displayed in the header
- for a description, → 61)

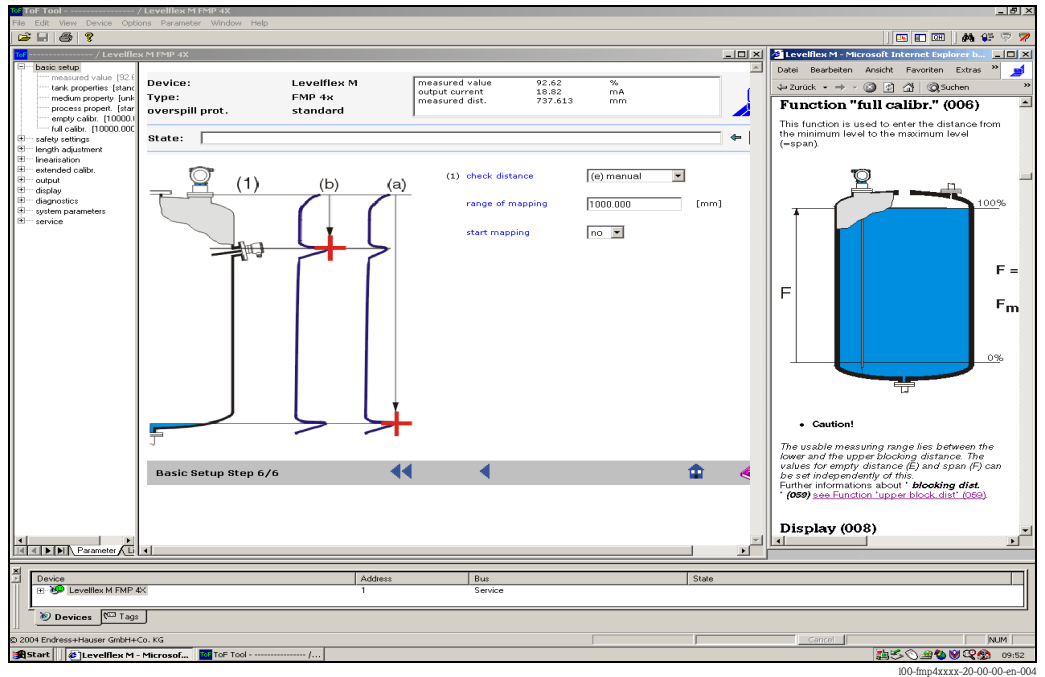


6.8.1 Blocking distance



Note!


Please reenter the blocking distance in the function "**upper block.dist**" (059) when installing the device in a high nozzle: upper blocking distance (UB) = nozzle height (H) + 50 mm.

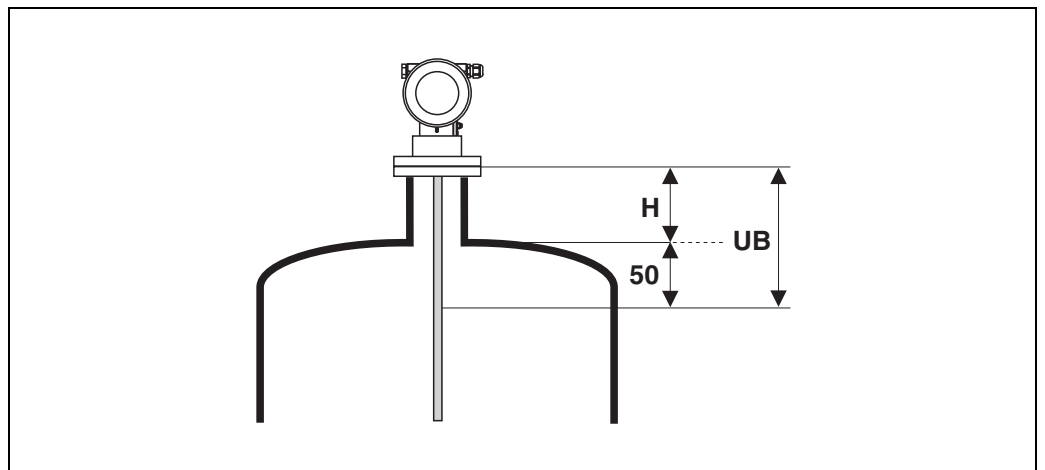

L00-FMP4xxxx-14-00-06-xx-001

6.8.2 Envelope curve with the ToF Tool

After the basic setup, an evaluation of the measurement using the envelope curve is recommended (→ 72).

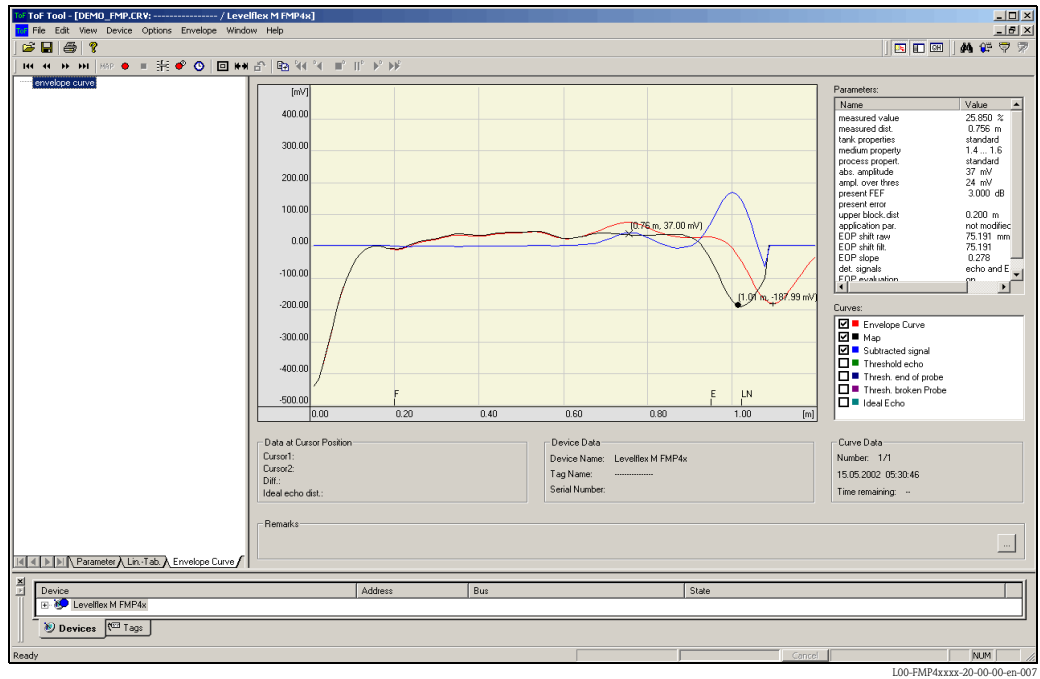


Note!

For the optimization of the measurement the installation of the Levelflex in another place can be executed when interference echoes.

An evaluation of the measurement with the aid of the envelope curve

Typical curve shape:


The following examples display typical curve shapes for a rope or rod probe in an empty tank. For all probe types, a negative probe end signal is shown. For rope probes, the end weight causes an additional preliminary positive echo (see rope probe diagram).

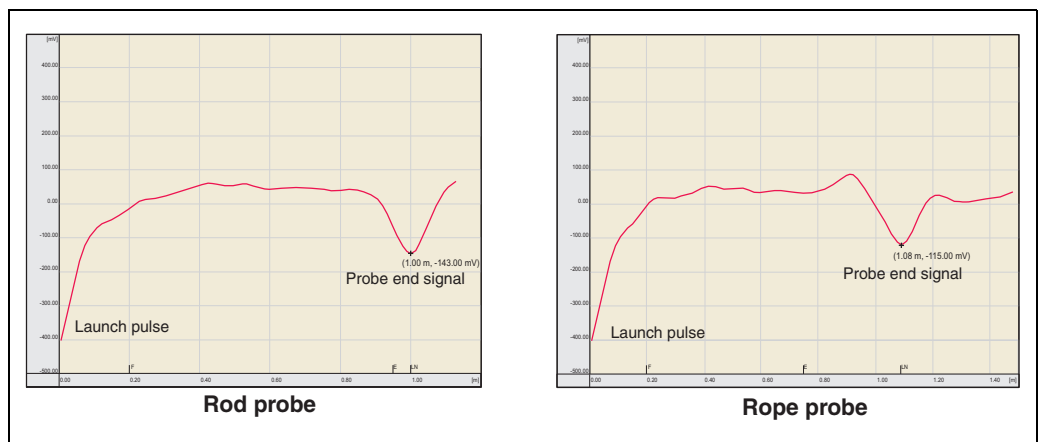

Level echoes are detected as positive signals in the envelope curve. Interference echoes can be both positive (e.g. reflections from internals) and negative (e.g. nozzles). The envelope curve, the map and the differential curve are used for the evaluation. Level echoes are searched for in the differential curve.

Evaluation of the measurement:

- The map must correspond to the course of the envelope curve (for rod probes up to approx. 5 cm and for rope probes up to approx. 25 cm before the end of the probe) when the tank is empty.
- Amplitudes in the differential curve should be at a level of 0 mV when the tank is empty and lie within the span that is specified by the probe-specific blocking distances. In order to not detect any interference echoes, there must be no signals that exceed the echo threshold when the tank is empty.
- For partially-filled tanks, the map may only differ from the envelope curve at the position of the level echo. The level signal is then detected unequivocally as a positive signal in the differential curve. For detecting the level echo, the amplitude must lie above the echo threshold.

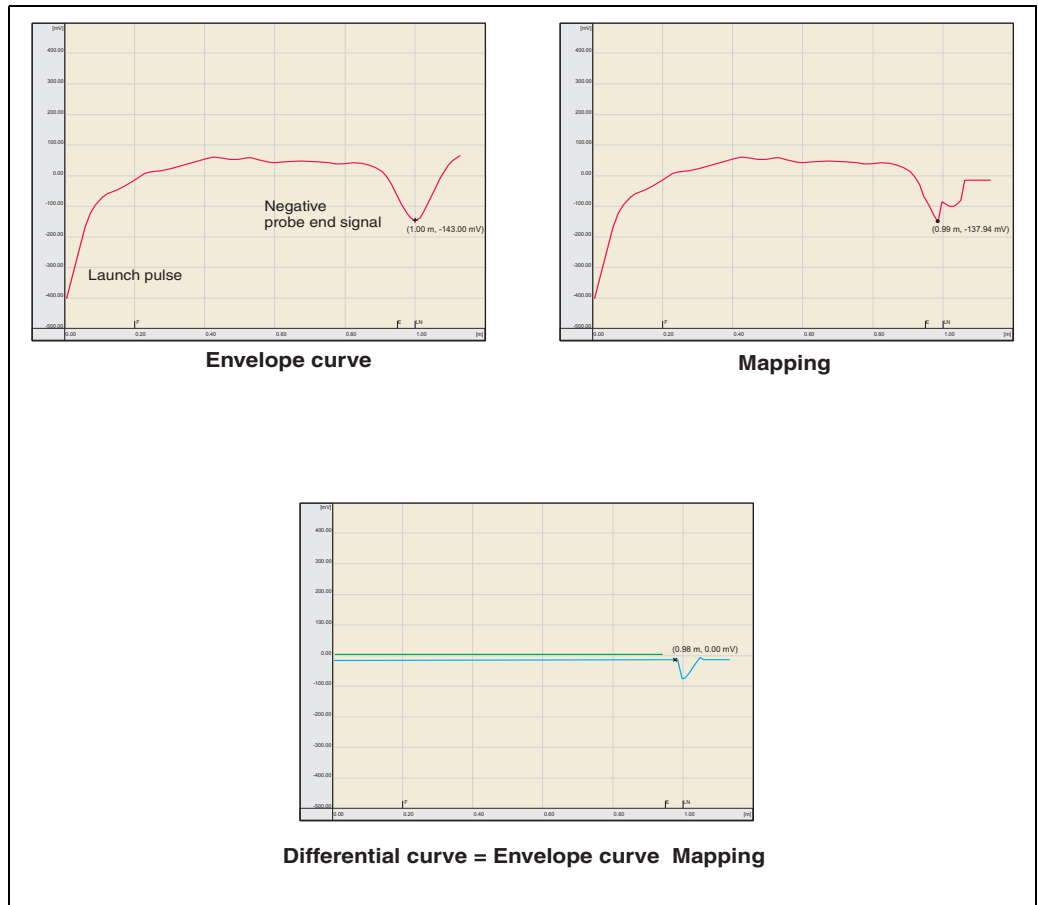

L00-FMP40xxxx-05-00-00-en-025

6.8.3 User-specific applications (operation)

For details of setting the parameters of user-specific applications, see separate documentation BA245F/00/en - description of the instrument functions of the Levelflex M.


7 Maintenance

The Levelflex M measuring instrument requires no special maintenance.

Exterior cleaning

When cleaning the Levelflex M, always use cleaning agents that do not attack the surface of the housing and the seals.

Repairs

The Endress+Hauser repair concept assumes that the measuring devices have a modular design and that customers are able to undertake repairs themselves. Spare parts are contained in suitable kits. They contain the related replacement instructions. All the spare parts kits which you can order from Endress+Hauser for repairs to the Levelflex M are listed with their order numbers on →  86 and 89. Please contact Endress+Hauser Service for further information on service and spare parts.

Repairs to Ex-approved devices

When carrying out repairs to Ex-approved devices, please note the following:

- Repairs to Ex-approved devices may only be carried out by trained personnel or by Endress+Hauser Service.
- Comply with the prevailing standards, national Ex-area regulations, safety instructions (XA) and certificates.
- Only use original spare parts from Endress+Hauser.
- When ordering a spare part, please note the device designation on the nameplate. Only replace parts with identical parts.
- Carry out repairs according to the instructions. On completion of repairs, carry out the specified routine test on the device.
- Only Endress+Hauser Service may convert a certified device into a different certified variant.
- Document all repair work and conversions.

Replacement

After a complete Levelflex M or electronic module has been replaced, the parameters can be downloaded into the instrument again via the communication interface. Prerequisite to this is that the data were uploaded to the PC beforehand using the ToF Tool. Measurement can continue without having to carry out a new setup.

- You may have to activate linearisation (see BA245F – "Description of the instrument functions" on the enclosed CD-ROM.)
- You may need to record the tank map again (see Basic Setup)


After an probe or electronic has been replaced, a new calibration must be carried out. This is described in the repair instructions.

8 Accessories

Various accessories, which can be ordered separately from Endress+Hauser, are available for the Levelflex M.

Weather protection cover


A Weather protection cover made of stainless steel is recommended for outdoor mounting (order code: 543199-0001). The shipment includes the protective cover and tension clamp.

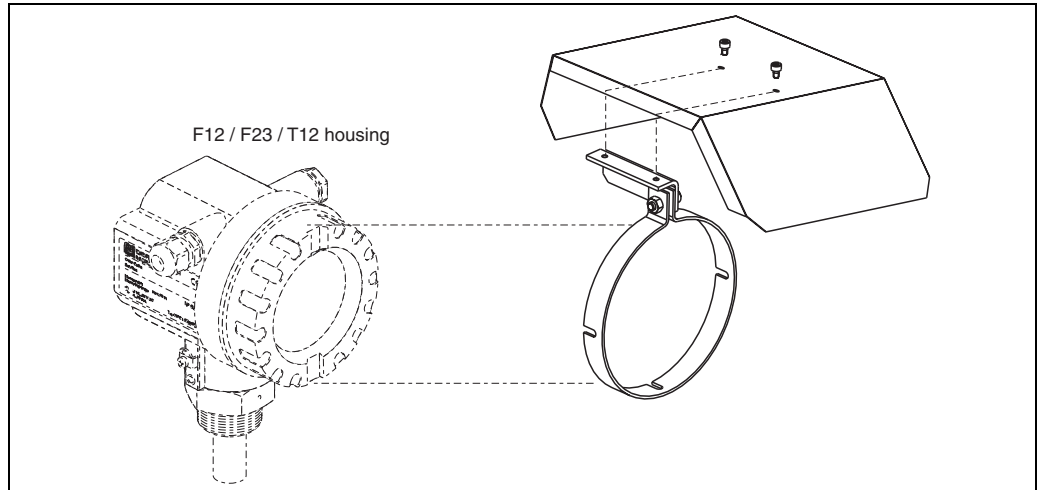

L00-FMR2xxxx-00-00-06-en-001


Flange with horn adapter to adapt on the following nozzles

Horn adapter	Order-No.
G 1 1/2" at DN 200 / PN 16	52014251
G 1 1/2" at DN 250 / PN 16	52014252
NPT 1 1/2" at 8" / 150 psi	52014253
NPT 1 1/2" at 10" / 150 psi	52014254
Material: 1.4435	

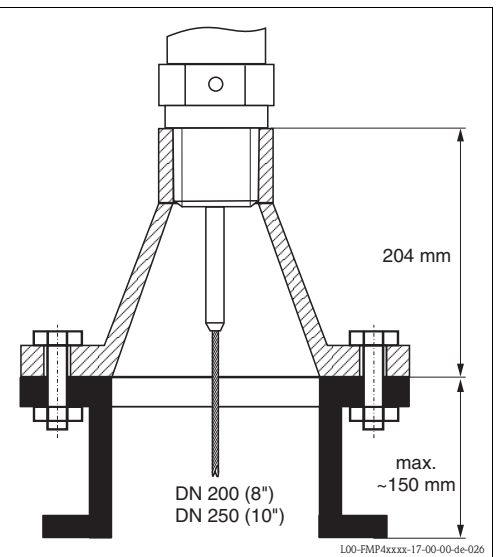

L00-FMP4xxx-17-00-00-de-026

Adapter flange FAU70E / FAU70A

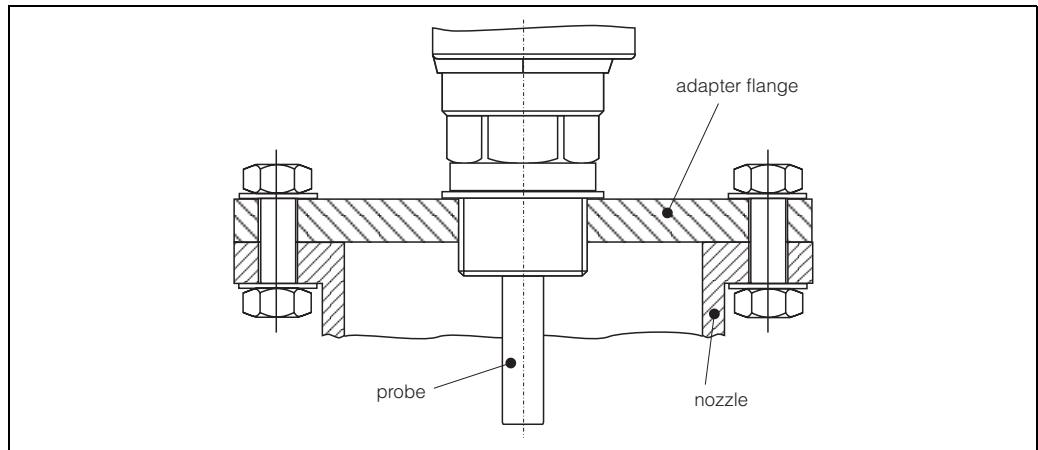

L00-FMP4xxxx-00-00-00-es-001

Version	
12	DN 50 PN 16
14	DN 80 PN 16
15	DN 100 PN 16
Thread	
3	G 1½, ISO 228
Material	
2	1.4435
FAU70E	Complete product designation

Version	
12	ANSI 2" 150 psi
14	ANSI 3" 150 psi
15	ANSI 4" 150 psi
Thread	
3	NPT 1½ - 11.5
Material	
2	1.4435
FAU70A	Complete product designation

Commubox FXA191 HART

For intrinsically safe communication with ToF Tool/FieldCare via the RS232C interface. For details refer to TI237F/00/en.

Commubox FXA195 HART

For intrinsically safe communication with ToF Tool/FieldCare via the USB interface. For details refer to TI404F/00/en.

Commubox FXA291

The Commubox FXA291 connects Endress+Hauser field instruments with CDI interface (= Endress+Hauser Common Data Interface) to the USB interface of a personal computer or a notebook. For details refer to TI405C/07/en.



Note!

For the following Endress+Hauser instruments you need the "ToF Adapter FXA291" as an additional accessory:

- Cerabar S PMC71, PMP7x
- Deltabar S PMD7x, FMD7x
- Deltapilot S FMB70
- Gammapilot M FMG60
- Levelflex M FMP4x
- Micropilot FMR130/FMR131
- Micropilot M FMR2xx
- Micropilot S FMR53x, FMR540
- Prosonic FMU860/861/862
- Prosonic M FMU4x
- Tank Side Monitor NRF590 (with additional adapter cable)


ToF Adapter FXA291

The ToF Adapter FXA291 connects the Commubox FXA291 via the USB interface of a personal computer or a notebook to the following Endress+Hauser instruments:

- Cerabar S PMC71, PMP7x
- Deltabar S PMD7x, FMD7x
- Deltapilot S FMB70
- Gammapilot M FMG60
- Levelflex M FMP4x
- Micropilot FMR130/FMR131
- Micropilot M FMR2xx
- Micropilot S FMR53x, FMR540
- Prosonic FMU860/861/862
- Prosonic M FMU4x
- Tank Side Monitor NRF590 (with additional adapter cable)

For details refer to KA271F/00/a2.


Extension rod / Centering

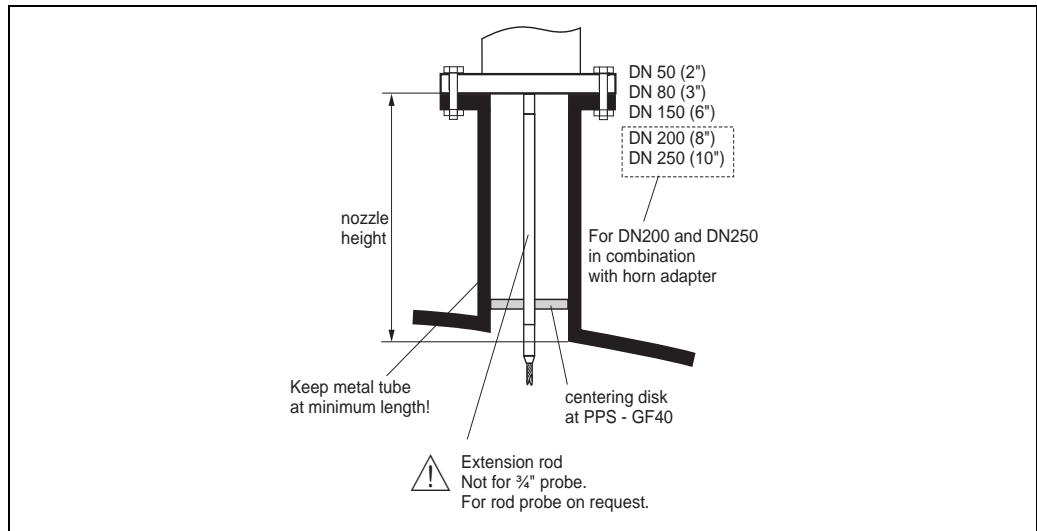

L00-FMP4xxxx-17-00-00-en-025

Certificate	
A	For non-hazardous areas
1	ATEX II 1G (in preparation)
2	ATEX II 1D
Extension rod	
1	115mm-rod for nozzle height 150...250mm / 6...10"
2	215mm-rod for nozzle height 250...350mm / 10...14"
3	315mm-rod for nozzle height 350...450mm / 14...18"
4	415mm-rod for nozzle height 450...550mm / 14...22"
9	Special version
Centre disk	
A	without centre disk
B	DN40 / 1 1/2", inside diam. 40-45mm
C	DN50 / 2", inside diam. 50...57mm
D	DN80, inside diam. 80...85mm
E	3", inside diam. 76...78mm
G	DN100 / 4", inside diam. 100...110mm
H	DN150 / 6", inside diam. 152...164mm
J	DN200 / 8", inside diam. 201...215mm
K	DN250 / 10", inside diam. 253...269mm
Y	Special version
HMP40-	complete product designation

Remote display FHX40

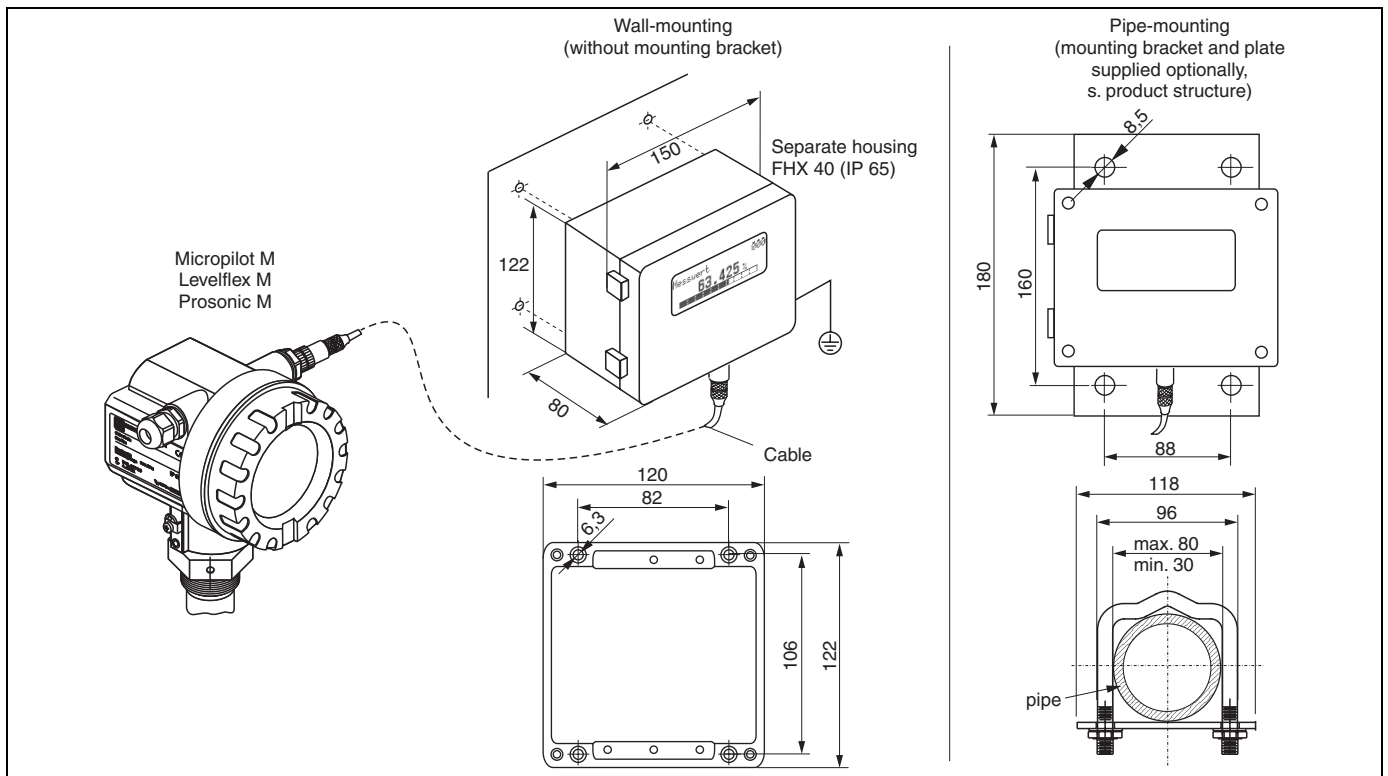

L00-FMxxxxxx-00-00-06-en-003

Technical data (cable and housing) and product structure:

Max. cable length	20 m (65 ft)
Temperature range	-30 °C...+70 °C (-22 °F...158 °F)
Degree of protection	IP65 acc. to EN 60529 (NEMA 4)
Materials	Housing: AlSi12; cable glands: nickle plated brass
Dimensions [mm] / [inch]	122x150x80 (HxWxD) / 4.8x5.9x3.2

Approval:	
A	Nn-hazardous area
1	ATEX II 2 G EEx ia IIC T6, ATEX II 3D
S	FM IS Cl.I Div.1 Gr.A-D
U	CSA IS Cl.I Div.1 Gr.A-D
N	CSA General Purpose
K	TIIS ia IIC T6 (in preparation)
Cable:	
1	20m/65ft; for HART
5	20m/65ft; for PROFIBUS PA/FOUNDATION Fieldbus
Additional option:	
A	Basic version
B	Mounting bracket, pipe 1" / 2"
FHX40 -	Complete product designation

For connection of the remote display FHX40 use the cable which fits the communication version of the respective instrument.


Isolated tie down

Mounting-kit	Order - No.
for 4mm rope probe	52014249
for 6mm rope probe	52014250

If a rope probe has to be fixed and a secure grounded mounting is not possible, we recommend using the insulating sleeve made of PEEK-GF30 with accompanying DIN 580 eye-bolt made of stainless steel.
Max. process temp. 150 °C.

Due to the risk of electrostatic charge, the insulating sleeve is not suitable for use in hazardous areas. In these cases the fixing must be reliably grounded (→ 29).

Reliable, isolated mounting

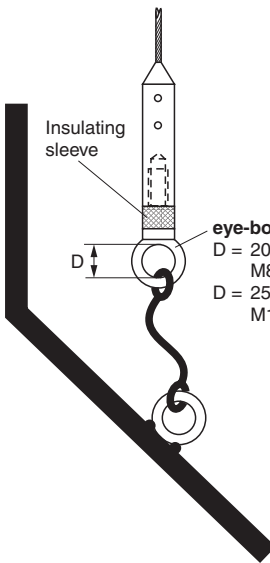


Insulating sleeve

eye-bolt
D = 20 mm at
M8 DIN 580 for 4 mm rope
D = 25 mm at
M10 DIN 580 for 6 mm rope

L00-FMP4xxxx-17-00-00-en-036

9 Trouble-shooting

9.1 Trouble-shooting instructions


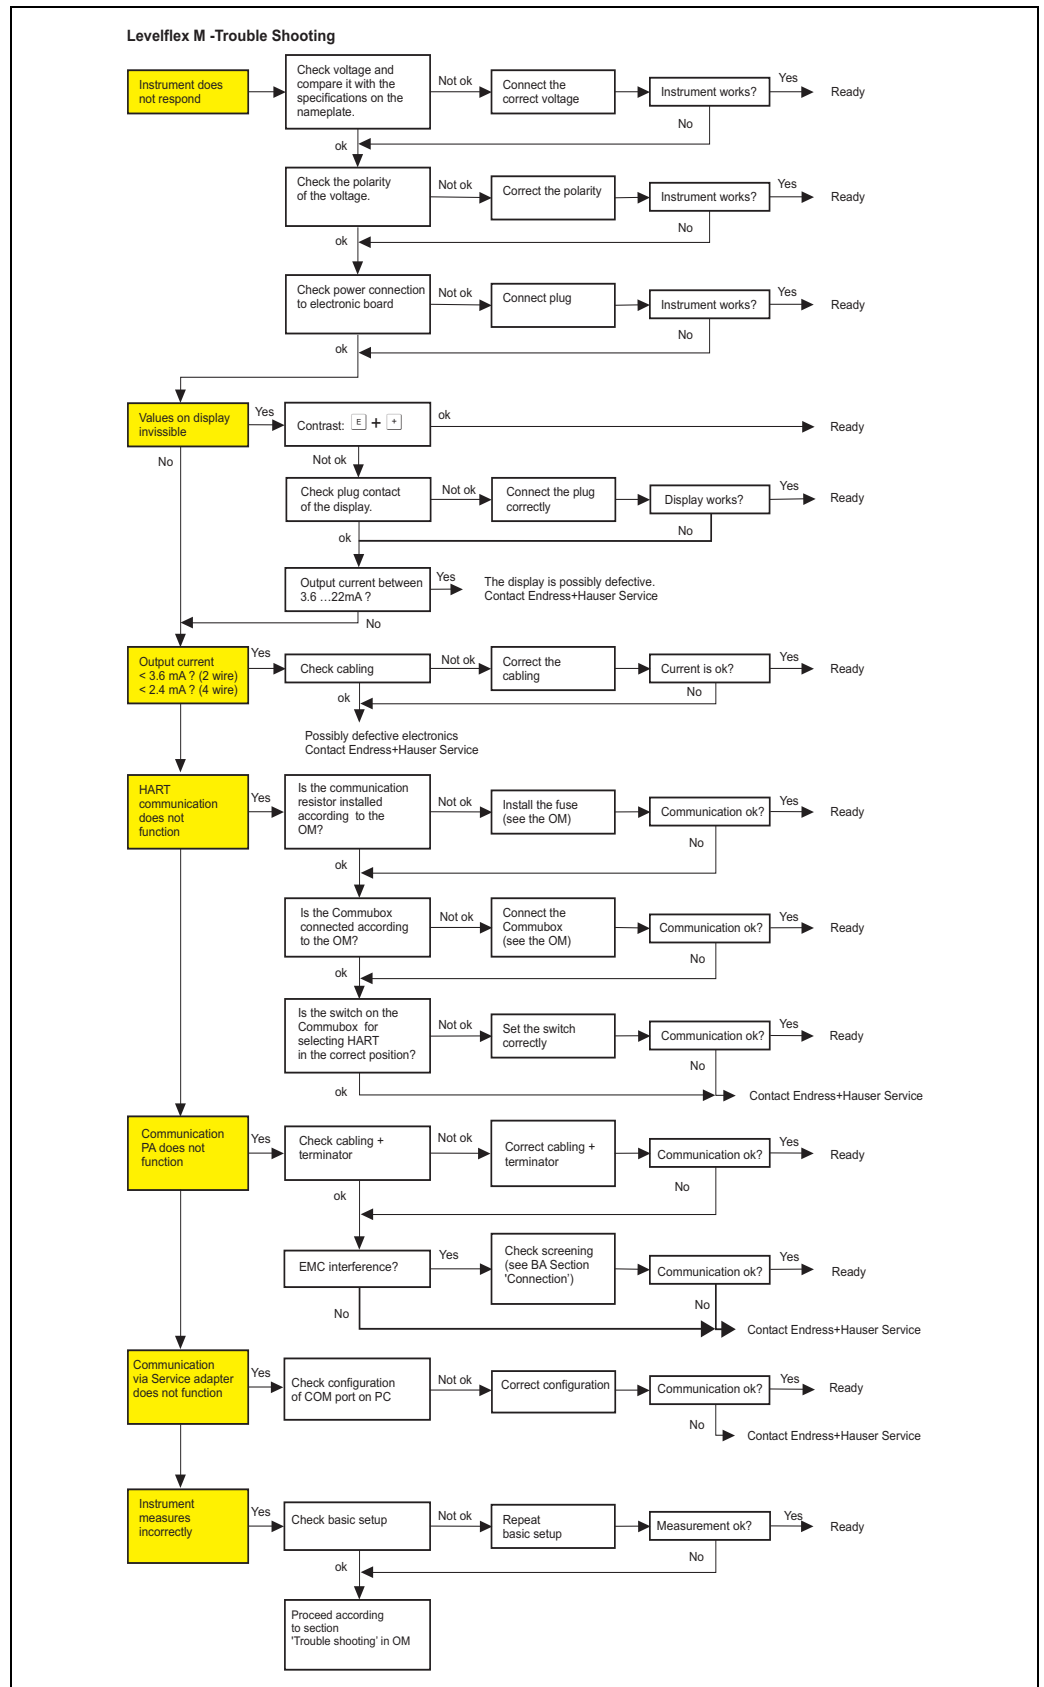


9.2 System error messages

Code	Description	Possible cause	Remedy
A102	checksum error general reset & new calibr. required	device has been powered off before data could be stored; emc problem; E ² PROM defect	reset avoid emc problem; if alarm prevails after reset, exchange electronics
W103	initialising - please wait	E ² PROM storage not yet finished	wait some seconds; if warning prevails, exchange electronics
A106	downloading please wait	processing data download	wait until warning disappears
A110	checksum error general reset & new calibr. required.	device has been powered off before data could be stored; emc problem; E ² PROM defect	reset avoid emc problem; if alarm prevails after reset, exchange electronics
A111	electronics defect	RAM defective	reset if alarm prevails after reset, exchange electronics
A113	electronics defect	ROM defective	reset if alarm prevails after reset, exchange electronics
A114	electronics defect	E ² PROM defective	reset if alarm prevails after reset, exchange electronics
A115	electronics defect	general hardware problem	Reset if alarm prevails after reset, exchange electronics
A116	download error repeat download	checksum of stored data not correct	restart download of data
A121	electronics defect	no factory calibration existant; E ² PROM defective	contact service
W153	initialising - please wait	initialisation of electronics	wait some seconds; if warning prevails, power off device and power on again
A160	checksum error general reset & new calibr. required.	device has been powered off before data could be stored; emc problem; E ² PROM defect	reset avoid emc problem; if alarm prevails after reset, exchange electronics
A164	electronics defect	hardware problem	reset if alarm prevails after reset, exchange electronics
A171	electronics defect	hardware problem	reset if alarm prevails after reset, exchange electronics
A221	Probe pulse deviation from average values	HF module or cable between HF module and electronics defective	Check contacts on HF module If fault cannot be eliminated: Replace HF module
A241	Broken probe	Broken probe or value for probe length is too short	Check the probe length in 033, Check the probe itself, if the probe is broken, change the probe, or change to a non contact system
A251	Feedthrough	Lost contact in the process feedthrough	Replace process feedthrough
A261	HF cable defective	HF cable defective or HF connector removed	Check HF connector, replace cable if defective
W275	Offset too high	Temperature at the electronics too high or HF module defective	Check temperature, replace HF module if defective
W512	recording of mapping please wait	mapping active	wait some seconds until alarm disappears

Code	Description	Possible cause	Remedy
W601	linearisation ch1 curve not monotone	linearization not monotonously increasing	correct linearisation table
W611	less than 2 linearisation points for channel 1	number of entered linearization points < 2	correct linearisation table
W621	simulation ch. 1 on	simulation mode is active	switch off simulation mode
E641	no usable echo channel 1 check calibr.	echo lost due to application conditions of built up on antenna	check installation; clean probe (cf. Operating Instructions)
W650	Signal/noise ratio too low or no echo	noise on signal too high	eliminate electromagnetic interference
E651	level in safety distance - risk of overspill	level in safety distance	alarm will disappear as soon as level leaves safety distance
A671	linearisation ch1 not complete, not usable	linearisation table is in edit mode	activate linearisation table
W681	current ch1 out of range	current out of range (3.8 mA ... 21,5 mA)	check calibration and linearisation

9.3 Application errors

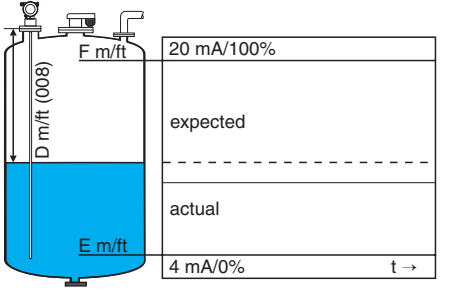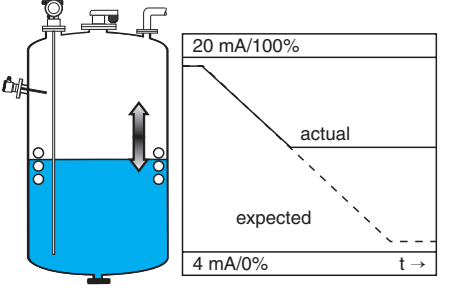Error	Output	Possible cause	Remedy
A warning or alarm has occurred.	Depending on the configuration	See table of error messages (→ 82)	1. See table of error messages (→ 82)
Measured value (00) is incorrect		<p>Measured distance (008) OK?</p> <p>yes →</p> <p>no ↓</p> <p>An interference echo may have been evaluated.</p>	<p>yes →</p> <ol style="list-style-type: none"> 1. Check empty calibr. (005) and full calibr. (006) 2. Check linearisation: <ul style="list-style-type: none"> → level/ullage (040) → max. scale (046) → diameter vessel (047) → Check table <p>yes →</p> <ol style="list-style-type: none"> 1. Carry out tank mapping → basic setup
No change off measured value on filling/emptying		Interference echo from installations, nozzle or extension on the probe	<ol style="list-style-type: none"> 1. Carry out tank mapping → basic setup 2. If necessary, clean probe 3. If necessary, select better mounting position
E 641 (loss of echo) after turn on the power supply	If the instrument is configured to Hold by loss of echo the output is set to any value/current.	noise level during the initialisation phase to high.	<p>Repeat once more empty calibr. (005).</p> <p>Caution!</p> <p>Before conformation change with <input type="button" value="+"/> or <input type="button" value="-"/> to the edit mode.</p>

<p>Device displays a level when the tank is empty.</p>	<p>20 mA/100%</p> <p>actual</p> <p>expected</p> <p>4 mA/0%</p> <p>t →</p> <p><small>L00-FMP4xxxx-19-00-00-en-020</small></p>	<p>Incorrect probe length</p>	<ol style="list-style-type: none"> 1. Carry out automatic probe length detection when the tank is empty. 2. Carry out mapping over entire probe when the tank is empty (probe free!).
<p>Measured value incorrect (slope error in the entire measuring range)</p>	<p>20 mA/100%</p> <p>expected</p> <p>2.) actual</p> <p>1.) actual</p> <p>4 mA/0%</p> <p>t →</p> <p><small>L00-FMP4xxxx-19-00-00-en-021</small></p>	<p>Tank properties incorrect.</p> <p>Medium properties incorrect.</p>	<p>LN < 4 m and "Aluminium tank" tank properties selected</p> <ul style="list-style-type: none"> → Calibration not possible. → Selection → Select standard → Thresholds too high <p>Select lower medium properties.</p>


9.4 Spare parts



Note!

You can order spare parts directly from your Endress+Hauser service organization by giving the serial number which is printed on the measuring transducer nameplate (→ 8). The corresponding spare part number also appears on each spare part. Installation instructions are given on the instruction card that is also delivered.

Spare parts Levelflex M FMP40 with housing F12

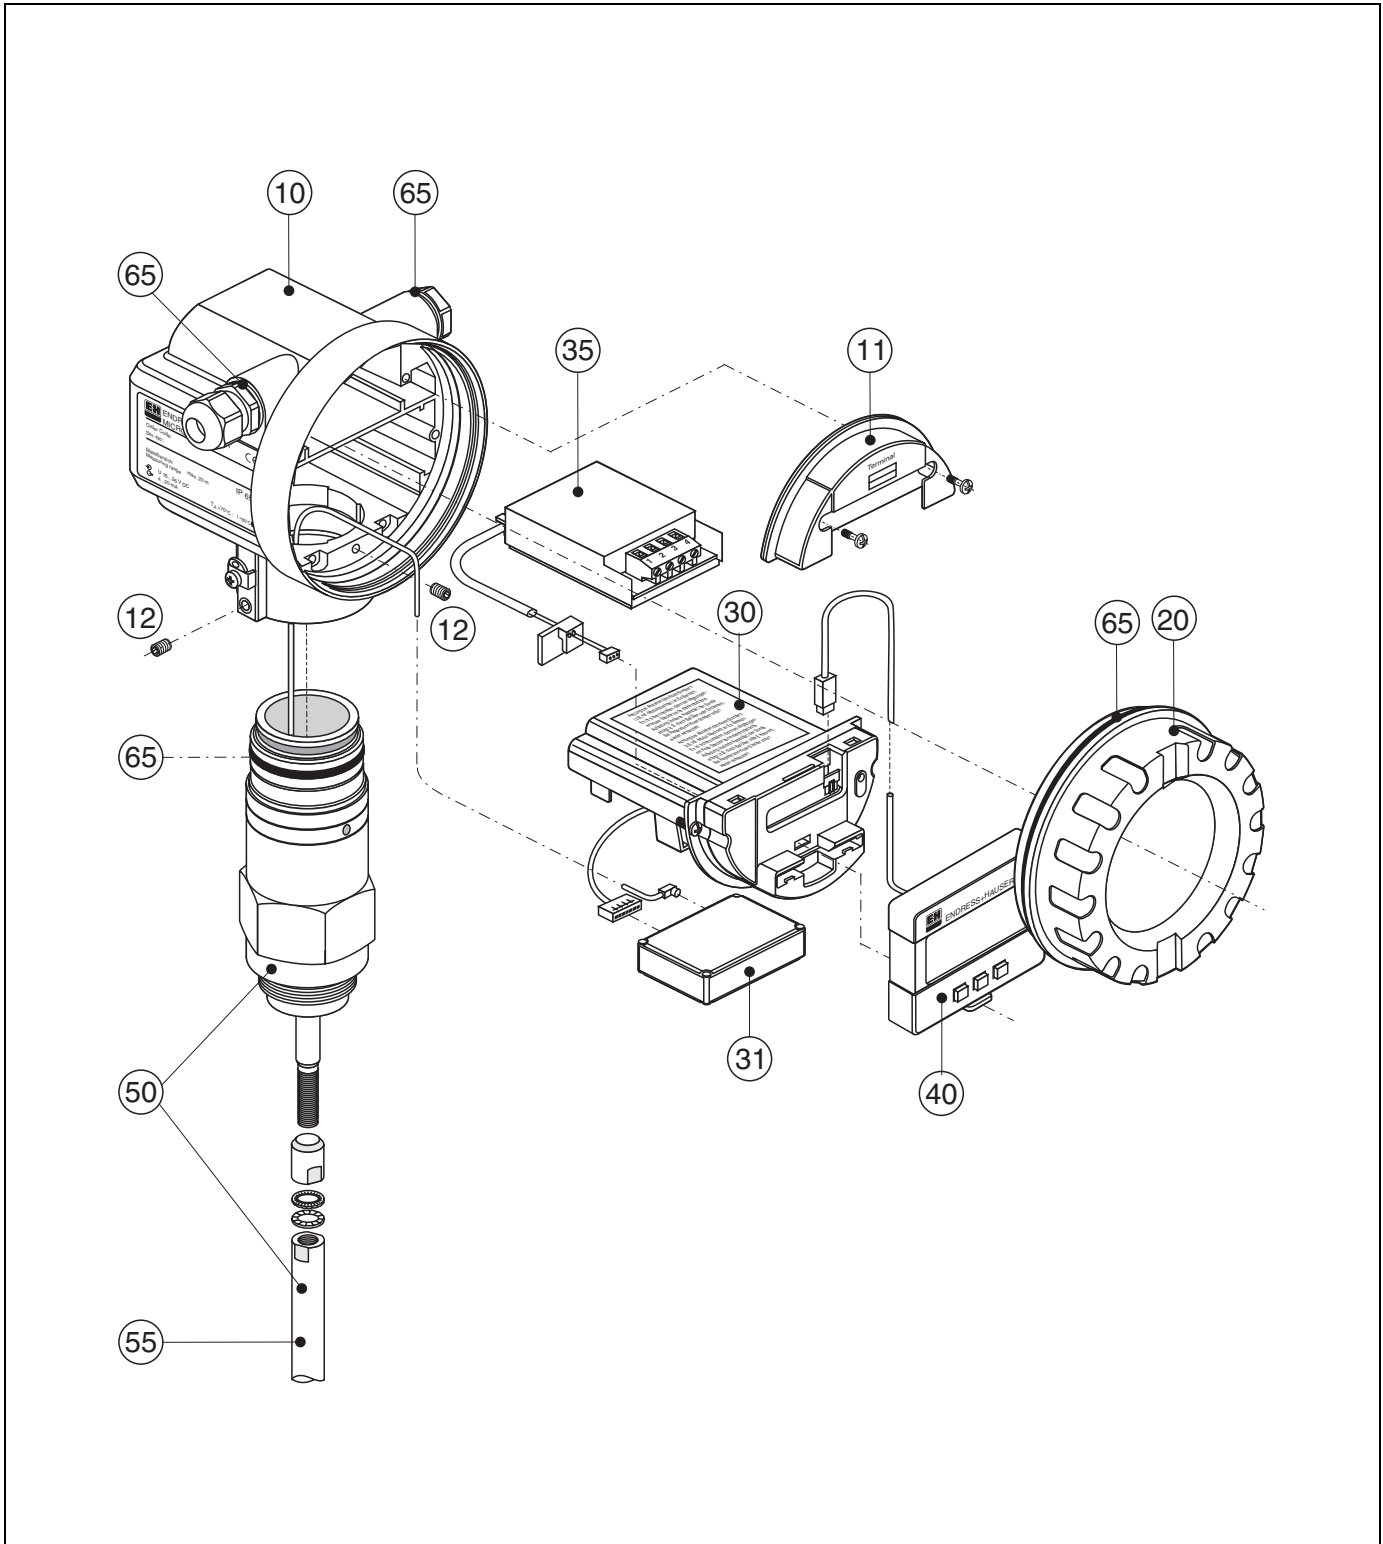

L00-FMP4xxxx-00-00-06-xx-001

10 Housing

52013409 Housing F12, aluminium, coated, M20, metal
52013348 Housing F12, aluminium, coated, G1/2, 4-wire
52013349 Housing F12, aluminium, coated, NPT1/2, 4-wire
52013350 Housing F12, aluminium, coated, M20, 4-wire
52013351 Housing F12, aluminium, coated, M20, metal
543120-0022 Housing F12, aluminium, G1/2
543120-0023 Housing F12, aluminium, NPT1/2
543120-0024 Housing F12, aluminium, M20

11 Hood for terminal compartment

52006026 Cover for the connection compartment F12
52019062 Cover for the connection compartment F12, FHX40

12 Set of screws

535720-9020 Set of screws for housing F12/T12

20 Cover

52005936 Cover F12/T12 aluminium, inspection glass, seal
517391-0011 Cover F12/T12 aluminium, coated, seal

30 Electronics

71025474 Electronics FMP4x, Ex, 2 wire, HART,V4.0
71025475 Electronics FMP4x, Ex, 4 wire, HART,V4.0

31 HF module

52013378 HF module LEVELFLEX-M
52019780 HF module LEVELFLEX-M

35 Terminal module / power unit

52006197 Terminal module 4-pin, HART, 2-wire with connecting cable
52013304 Power unit, 10.5...32V DC (housing F12) for electronics, 4-wire
52013305 Power unit, 90 ...250V AC (housing F12) for electronics, 4-wire
52015585 Power unit, CSA, 10.5...32V DC (housing F12) for electronics, 4-wire
52015586 Power unit, CSA, 90...250V AC (housing F12) for electronics, 4-wire

40 Display

52005585 Display/operating module VU331

50 Probe with process connection

On request.

55 Probe without process connection

On request.

65 Sealing kit


52013412 Sealing kit FMP40

Spare parts Levelflex M FMP40 with housing F23**20 Cover**

52018670 Cover F23 316L, sight glass, gasket

52018681 Cover F23 316L, gasket

Spare parts Levelflex M FMP40 with housing T12

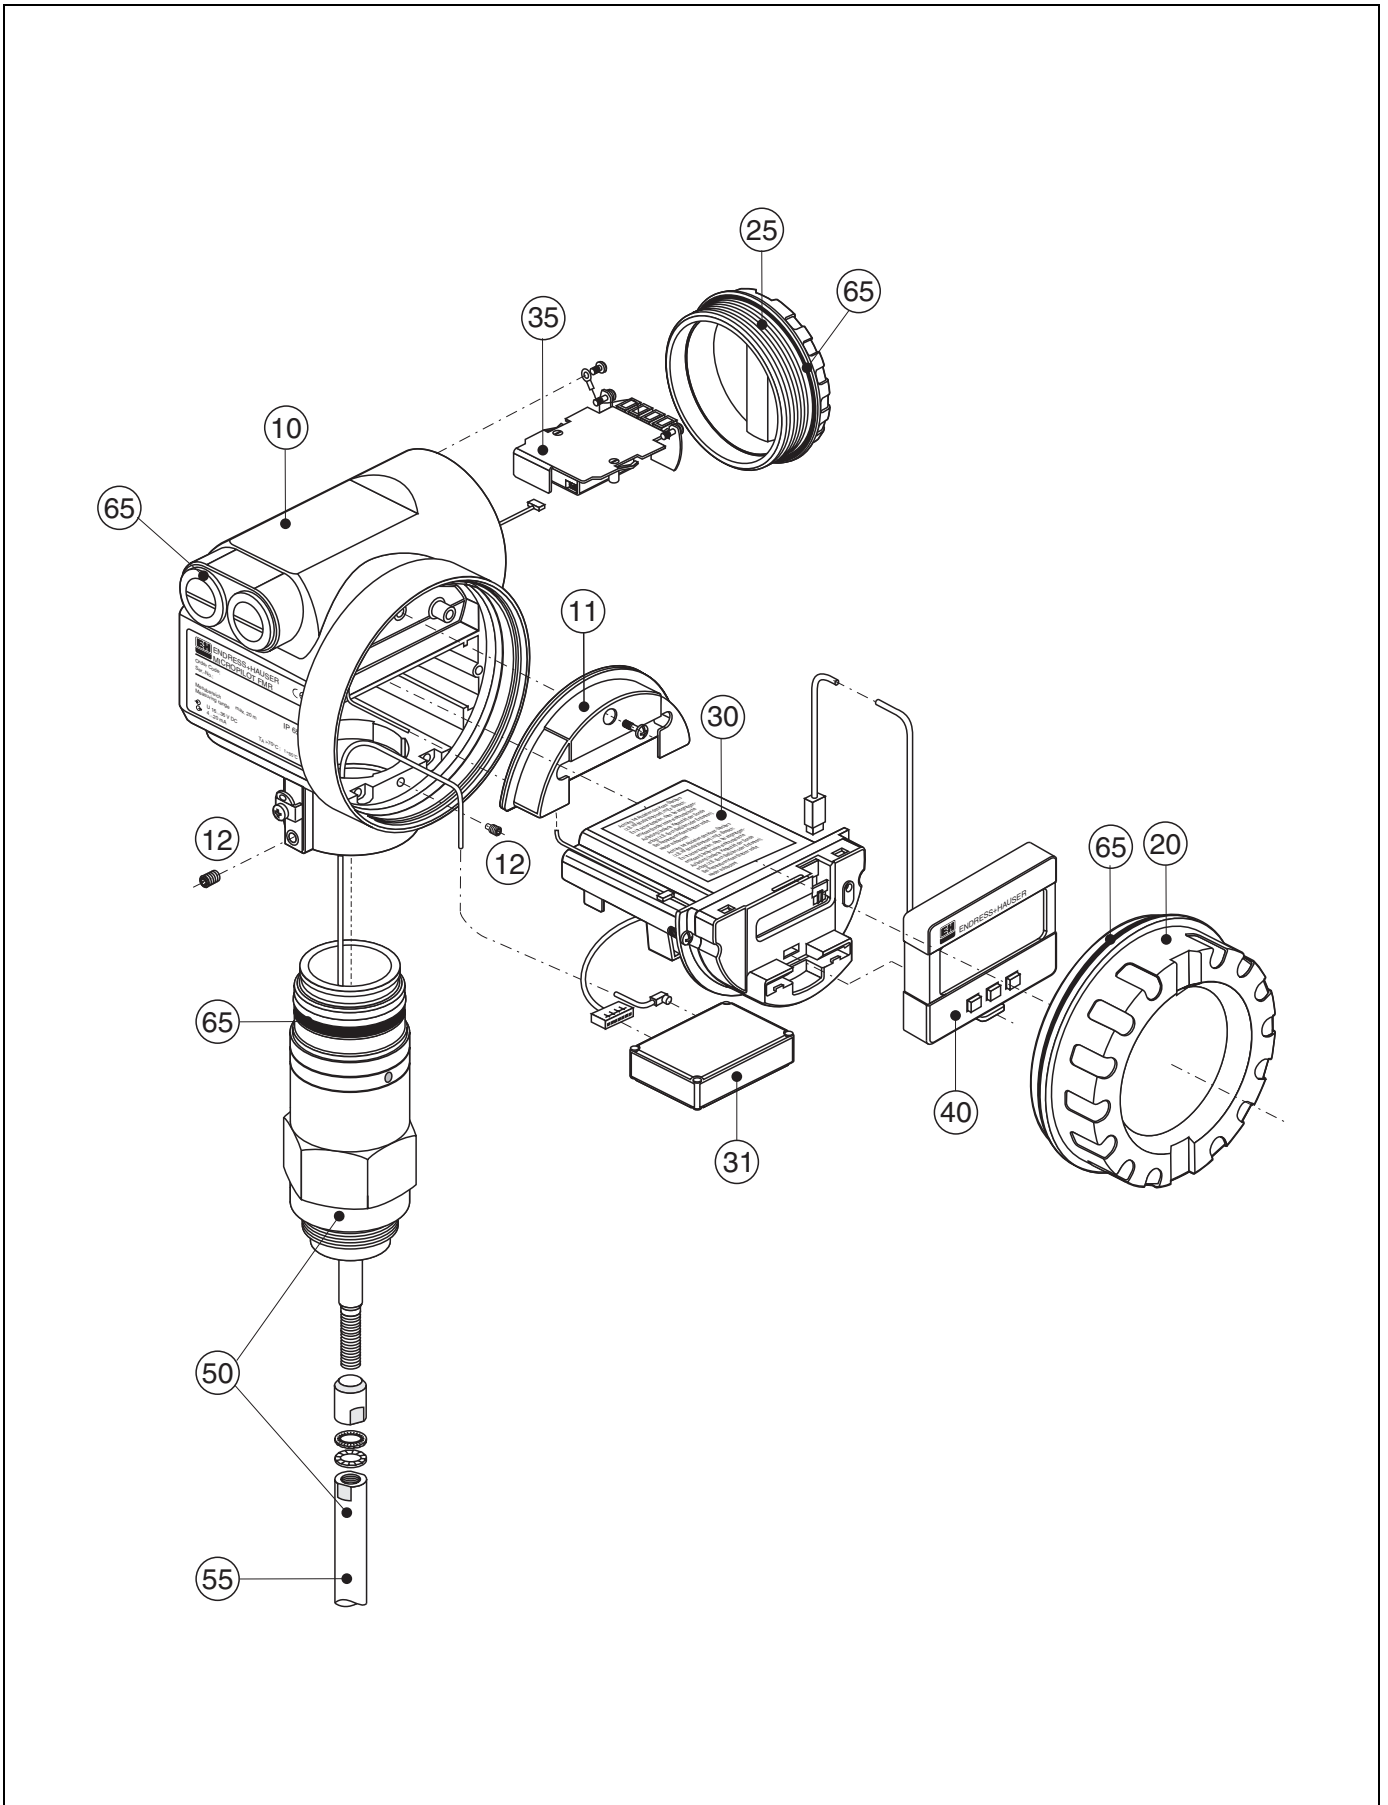

L00-FMP4xxxx-00-00-06-xx-002

10 Housing

52006205 Housing T12, aluminium, M20, PEL, cover

543120-0023 Housing F12, aluminium, NPT1/2

11 Hood for terminal compartment

52005643 Hood T12

12 Set of screws

535720-9020 Set of screws for housing F12/T12

20 Cover

52005936 Cover F12/T12 aluminium, inspection glass, seal

517391-0011 Cover F12/T12 aluminium, coated, seal

25 Cover for the connection compartment

518710-0020 Cover T3/T12, aluminium, coated, seal

30 Electronics

71025474 Electronics FMP4x, Ex, 2 wire, HART,V4.0

31 HF module

52013378 HF module LEVELFLEX-M

52019780 HF module LEVELFLEX-M

35 Terminal module / power unit

52013302 Terminal module Ex d, 4-pin, 2-wire, HART, T12

52018949 Terminal module EEx ia, 4-pin, HART, T12, OVP

40 Display

52005585 Display/operating module VU331

50 Probe with process connection

On request.


55 Probe without process connection

On request.

65 Sealing kit

52013412 Sealing kit FMP40

Spare parts Levelflex M FMP40 - probes and accessories

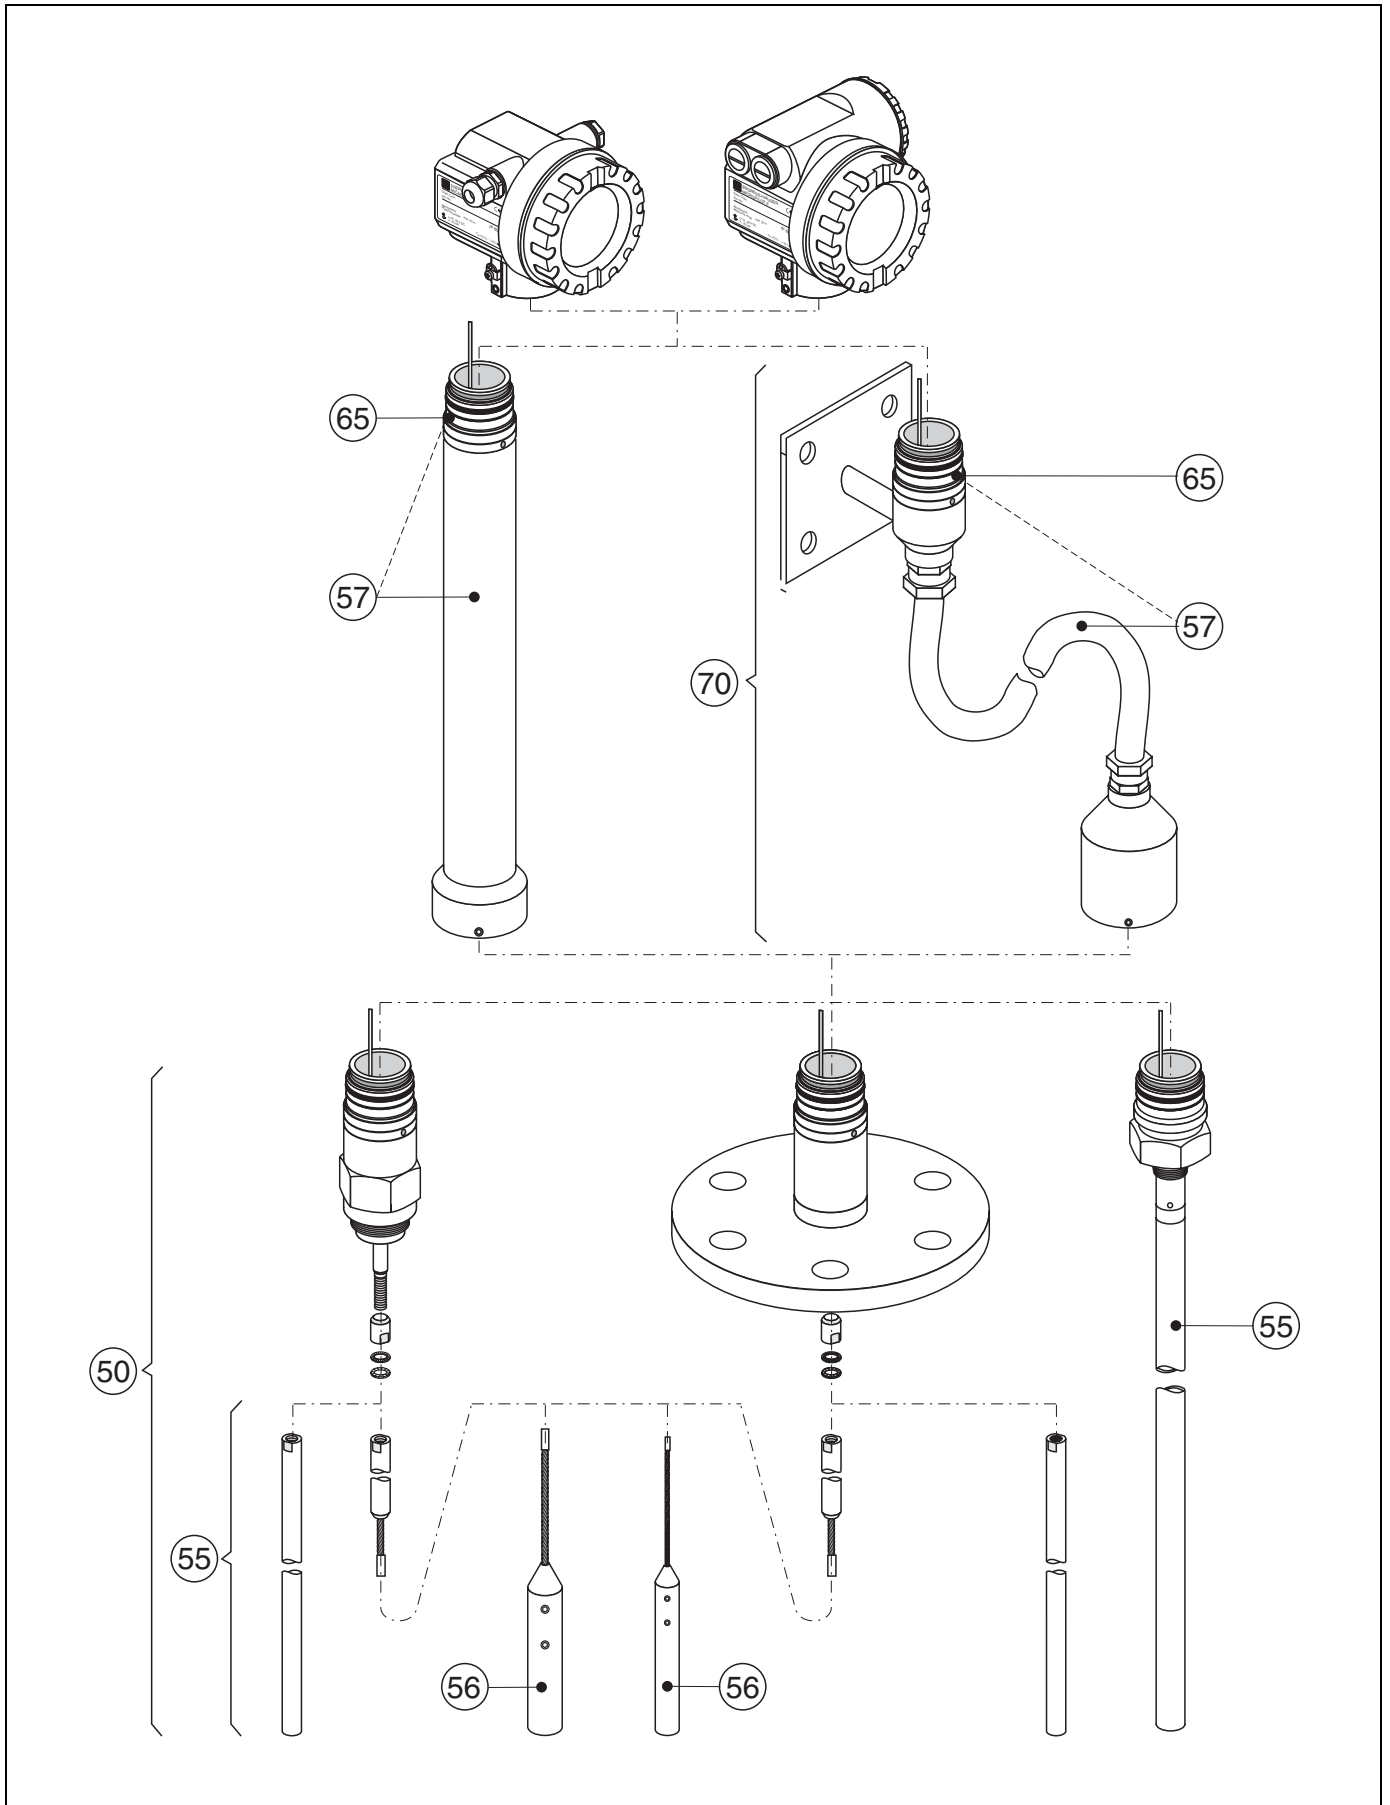

L00-FMP4xxxx-00-00-06-en-004

50 Probe with process connection

On request.

55 Probe without process connection

On request.

56 Weights

52013352 Weight FMP40, rope 6mm-1/4", SS

52013353 Weight FMP40, rope 4mm-1/6", SS

57 Distance pipe / Cable

52013413 Distance pipe FMP40 electronics, 400 mm

52013414 Cable FMP40, protection hose, 3 m

65 Sealing kit

52013412 Sealing kit FMP40

70 Modification kit to separate version

52018672 Conversion kit FMP40 to sep. version

9.5 Return

The following procedures must be carried out before a transmitter is sent to Endress+Hauser e.g. for repair or calibration:

- Remove all residue which may be present. Pay special attention to the gasket grooves and crevices where fluid may be present. This is especially important if the fluid is dangerous to health, e.g. corrosive, poisonous, carcinogenic, radioactive, etc.
- Always enclose a duly completed "Declaration of contamination" form (a copy of the "Declaration of contamination" is included at the end of this operating manual). Only then can Endress +Hauser transport, examine and repair a returned device.
- Enclose special handling instructions if necessary, for example a safety data sheet as per EN 91/155/EEC.

Additionally specify:

- An exact description of the application
- The chemical and physical characteristics of the product
- A short description of the error that occurred (specify error code if possible)
- If necessary, give the error code

9.6 Disposal

In case of disposal please separate the different components according to their material consistence.

9.7 Software history

Software version / Date	Software changed	Documentation changes
V 01.02.00 / 04.2002	Original software. Operated via: – ToF Tool – Commuwin II (as of Version2.05.03) – HART-Communicator DXR375 with Rev. 1, DD 1.	
V 01.02.02 / 08.2003	<ul style="list-style-type: none"> ■ Function group: envelope curve display ■ Katakana (japanese) ■ current turn down (HART only) ■ the customer tank map can be edited Operated via: – ToF Tool – Commuwin II (as of Version 2.08-1 Update C) – HART-Communicator DXR375 with Rev. 1, DD 1.	
V 01.02.04 / 07.2004	"mapping" function improved	Specification of the measuring accuracy at the end of probe
V 01.02.06 / 01.2005	Function "echo lost" improved	
V 01.04.00 / 03.2006	Function "detection window"	<ul style="list-style-type: none"> ■ Description of Instrument Functions ■ Operating menu extended see Cap. 11.1



9.8 Contact addresses of Endress+Hauser

Contact addresses can be found on our homepage: www.endress.com/worldwide. If you have any questions, please do not hesitate to contact your Endress+Hauser representative.


10 Technical data

10.1 Additional technical data

10.1.1 Input

Measured variable	The measured variable is the distance between a reference point (see Fig. on → ) and the product surface. Subject to the input empty distance (E, see Fig. on → ), the level is calculated. Alternatively, the level can be converted by means of linearisation (32 points) into other variables (volume, mass).
-------------------	--


10.1.2 Output

Output signal	4...20 mA with HART protocol
Signal on alarm	Error information can be accessed via the following interfaces: <ul style="list-style-type: none"> ■ Local display: <ul style="list-style-type: none"> – Error symbol (→ ) – Plain text display ■ Current output, signal on error can be selected (e.g. according to NAMUR recommendation NE 43). ■ Digital interface

Linearization	The Levelflex M linearisation function enables conversion of the measured value into any desired length or volume units and mass or %. Linearisation tables for volume calculation in cylindrical tanks are pre-programmed. Any other tables from up to 32 value pairs can be input manually or semi-automatically. The creation of a linearisation table with the ToF Tool or FieldCare is particularly convenient.
---------------	---

10.1.3 Performance characteristics

Reference operating conditions	<ul style="list-style-type: none"> ■ temperature = +20 °C (68 °F) ±5 °C (9 °F) ■ pressure = 1013 mbar abs. (14.7 psia) ±20 mbar (0.3 psi) ■ humidity = 65 % ±20% ■ Reflection factor ≥ 0.8 (surface of the water for coax probe, metal plate for rod and rope probe with min. 1 m Ø) ■ Flange for rod or rope probe ≥ 30 cm Ø ■ Distance to obstructions ≥ 1 m
--------------------------------	--

Maximum measured error	Is in Function group "basic setup" (00) starting from →  .
------------------------	--

Resolution	<ul style="list-style-type: none"> ■ Digital: 1 mm ■ analog: 0.03 % of the measuring range
------------	--

Reaction time	The reaction time is dependent on the configuration. Shortest time: <ul style="list-style-type: none"> ■ 2-wire electronics: 1 s ■ 4-wire electronics: 0.7 s
---------------	---

Influence of ambiente temperature

The measurements are carried out in accordance with EN 61298-3:

- digital output:
 - **FMP40**
average T_K : 0.6 mm/10 K, max. ± 3.5 mm over the entire temperature range $-40\text{ }^\circ\text{C} \dots +80\text{ }^\circ\text{C}$
- 2-wire:**
 - Current output (additional error, in reference to the span of 16 mA):
 - **Zero point (4 mA)**
average T_K : 0.032 %/10 K, max. 0.35 % over the entire temperature range $-40\text{ }^\circ\text{C} \dots +80\text{ }^\circ\text{C}$
 - **Span (20 mA)**
average T_K : 0.05 %/10 K, max. 0.5 % over the entire temperature range $-40\text{ }^\circ\text{C} \dots +80\text{ }^\circ\text{C}$
- 4-wire:**
 - Current output (additional error, in reference to the span of 16 mA):
 - **Zero point (4 mA)**
average T_K : 0.02 %/10 K, max. 0.29 % over the entire temperature range $-40\text{ }^\circ\text{C} \dots +80\text{ }^\circ\text{C}$
 - **Span (20 mA)**
average T_K : 0.06 %/10 K, max. 0.89% over the entire temperature range $-40\text{ }^\circ\text{C} \dots +80\text{ }^\circ\text{C}$


10.1.4 Operating conditions: Environment

Ambient temperature range

Ambient temperature for the transmitter: $-40\text{ }^\circ\text{C} \dots +80\text{ }^\circ\text{C}$ ($-40\text{ }^\circ\text{F} \dots +176\text{ }^\circ\text{F}$)
 The functionality of the LCD display may be limited for temperatures $T_a < -20\text{ }^\circ\text{C}$ and $T_a > +60\text{ }^\circ\text{C}$.
 A weather protection cover should be used for outdoor operation if the instrument is exposed to direct sunlight.

Ambient temperature limits

If temperatures above $80\text{ }^\circ\text{C}$ are present at the process connection, the permitted ambient temperature is reduced according to the following diagram (temperature derating):

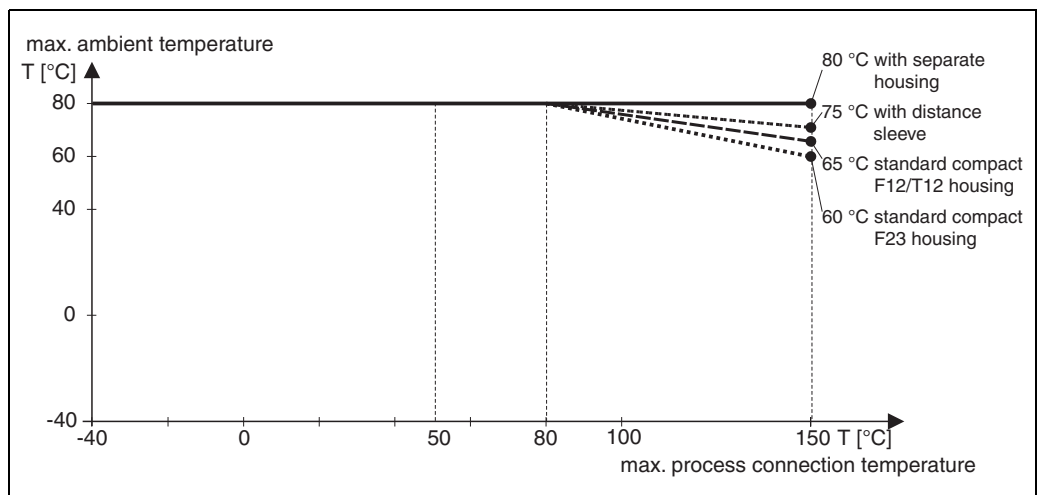

L00-FMP40xxx-05-00-00-en-001

Storage temperature

$-40\text{ }^\circ\text{C} \dots +80\text{ }^\circ\text{C}$ ($-40\text{ }^\circ\text{F} \dots +176\text{ }^\circ\text{F}$)

Climate class

DIN EN 60068-2-38 (test Z/AD)

Vibration resistance

DIN EN 60068-2-64 / IEC 68-2-64: 20...2000 Hz, 1 (m/s²)²/Hz

Cleaning the probe Depending on the application, soilings or sediments can accumulate on the probe. A thin, even layer only influences measurement slightly. Thick layers can dampen the signal and then reduce the measuring range. Heavy, uneven build-up, adhesion e.g. through crystallisation, can lead to incorrect measurement. In this case, we recommend that you use a non-contact measuring principle, or check the probe regularly for soiling

Electromagnetic compatibility (EMC) When installing the probes in metal and concrete tanks and when using a coax probe:


- Interference Emission to EN 61326, Electrical Equipment Class B
- Interference immunity to EN 61326, Annex A (Industrial area) and NAMUR Recommendation NE 21 (EMC)

The measured value can be affected by strong electromagnetic fields when installing rod and rope probes without a shielding/metallic wall, e.g. plastic, and in wooden silos.

- Interference emission to EN 61326, Class A equipment.
- Interference immunity: the measured value can be affected by strong electromagnetic fields.

10.1.5 Operating conditions: Process

Process temperature range The maximum permitted temperature at the process connection (see Figure for measuring point) is determined by the O-ring version ordered:

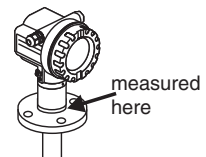O-ring-material	min. Temperature	max. Temperature ¹⁾	
FKM (Viton)	-30 °C/-22 °F	+150 °C/302 °F	
EPDM	-40 °C/-40 °F	+120 °C/248 °F	
FFKM (Kalrez)	-5 °C/23 °F ²⁾	+150 °C/302 °F	

- 1) For PA coated probes, the maximal admissible temperature ist 100 °C (212 °F).
- 2) The min. temperature of FFKM may be -15 °C (5 °F) if the max. temperature of +80 °C (176 °F) is not exceeded.



Note!
The medium temperature can be higher.
However, when using rope probes the stability of the probe rope is reduced by structural changes at temperatures over 350 °C.



Note!
The bare metallic probes are only insulated in the area of the bushing. Thus there is no danger of electrostatic charging. The PA-coated rope has been tested and there is no dangerous electrostatic charging. As a result, there are no restrictions on use in Ex-areas for any of the probes.

Process pressure All models: -1...40 bar/585,9 psi.
This range may be reduced by the selected process connection.
The pressure rating (PN) specified on the flanges refers to a reference temperature of 20 °C, for ASME flanges to 100 °F.

Note!
All Levelflex probes have two levels of sealing. There is an O-ring seal and a moulded seal behind that.

Materials in contact with process

Part	Material
Seal	See "Ordering structure" from → 8
Process connection	See "Ordering structure" from → 8
Feed trough inner conductor	1.4462, Duplex CR22
NordLock washers	1.4547
Rope probe	Rope probe blank: 1.4401 Weight: 1.4435 Rope probe coated: galv. steel PA 12 (Vestamid L 1940), suitable for use in food
Rod probe	See "Ordering structure" from → 8
Coax probe	See "Ordering structure" from → 8 Centering stars: PFA
All Probes with 1½"- and flange connection	On the lower edge of the process connections: PTFE (Dyneon Hostafion TFM 1600)
All Probes with ¾"- connection	Lower edge of the process connections: PPS-GF 40

Dielectric constant

- with coax probe: $\epsilon_r \geq 1,4$
- Rod and rope probe: $\epsilon_r \geq 1,6$

Extension of the rope probes through tension and temperature

- 6 mm rope:
- Elongation through tension: at max. permitted tensile load (30 KN): 13 mm / m rope length
 - Elongation through temperature increase from 30 °C to 150 °C: 2 mm / m rope length
- 4 mm rope:
- Elongation through tension: at max. permitted tensile load (12 KN): 11 mm / m rope length
 - Elongation through temperature increase from 30 °C to 150 °C: 2 mm / m rope length

10.1.6 Mechanical construction

Tolerance of probe length

Rod probes				
over		1 m / 3.2 ft	3 m / 9.8 ft	6 m / 20 ft
up to	1 m / 3.2 ft	3 m / 9.8 ft	6 m / 20 ft	
admissible tolerance (mm / inch)	- 5 / - 0.2	- 10 / - 0.4	- 20 / - 0.8	- 30 / - 1.2

Rope probes				
over		1 m / 3.2 ft	3 m / 9.8 ft	6 m / 20 ft
up to	1 m / 3.2 ft	3 m / 9.8 ft	6 m / 20 ft	
admissible tolerance (mm / inch)	- 10 / - 0.4	- 20 / - 0.8	- 30 / - 1.2	- 40 / - 1.6

Levelflex M	FMP40 + rope probe 4 mm	FMP40 + rod or rope probe 6 mm	FMP40 + rod probe 16 mm	FMP40 coax probe
Weight for F12 or T12 housing	Approx. 4 kg + Approx. 0.1 kg/m probe length + weight of flange	Approx. 4 kg + Approx. 0.2 kg/m probe length + weight of flange	Approx. 4 kg + Approx. 1.6 kg/m probe length + weight of flange	Approx. 4 kg + Approx. 3.5 kg/m probe length + weight of flange
Weight for F23 housing	Approx. 7.4 kg + Approx. 0.1 kg/m probe length + weight of flange	Approx. 7.4 kg + Approx. 0.2 kg/m probe length + weight of flange	Approx. 7.4 kg + Approx. 1.6 kg/m probe length + weight of flange	Approx. 7.4 kg + Approx. 3.5 kg/m probe length + weight of flange

- Material
- Housing:
 - housing F12/T12: aluminium (AlSi10Mg), seawater-resistant, chromated, powder-coated
 - housing F23: 316L, corrosion-resistant steel
 - Sight window: glass

Process connection See "Ordering structure" on →  8.

Seal See "Ordering structure" on →  8.

Probe See "Ordering structure" on →  8.


10.1.7 Certificates and approvals

CE approval The measuring system meets the legal requirements of the EC-guidelines. Endress+Hauser confirms the instrument passing the required tests by attaching the CE-mark.

Ex approval Correlation of safety instructions (XA) and certificates (ZE) to the instrument:

Instrument	Certificate	Explosion protection	Output	Communication	KEMA 02 ATEX	XA	WHG
FMP40	A	non-ex	B, G, H	HART, 4...20 mA	—	—	—
			D	PROFIBUS PA	—	—	—
			F	FOUNDATION Fieldbus	—	—	—
	F	non-ex + WHG	B, G, H	HART, 4...20 mA	—	—	ZE256F/00/de
			D	PROFIBUS PA	—	—	ZE256F/00/de
	1	ATEX II 1/2 G EEx ia IIC T6 IECEX Zone 0/1	B	HART, 4...20 mA	1109	XA164F-	—
			D	PROFIBUS PA	1109	XA165F-	—
			F	FOUNDATION Fieldbus	1109	XA165F-	—
	6	ATEX II 1/2 G EEx ia IIC T6 + WHG	B	HART, 4...20 mA	1109	XA164F-	ZE256F/00/de
			D	PROFIBUS PA	1109	XA165F-	ZE256F/00/de
	2	ATEX II 1/2 D ¹⁾	B, D, F, G, H	HART, 4...20 mA	1109	XA168F-	—
	3	ATEX II 2 G EEx em [ia] IIC T6 IECEX Zone 1	B	HART, 4...20 mA	1109	XA167F-	—
			D	PROFIBUS PA	1109	XA167F-	—
			F	FOUNDATION Fieldbus	1109	XA167F-	—
	4	ATEX II 1/3 D transp. cover ¹⁾	B, D, F, G, H	HART, 4...20 mA	1109	XA168F-	—
	5	ATEX II 1/2 G EEx ia IIC T6 ATEX II 1/3 D transp. cover	B	HART, 4...20 mA	1109	XA172F-	—
						XA172F-	—
				FOUNDATION Fieldbus	1109	XA172F-	—
	7	ATEX II 1/2 G EEx d [ia] IIC T6	B	HART, 4...20 mA	1109	XA166F-	ZE256F/00/de
						XA166F-	ZE256F/00/de
			FOUNDATION Fieldbus	1109	XA166F-	—	
8	ATEX II 1/2 G EEx ia IIC T6 ATEX II 1/3 D transp. cover + WHG	B	HART, 4...20 mA	1109	XA172F-	ZE256F/00/de	
		D	PROFIBUS PA	1109	XA172F-	ZE256F/00/de	

1) In combination with electronics B, D or F: supply intrinsically safe.

Overfill protection WHG. See "Ordering structure" on →  8 - (see ZE 256F/de).
SIL 2, for 4...20 mA output (see SD174F/00/en "Functional safety manual").

Telecommunications	Complies with part 15 of the FCC rules for an unintentional radiator. All probes meet the requirements for a class A digital device (commercial, industrial or business environment). Coax probes and probes mounted in closed metallic vessels also meet the requirement for a class B digital device (residential environment).
--------------------	---

External standards and guidelines	<p>EN 60529 Protection class of housing (IP-code)</p> <p>EN 61010 Safety regulations for electrical devices for measurement, control, regulation and laboratory use.</p> <p>EN 61326 Emissions (equipment class B), compatibility (appendix A – industrial area)</p> <p>NAMUR NE 21 Electromagnetic Compatibility (EMC) of Industrial Process and Laboratory Control Equipment.</p> <p>NAMUR NE 43 Standardization of the Signal Level for the Failure Information of Digital Transmitters.</p>
-----------------------------------	--

10.1.8 Supplementary Documentation




Note!


This supplementary documentation can be found on our product pages on www.endress.com.

- Technical Information (TI358F/00/en)
- Safety Manual "Functional safety manual" (SD174F/00/en)
- Certificate "Allgemeine bauaufsichtliche Zulassung" (ZE256F/00/de)

11 Appendix

11.1 Operating menu HART (Display modul), ToF Tool

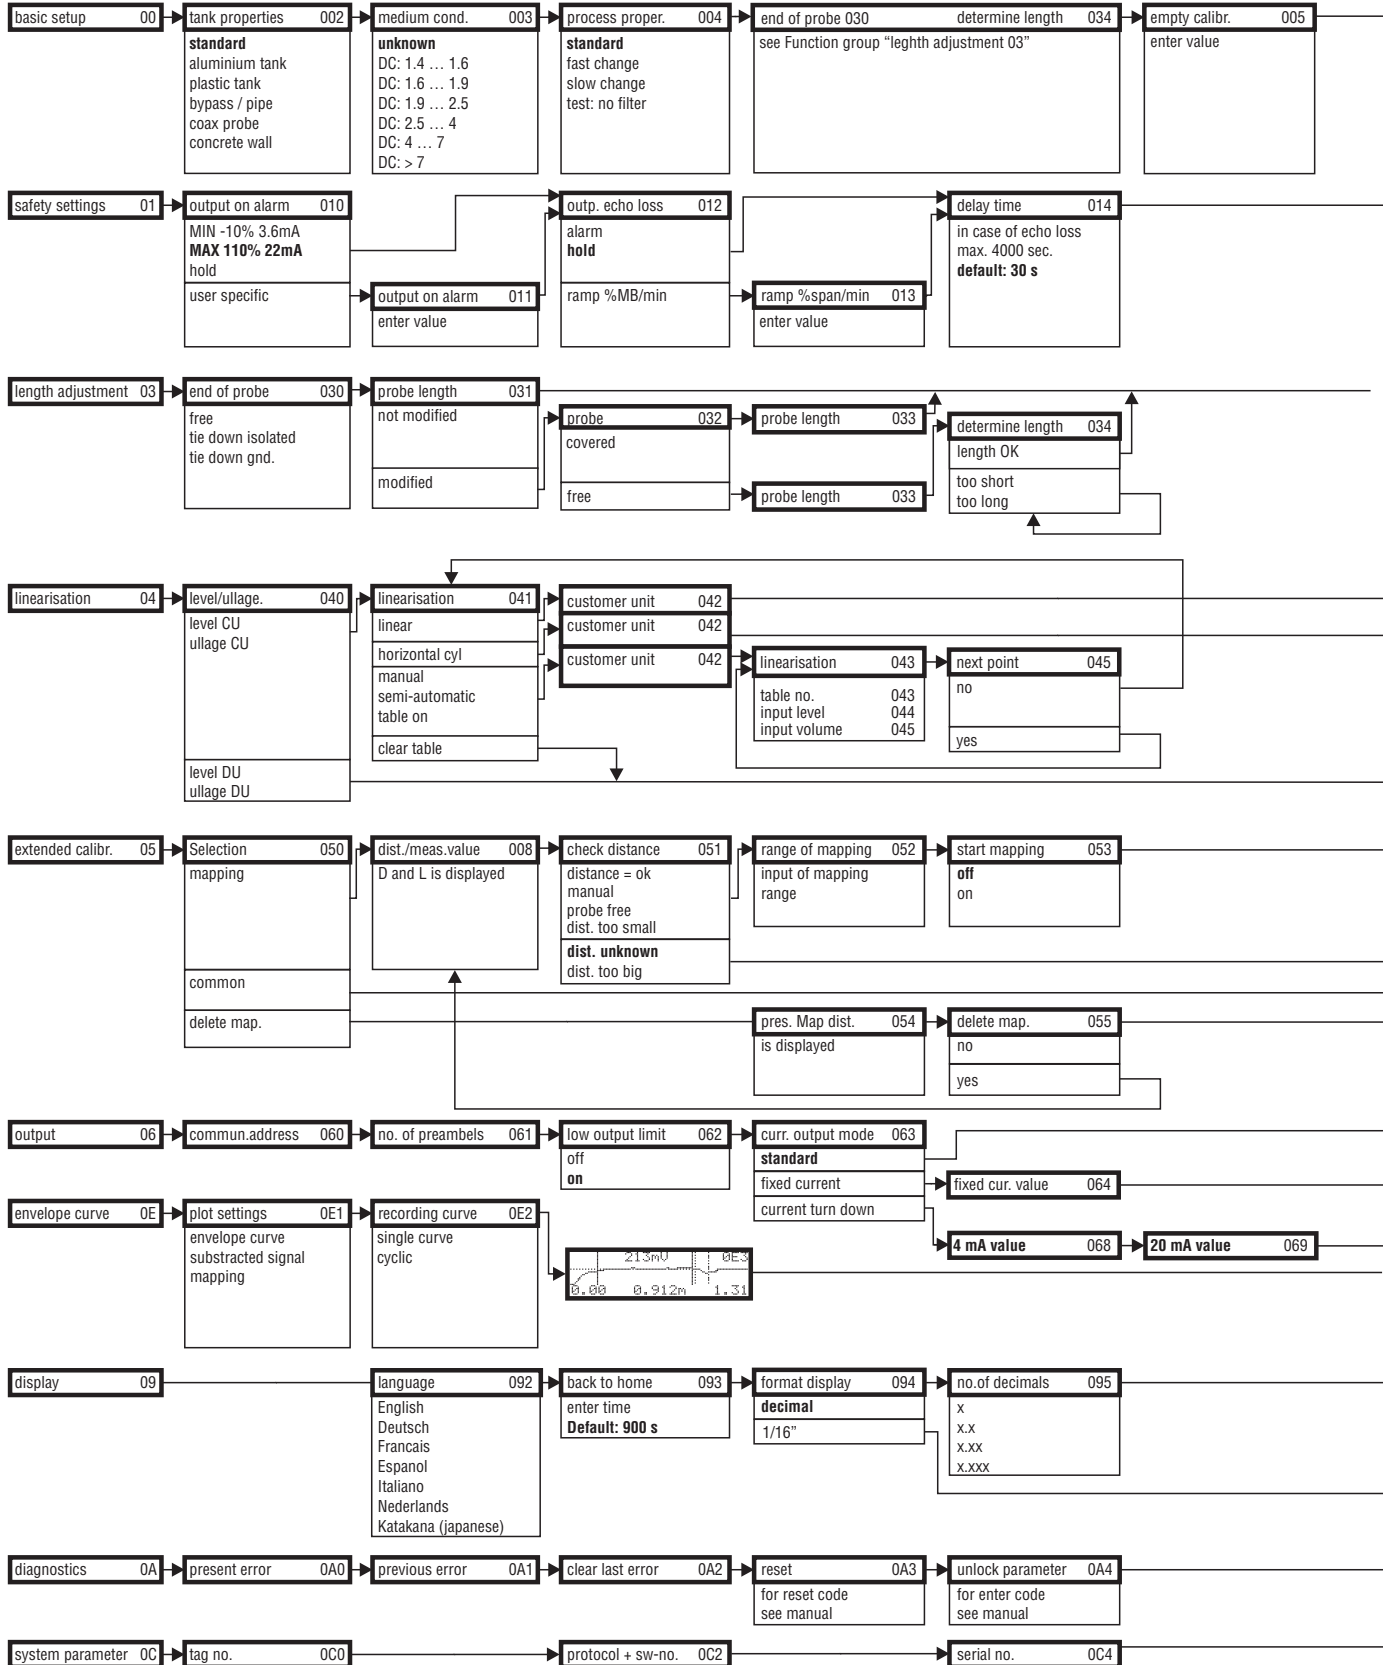

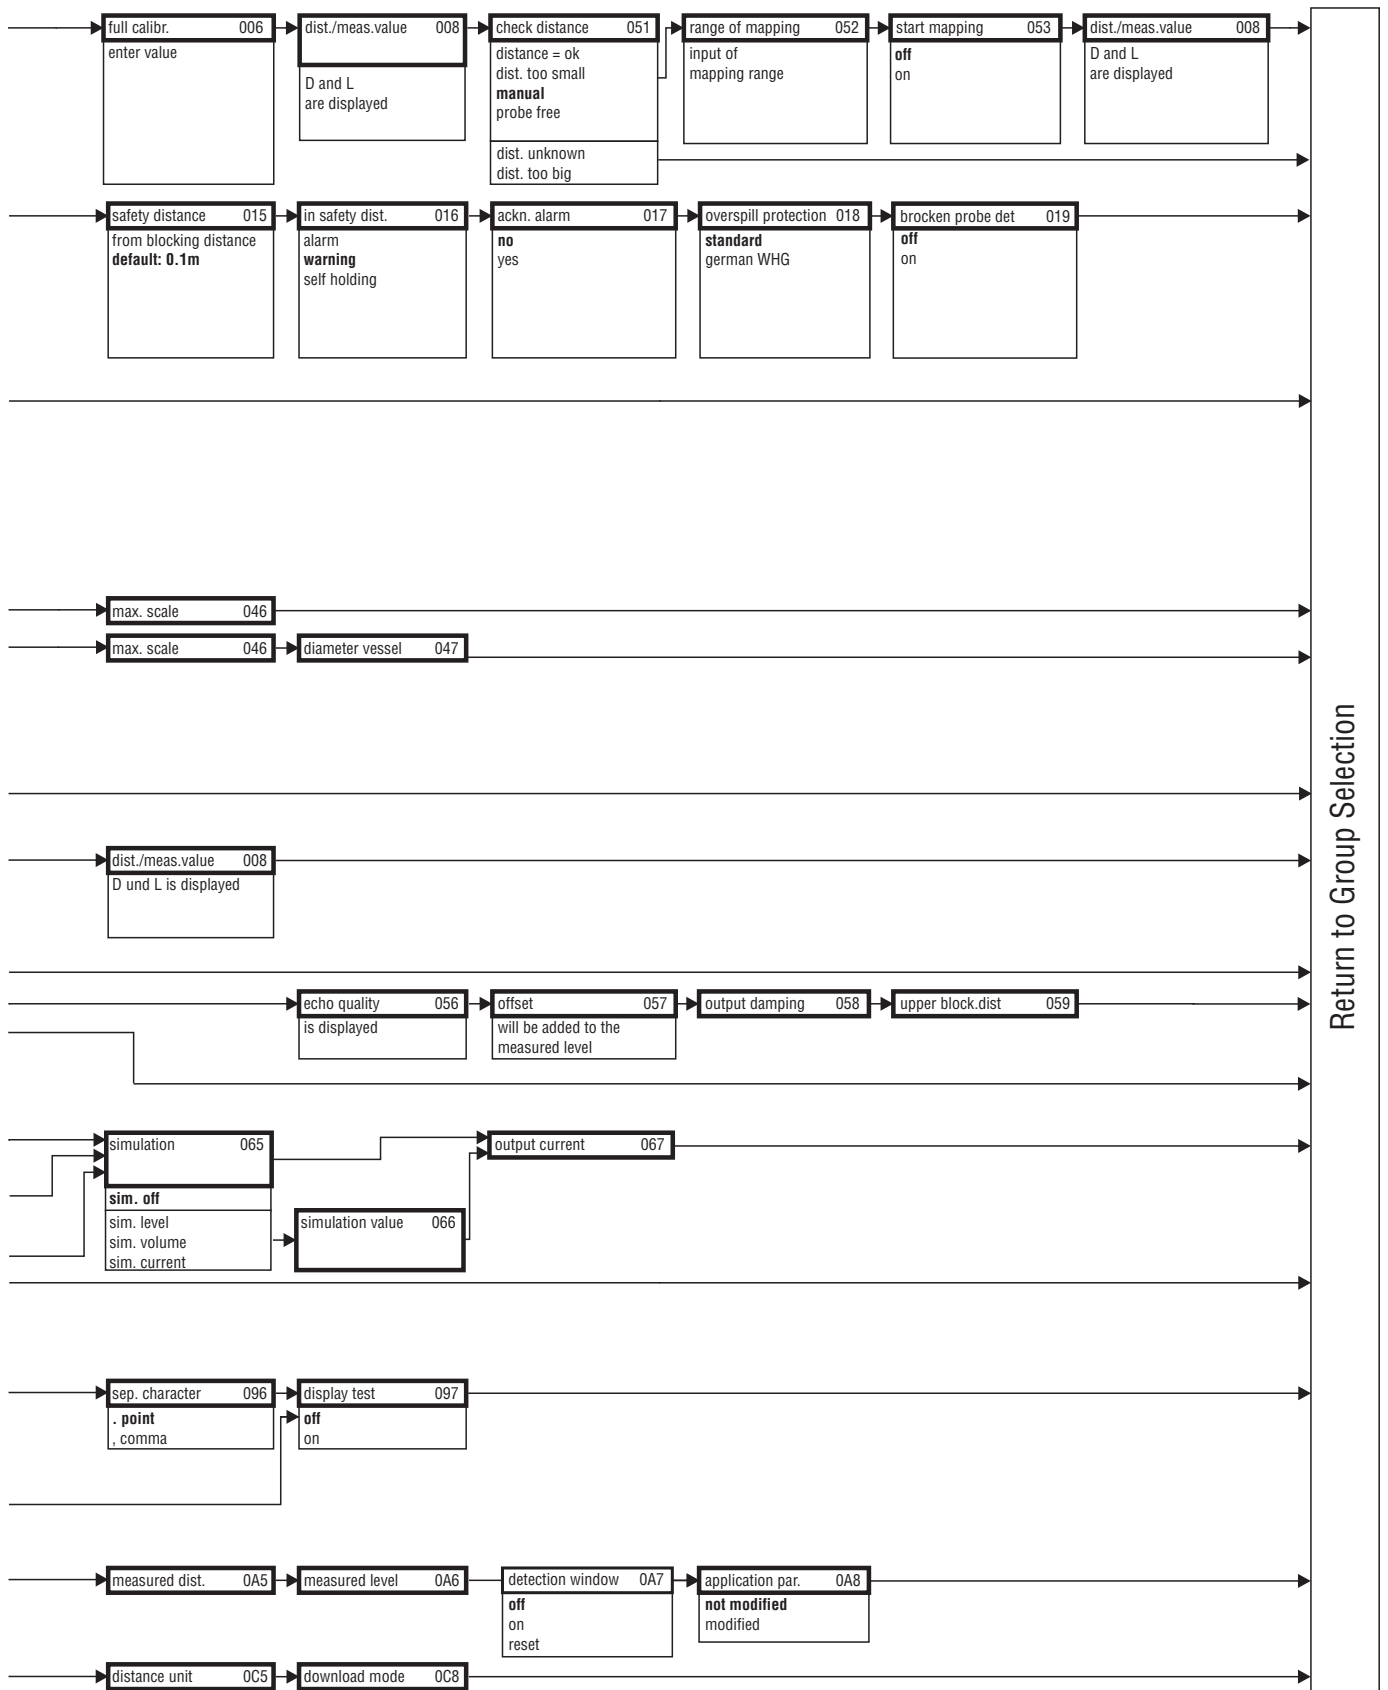

11.2 Description of functions



Note!


A detailed description of the function groups, functions and parameters is given in the documentation BA245F – "Description of the instrument functions" on the enclosed CD-ROM.

11.3 Function and system design

11.3.1 Measuring principle

The Levelflex is a "downward-looking" measuring system that functions according to the ToF method (ToF = Time of Flight). The distance from the reference point (process connection of the measuring device → 15) to the product surface is measured. High-frequency pulses are injected to a probe and led along the probe. The pulses are reflected by the product surface, received by the electronic evaluation unit and converted into level information.

This method is also known as TDR (Time Domain Reflectometry).

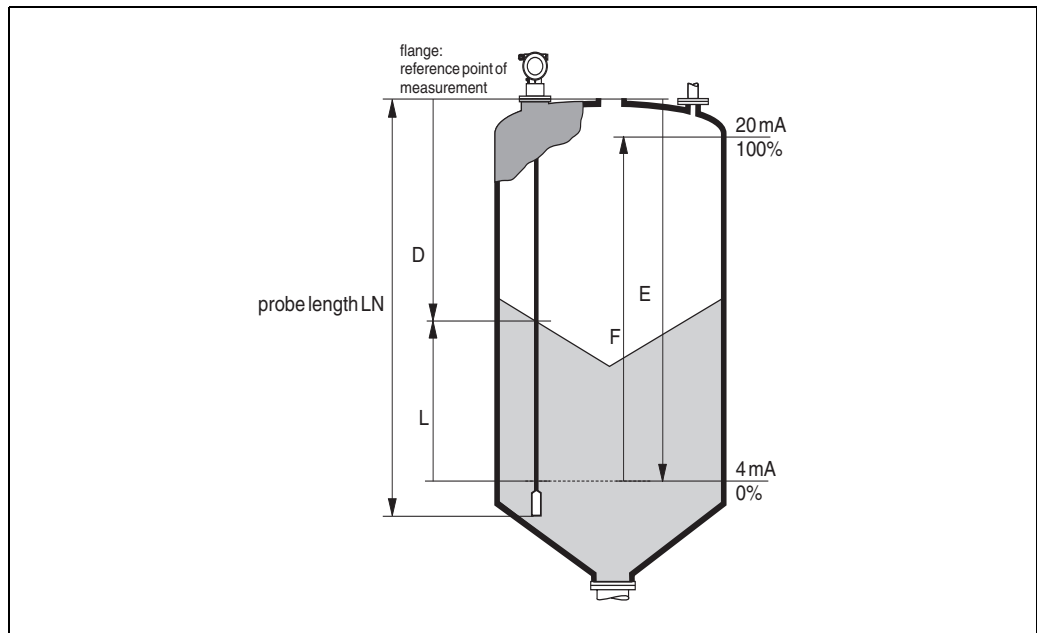

100-FMP4xxxx-15-00-00-en-002

Input

The reflected pulses are transmitted from the probe to the electronics. There, a microprocessor analyses the signals and identifies the level echo, which was generated by the reflection of the high-frequency pulses at the product surface. This clear signal finding benefits from the more than 30 years of experience with pulse time-of-flight procedures that have been integrated into the development of the PulseMaster® Software.

The distance D to the product surface is proportional to the time of flight t of the impulse:

$$D = c \cdot t/2,$$

with c being the speed of light.

Based on the known empty distance E , the level L is calculated:

$$L = E - D$$


Reference point for "E" see above diagram, Details → 53.

The Levelflex possesses functions for the interference echo suppression that can be activated by the user. They guarantee that interference echoes from e.g. internals and struts are not interpreted as level echoes.

11.3.2 Equipment architecture

Stand-alone

- Power supply directly from power line (4-wire) or from transmitter power supply unit (2-wire).
- Operation by on-site display or remote operation via HART protocol.

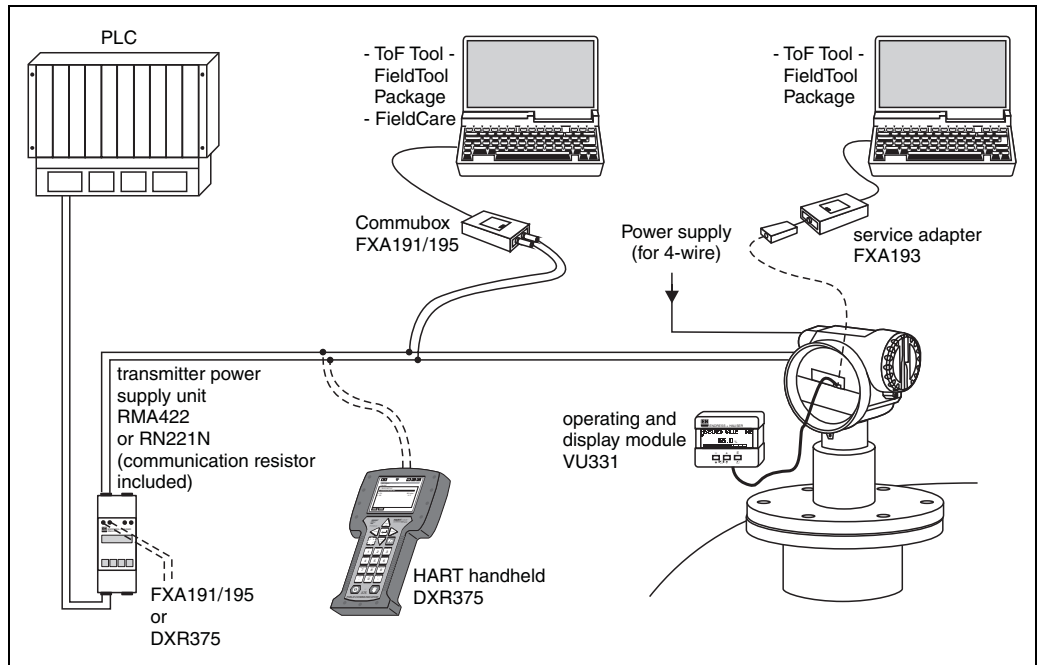

100-FMxxxxxx-14-00-06-en-008

If the HART communication resistor is not installed in the supply device and HART protocol communication is to be carried out, it is necessary to insert a $\geq 250 \Omega$ communication resistor into the 2-wire line.

On-site operation:

- with display and operating module VU331,
 - with a Personal Computer, FXA193 (RS232C) or FXA291 and ToF Adapter FXA291 (USB) and the operating software "ToF Tool - FieldTool Package" respectively "FieldCare".
- The ToF Tool is a graphical operating software for instruments from Endress+Hauser that operate based on the time-of-flight principle (radar, ultrasonic, guided micro-impulse). It assists with commissioning, securing data, signal analysis and documentation of the measuring point.

11.3.3 Patents

This product may be protected by at least one of the following patents. Further patents are pending.

- US 5,661,251 \cong EP 0 780 664
- US 5,827,985 \cong EP 0 780 664
- US 5,884,231 \cong EP 0 780 665
- US 5,973,637 \cong EP 0 928 974

Index

A

Accessories.....	75
Alarm.....	49
Application errors.....	84

B

Basic Setup.....	53, 55, 68
Blocking distance.....	63

C

CE mark.....	12
Commissioning.....	52
Commubox.....	40, 77
Commuwin II.....	40
Connecting.....	40

D

declaration of conformity.....	12
Degree of protection.....	41
Designated use.....	6
Determine length.....	58
Dimensions.....	15
Display.....	44
DXR 275.....	40
DXR 375.....	49

E

Empty calibration.....	59
End of probe.....	69
Engineering hints.....	26
Envelope curve.....	65, 72
Equipotential bonding.....	41
Error messages.....	49, 82
Exterior cleaning.....	74
Ex-Zulassung.....	8, 99

F

F12 housing.....	36
FHX40.....	79
Full calibration.....	59
FXA 191.....	40
FXA 193.....	40

H

HART.....	38, 40, 49
-----------	------------

I

Interference echo mapping.....	70
--------------------------------	----

K

Key assignment.....	45
key assignment.....	45

L

Lock.....	46
-----------	----

M

Maintenance.....	74
Mediengruppe.....	56
Medium properties.....	56, 68
Mounting.....	13

N

Nameplate.....	8
----------------	---

O

Operating menu.....	43
Operation.....	42, 46
Operational safety.....	6
Ordering structure.....	8

P

Probe.....	69
Probe length.....	69
Process properties.....	57, 68

R

Repairs.....	74
Repairs to Ex-approved devices.....	74
Replacement.....	74
Reset.....	48
Return.....	93
RMA 422.....	40
RN 221 N.....	40

S

Safety conventions and symbols.....	7
Service Interface FXA291.....	77
Software history.....	93
Spare parts.....	86, 89, 91
System error messages.....	82

T

T12 housing.....	37
Tank properties.....	68
Technical data.....	94
Terminal compartment.....	38
ToF Tool.....	40, 68, 72, 102
Trouble-shooting.....	81
Trouble-shooting instructions.....	81
Turn housing.....	35

U

Unlock parameter.....	47
-----------------------	----

V

VU 331.....	65
-------------	----

W

Warning.....	49
weather protection cover.....	75
Wiring.....	36

Declaration of Hazardous Material and De-Contamination

Erklärung zur Kontamination und Reinigung

RA No.

Please reference the Return Authorization Number (RA#), obtained from Endress+Hauser, on all paperwork and mark the RA# clearly on the outside of the box. If this procedure is not followed, it may result in the refusal of the package at our facility.

Bitte geben Sie die von E+H mitgeteilte Rücklieferungsnummer (RA#) auf allen Lieferpapieren an und vermerken Sie diese auch außen auf der Verpackung. Nichtbeachtung dieser Anweisung führt zur Ablehnung ihrer Lieferung.

Because of legal regulations and for the safety of our employees and operating equipment, we need the "Declaration of Hazardous Material and De-Contamination", with your signature, before your order can be handled. Please make absolutely sure to attach it to the outside of the packaging.

Aufgrund der gesetzlichen Vorschriften und zum Schutz unserer Mitarbeiter und Betriebseinrichtungen, benötigen wir die unterschriebene "Erklärung zur Kontamination und Reinigung", bevor Ihr Auftrag bearbeitet werden kann. Bringen Sie diese unbedingt außen an der Verpackung an.

Type of instrument / sensor

Geräte-/Sensortyp _____

Serial number

Seriennummer _____

Used as SIL device in a Safety Instrumented System / Einsatz als SIL Gerät in Schutzeinrichtungen

Process data / Prozessdaten

Temperature / Temperatur _____ [°F] _____ [°C] Pressure / Druck _____ [psi] _____ [Pa]
 Conductivity / Leitfähigkeit _____ [µS/cm] Viscosity / Viskosität _____ [cp] _____ [mm²/s]

Medium and warnings

Warnhinweise zum Medium



	Medium / concentration Medium / Konzentration	Identification CAS No.	flammable entzündlich	toxic giftig	corrosive ätzend	harmful/ irritant gesundheitsschädlich/ reizend	other * sonstiges*	harmless unbedenklich
Process medium Medium im Prozess								
Medium for process cleaning Medium zur Prozessreinigung								
Returned part cleaned with Medium zur Endreinigung								

* explosive; oxidising; dangerous for the environment; biological risk; radioactive

* explosiv; brandfördernd; umweltgefährlich; biogefährlich; radioaktiv

Please tick should one of the above be applicable, include safety data sheet and, if necessary, special handling instructions.

Zutreffendes ankreuzen; trifft einer der Warnhinweise zu, Sicherheitsdatenblatt und ggf. spezielle Handhabungsvorschriften beilegen.

Description of failure / Fehlerbeschreibung _____

Company data / Angaben zum Absender

Company / Firma _____	Phone number of contact person / Telefon-Nr. Ansprechpartner: _____
Address / Adresse _____	Fax / E-Mail _____
_____	Your order No. / Ihre Auftragsnr. _____

"We hereby certify that this declaration is filled out truthfully and completely to the best of our knowledge. We further certify that the returned parts have been carefully cleaned. To the best of our knowledge they are free of any residues in dangerous quantities."

"Wir bestätigen, die vorliegende Erklärung nach unserem besten Wissen wahrheitsgetreu und vollständig ausgefüllt zu haben. Wir bestätigen weiter, dass die zurückgesandten Teile sorgfältig gereinigt wurden und nach unserem besten Wissen frei von Rückständen in gefährlicher Menge sind."

(place, date / Ort, Datum)

Name, dept./Abt. (please print / bitte Druckschrift)

Signature / Unterschrift

www.endress.com/worldwide

Endress+Hauser 

People for Process Automation

